
Quick Start Guide

SIGITAL QC



Download

Go to https://digqc.sbcacomponents.com/

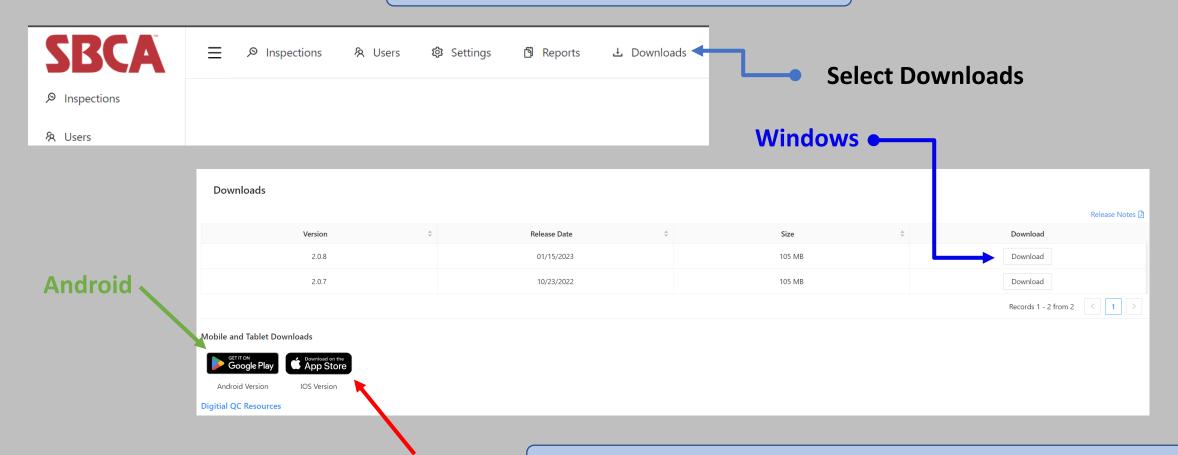


Apple

If there are multiple versions, please download the most recent one.



Signing In

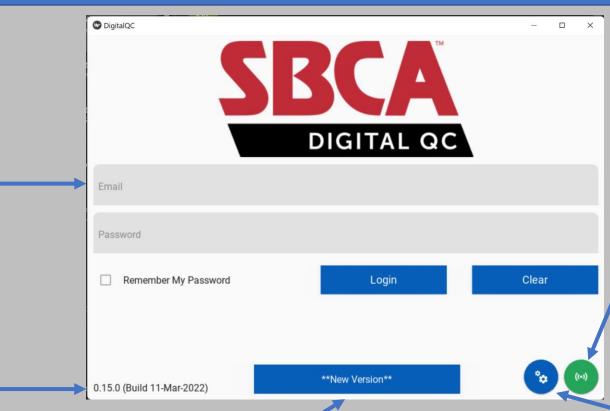

Connection Status

The device needs to be connected to the Internet to log in and upload inspections.

Software Version

User Login

Please make sure you are always running the most recent version.

New Version

When this box appears, that means a new version is available on the website. Clicking this box will open a browser to it directly.


Server Settings

Server URL, Local Storage Path, and Connectivity Check Frequency



Main Menu

- 1 Location Selection
- 2 Current Location
- 3 Inspection
- 4 Reports
- **5**Plate Inventory
- **6** Bug Report

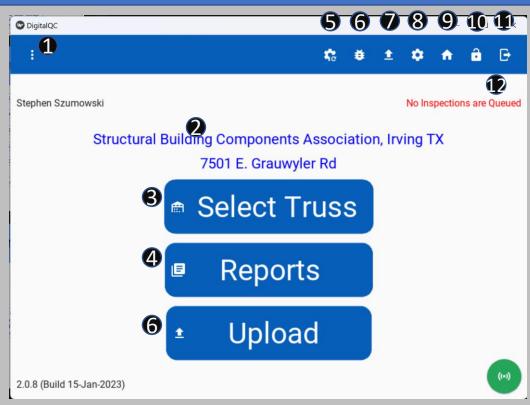

DUpload Inspections Queued

Application Settings

Server Homepage

• Reset Password

Logout


1 Inspection Queue

Software Version

Connection Status



Server Settings

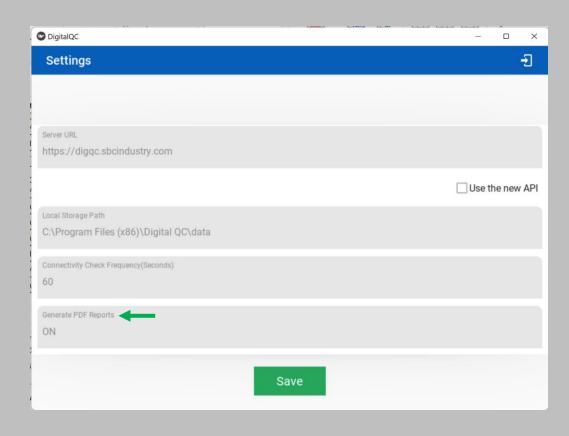

When an inspection is finalized, a PDF is created of the report. Should the device have issues, changing **Generate PDF Reports** to **OFF** will resolve this.



Application Settings


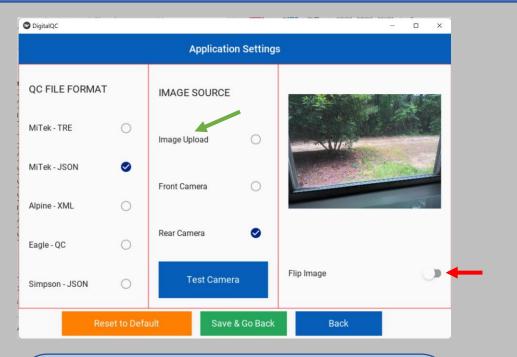



Image Upload is used when the device cannot take pictures directly and are transferred from another device. When the critical inspection is being performed, a dialog box will appear to select a photo.




The Flip Image toggle will mirror the camera, so what was on the left side will now be on the right, and vice versa.

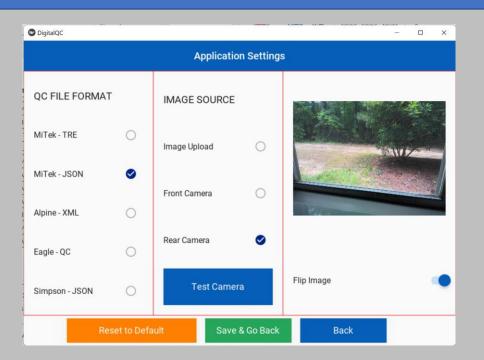


Navigation (Mouse)

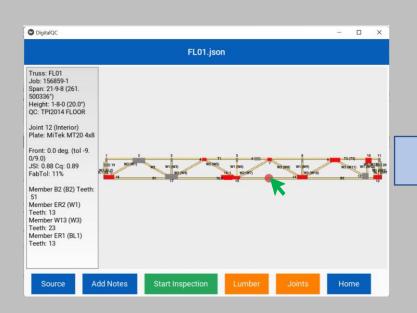

By Right Clicking on an object, you can create one point of contact similar to that of a touchscreen device.

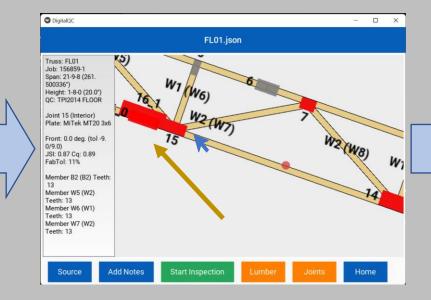


Left Clicking and dragging anywhere else on the photo will be the other point of contact, allowing you to rotate and zoom in.

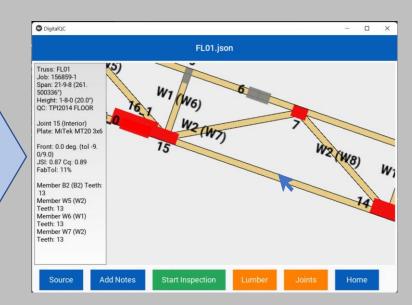


You can remove the Red Circle by Left Clicking on it.



Navigation (Touch)

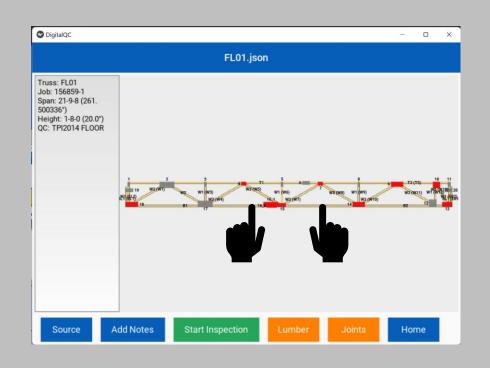



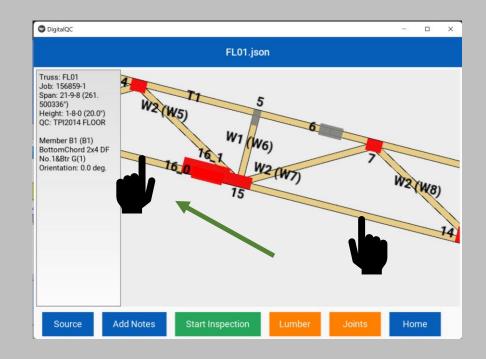

By touching two points on the object, you can rotate and zoom the picture by dragging your fingers across the screen. Referred to as Pinch Zoom, moving your fingers further away enlarges the object, and bringing them closer together shrinks it.



Inspection

Source


Choose how to submit photos.

Add Notes

Comments will only appear on the local PDF and not on the reports uploaded to the website.

Start the Inspection

Enter job and inspection details such as shift/crew, inspector, and span/height.

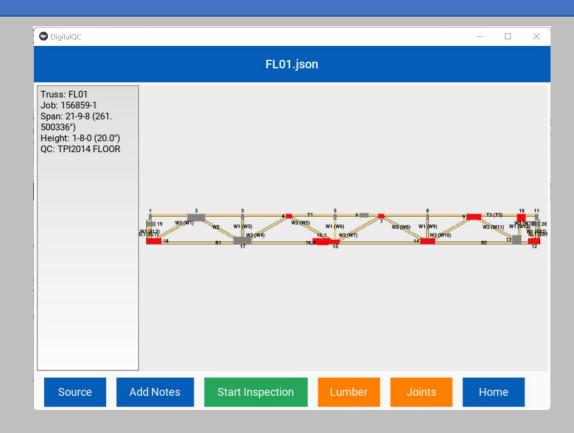

Lumber

Verify Lumber Specifications

Joints


Inspect the individual joints.

Home


Takes you back to the main screen. It will prompt to either Save or Delete the job.




Inspection (Joints)

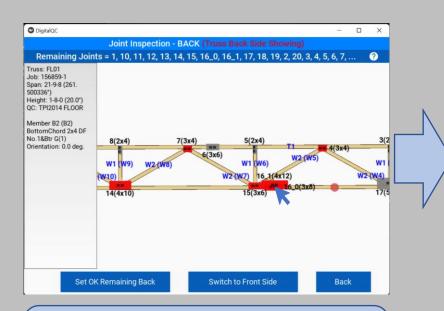

By Double Left Clicking on a joint, you will bring up the joint inspection.

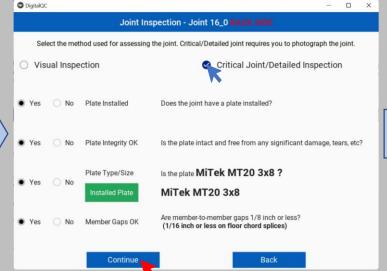

At the top, there are two tabs:
Visual Inspection
Critical Joint/Detailed Inspection

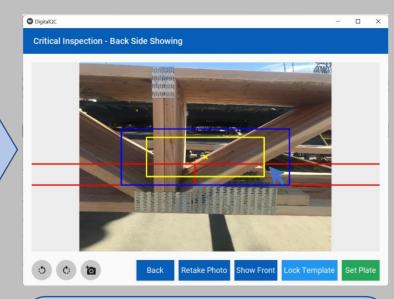

When you click Continue on a Critical Joint Inspection, you will be prompted to either take a photo or select one from your file directory.

You will need to use the information from the Navigation page to resize and angle the photo to ensure the plate is between the <u>Yellow</u> and <u>Blue</u> rectangles.



Additional Resources

For more assistance, please check out <u>Digital QC Resources</u>

For any questions, comments, or errors, please email qc@sbcacomponents.com

Reporting Errors: When an error occurs, the application will prompt an option to report the error. Enter comments and select a location to save the file. Once the file is created, please upload it to the form.