

C & D

DRINKING WATER



CERTIFICATION

REVIEW MANUAL

Drinking Water C & D Level Certification Review



Presented by
Ben Lewis
FRWA Water Trainer

Florida Rural Water Association
2970 Wellington Circle
Tallahassee, FL 32309
(850) 668-2746
Email: Ben.Lewis@frwa.net

1

How to Improve Your Score on the Operator Certification Exam

*Test Preparation Strategies
for Success on the WTP Exam*



1st – Prepare for the Test You are Taking

You won't panic...

if you have a plan and are prepared

- Target those areas of study on your test
- Set priorities
 - What are the subjects where I am weak?
 - Study most important subjects first!
 - Know the Math presented by FRWA !!
- Improve Study Habits!
 - Set up a Schedule that aligns with your test date
 - Use the Taylor Tutorial !!!
 - Stick to a Study Schedule !



2nd – Set a Reasonable Study Schedule

- Set a Test Date close to the FRWA training
- Then set a Schedule that is realistic for YOU!
- Study early that aligns with your test date
- Study in short spread-out sessions according to a plan that includes FRWA handouts
- Begin each session with quick review of previous material
 - Use the Study materials provided by FRWA !
 - Something in this Course will help you answer every question !



3rd – Build your Memory

- Long-term memory is a powerful tool
- It is Formed by the process of creating connections, reinforcing the same connections and expanding strength by forming meaningful associations or secondary connections
- In other words,
 - ✓ if a pathways are **FORMED**,
 - ✓ and you **USE** them, and
 - ✓ you **REPEAT** them,
 - ✓ You'll **REMEMBER** the information !



Prepare Physically & Mentally for Exam Day

My To Do List:

1. Get Ready for Test
2. Get Ready for Test
3. Get Ready for Test
4. Repeat #s 1 - 3



Focus =



Mental Preparedness

+

Physical Preparedness

Be Comfortable

- Breakfast is mandatory and includes protein:
 - eggs, bacon, peanut butter, cheese, (Brain Food !)
- Drink plenty of fluids
- Wear comfortable clothes & shoes
- Test Calculator operation
- **Get Some new Pencils**
- **Be Early !!!!**



Have a Positive Mental Attitude

- Confidence and positive attitude are very important in test taking as in anything we do that is challenging .
- **Confidence is something that can be built by reinforcing fundamentals.**


"Ninety Percent of this game is half mental."

Yogi Berra




During the Exam

- Stay Comfortable and Focused
- Stretch during test
- Take Deep Breathes
- Stop Occasionally to rest
- Don't drink lots of coffee if you didn't do so when you were studying
- Avoid Sugar



Approaching Tests Systematically

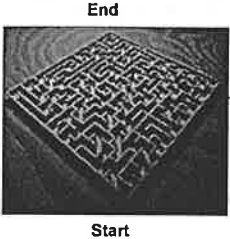


1. Nail What you know.
2. Do the ones where you can eliminate
3. Record the ones you were not so sure on ¹⁰

Beginning the Test


The test is not a race!
You have plenty of time to finish!
No need to Rush !
Use Effective Strategies!

Do not Rush

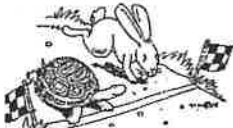

Before Starting the Test

- ✓ Read ALL directions
- ✓ Scan the questions
 - Get a sense of the nature of questions
 - Think of the questions as several *small* jobs, not one big, overwhelming test
- ✓ Map out your time (3-hrs)
 - How much time per question?
 - Keep schedule flexible
- ✓ Use your Scratch Pad
 - Keep track of thoughts and questions
 - Take notes & jot things down



Plan of Attack

1 FIRST SWEEP

- Read each question in order, answering the ones that you know easily in your first reading,
- Save harder questions for later,
- When you get to the end of the test, pause, relax, stretch, close your eyes and clear your mind for a minute or two; then begin again.

13

Read the Questions !

- Read Questions Methodically and Carefully
- Most frequent problem -- question not completely read, misread or misunderstood
- "NOT" is the most commonly misread word.
- Reread the question several times to make sure you are answering the right question

RTQ x2

14

Plan of Attack

2 SECOND SWEEP

- Begin your "second sweep"
 - work on the questions that you can answer with a little thought,
- Save the really tough ones for last,
- Reread the questions that you were not able to answer the first time.
- NEVER GUESS ! Answer all questions using something that you know or think you may know about it !

15

Plan of Attack

3 THIRD SWEEP

- Answer hardest questions last,
- After you have answered all questions, if you have time, you can skim all the questions and answers one last time.
- Don't change an answer unless you have found additional clues or misread the question the first time
 - Most changed answers are not as good as the original ones

16

Plan of Attack

4

FOURTH and FINAL SWEEP

- Re-read Each question and answer!
- After you have answered all questions, use your time to re-read all the questions and answers to identify a few obvious mistakes: 1.) keyed in the wrong letter, 2.) missed a "not" or read a "maximum" as a "minimum", 3.) did not bother to read all the answers given and there was a better answer and, 4.) found a math error!

17



Strategies for Conquering Multiple Choice Questions

18

Multiple Choice Mastery is in the Numbers

- Never Leave Blank !!!
- State the answer then;
 - Find the best match !
- If you can't match then Eliminate Distracters
i.e., Cross out the Wrong answers
- Use the question clues
to find the best answer
- Always favor the one
that you remember about
subject matter

1 of 4 = 25%
1 of 3 = 33%
1 of 2 = 50%



19



Study by Stating the Answer, i.e., as if, it's not Multiple Choice

- Read the question only,
 - covering up the answer choices,
 - see if you already KNOW the answer.
- Always predict the answer first
- Then, read ALL of the answer choices
- Find the best match of the choices

20



Using Prediction with Multiple Choice

- If your prediction isn't one of the choices, reread the question
 - you may have misunderstood the question
 - You may have misread the question
- Double check your answer by going back to the question again for clues

21

Eliminating Multiple Answers increases your Odds

- ALWAYS ! Cross out those answers that are obviously wrong to get it down to two.
- If more than one choice seems true, then one of them doesn't answer the specific question or is not as complete
- Reread the question to see which answer is best

When you eliminate wrong answers, your chances for success increase dramatically!!

22

Opposite Answers Increase Your Odds

- If two answers are opposites, one is often the correct answer
- Some answers are partially true
 - If any part of the answer is false, eliminate it
- Rephrase the question: "In other words, what I'm looking for is..."

Tests are a perfect time to talk to yourself, but not too loudly.

23

Beware of Negatives

- If a negative such as "NONE", "NOT", "NEVER", or "NEITHER" occurs in the question then you're looking for a "catch".
- Read these carefully and be positive you understand the question.
- There will be an answer that matches even if your thinking is backwards.



24

Recognize Absolutes

- Words such as "EVERY", "ALL", "NONE", "ALWAYS", and "ONLY" are superlatives that usually indicate a bad choice.

"If the world were perfect, I wouldn't be here" Yogi Berra



Recognize Qualifiers

- "USUALLY", "OFTEN", "GENERALLY", "MAY", and "SELDOM" are qualifiers that usually indicate a true statement or a good answer.



Rely on Initial Logic

- Research shows that initial logic is often the best but:
 - ✓ Did you properly read the question?
 - And then:
 - ✓ Is the revision **based on new clues?**
- If you cannot figure out the answer by rereading the question and using these strategies within a few minutes
 - ✓ go with the initial logic used

27

Solution to Two Possible Answers

- Ask how the two answers differ (just the answers, ignore the question), then look at the question again and ask yourself "How is this difference important for this question?"
- If you really think there's absolutely no difference between the two answers, then look again at the answers you've eliminated, maybe one of them is actually a better answer.



House Wins 28

Scratch Paper is your Friend

- Helps you focus and ignore distractions
- Helps to Simplify Difficult concepts
- Helps you remember the questions that were difficult to answer and records their location (#) for your "second sweep".
- Helps to record information that you are sure you will need but might forget in other parts of the test.



SUMMARY

How to Do Well on Exams

- Devise a plan
- Set a study schedule for FRWA materials
- Build long-term memory using repetition
- Be physically well as you can be
- Avoid stress and outside distractions
- Prepare the night before the test
- Have a good breakfast
- Drink plenty of fluids
- Wear comfortable clothes & shoes
- **SHOW UP EARLY**



SUMMARY

How to Score Higher on Exams

- Be calm, confident and focused
- Have a positive mental attitude
- Bring pencils & calculator
- Scan the test and plan your attack
- First Sweep - answer easy questions
- Second Sweep - work on harder questions
- Third Sweep - answer hardest questions last
- Final Sweep - review and find "obvious errors and catches"

Measure Twice.

Cut Once.

✓ Read questions carefully & twice

✓ Read Twice; Answer Once

31

SUMMARY

How to Do Well on Exams

- Last Sweep - after you have answered all questions, if you have time, you can skim all the questions and answers one last time
- Don't change an answer unless you have a good reason to change it!



32

SUMMARY

How to Do Well on Exams

- Multiple Choice Questions
 - ✓ Predict the answer
 - ✓ Eliminate distracters to improve odds
 - ✓ Use the question to find the answer
 - ✓ Always Use things you know
- Beware of...
 - ✓ Negatives – “none” “not” “never” or “neither”
 - ✓ Absolutes – “every” “all” “always” and “only”
- Might indicate a true statements...
 - ✓ “usually” “often” “generally” “may” and “seldom”



33

You are Ready

Lets do the FRWA Review

34

Computer Based Examinations

1

Overview

Drinking Water and domestic Wastewater Treatment Plant Operator Examinations

- Composed of four levels – Class A, B, C, and D
- Class A, B, and C
 - Time allocated is three hours
 - 100 multiple choice questions
- Class D
 - Time allocated is two hours
 - 50 multiple choice questions

Water Distribution System Operator Examinations

- Composed of four levels – Class 1, 2, 3, and 4
 - Time allocated is two hours
 - 50 multiple choice questions

2

Examination Process

- Submit application to DEP for review and approval
- Notified of approval in writing and given testing location
- Go to the following web site for an examination request form and the location/dates where exams are given:
<http://www.dep.state.fl.us/water/wff/ocp/index.htm>

3

What to Bring and what not to Bring to the Examination Site

- What to Bring
 - Two forms of identification
 - Only keys and wallets are allowed
 - Only calculators that are silent, hand-held, non-printing, non-programmable, no RAM, and no alphabetical key pads are allowed.
- What not to Bring
 - Cameras, recorders or cell phones
 - No personal items
 - No pencils or scratch paper (to be provided)

4

Examination Scores

- Candidates will receive an on-site score report
- Minimum passing score is 70%
- Candidates that fail to achieve a passing score must wait at least 60 calendar days before they will be permitted to retake their exam

5

W
T
P

C
l
a
s
s

C

Content Area	Weight
1 Aeration	2
2 Characteristics of Source Water	1
3 Coagulation/Flocculation	9
4 Laboratory Sampling, Analysis, and Interpretation	7
5 Chemical Control	3
6 Disinfection	9
7 Distribution	3
8 Evaluate Equipment	1
9 Filtration	7
10 Iron and Manganese Control	2
11 Clarification/Sedimentation	5
12 Facility Operation and Maintenance	3
13 Odor and Taste Control	2
14 Operate Equipment	3
15 Regulations	3
16 Remove and Well Field Management	2
17 Perform Safety and Security Procedures	2
18 Sanitation	10
19 Disinfection and Disinfectant Byproducts	3
20 Waste Handling and Disposal	3
21 Water Process	7
22 Monitor Equipment	2
23 Math	6
24 Demineralization	1

W
T
P

C
l
a
s
s

D



Content Area	Weight
1 Maintain equipment	4
2 Chemical treatment and analysis	4
3 Plant Operation	30
4 Regulations	8
5 Reporting Requirements	2
6 Perform Safety and Security Requirements	2

7


Good Luck!

8

Introduction to Water Treatment

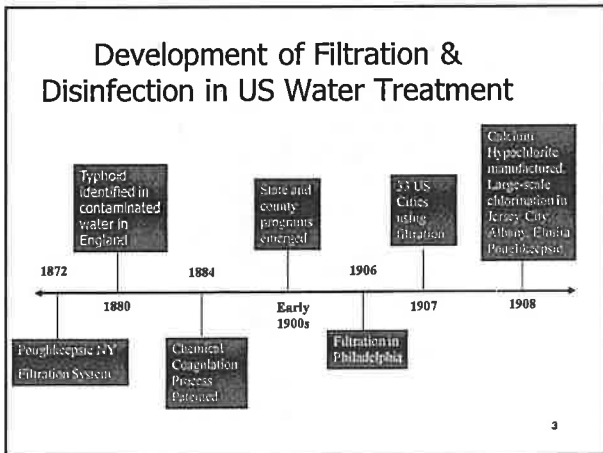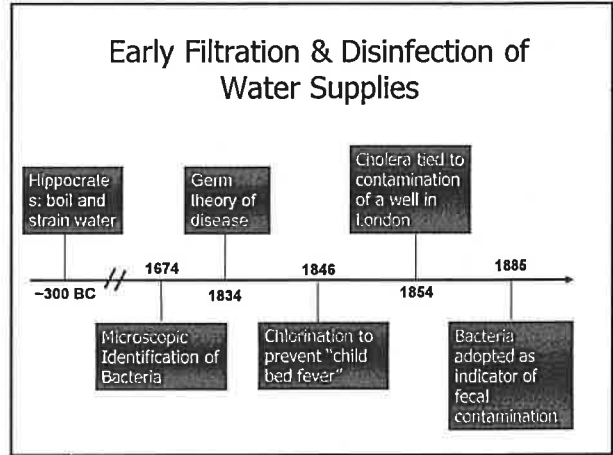

- ### Early US Treatment Techniques for Bacterial Inactivation
- Slow Sand Filtration (no backwash)
 - Large filter beds with relatively slow filtration rates that strain out particles
 - Particles are removed by sieving and organic action
 - Disinfection
 - Chlorine added to drinking water in very small concentrations
 - By late 1920's eliminated Cholera and Typhoid

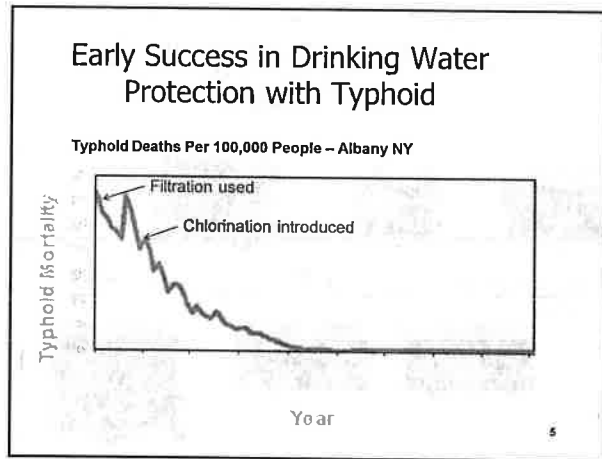

- ### Water Borne Illnesses of Concern
- Cholera
 - Dysentery
 - Gastroenteritis
 - Giardiasis
 - Hepatitis
 - Typhoid
- 6

- ### Drinking Water Health Concerns Resulting from Cultural Changes in US
- Urbanization
 - Discharge from septic tanks, storm and sanitary sewers
 - Industrialization
 - Discharges of metals and chemicals
 - Production of nuclear material
 - Intensive Farming and Agriculture
 - Pesticide and fertilizer use
 - Feedlots and meat production
- 7

Types of Contaminants, Some Examples and Sources

Contaminant	Examples	Source
Microbial Contaminants	Cryptosporidium, E. coli, hepatitis	Sewage treatment plants, septic systems, agricultural livestock operations, and wildlife
Inorganic Chemical Contaminants	Iron, Copper, Fluoride, Lead	Naturally occurring or result from urban stormwater runoff, industrial or domestic wastewater discharges, soil and gas production and mining or farming
Disinfectants	Chlorine, Chloramine	Water additive for inactivating microbial contaminants
Disinfection Byproducts	Trihalomethanes, haloacetic acid	Byproduct of drinking water disinfection
Organic Chemical Contaminants	Pesticides and Herbicides, Benzene, Toluene	Agriculture, stormwater runoff, byproducts of industrial processes and petroleum production, gas stations, urban stormwater runoff, and septic systems
Radioactive Contaminants	Radium, Uranium	Naturally occurring or result from oil and gas production and mining activities





8

Modern Water Treatment


Filtration	Chlorination
<ul style="list-style-type: none">■ Surface Water contains organisms■ Turbidity is representative of quality■ Graded sand provides effective removal	<ul style="list-style-type: none">■ Cl is a very strong Oxidant that destroys integrity of Bacterial Cell Wall■ Highly effective for low turbidity water■ Residual provides evidence for continued effectiveness

9

Multiple Barrier Approach

 Risk Prevention: Source Selection and Protection	 Risk Management: Treatment Methods and Efficiencies
 Monitoring and Compliance: Detecting and Fixing Problems	 Individual Action: Consumer Awareness and Participation

10




Your Role as an Operator

- Responsible for the operation of the water system
- First priority is to ensure water is free from harmful bacteria and toxic materials
- Correction of any problems that make the water unsafe
- Monitoring the water for contamination
- Adherence to state and federal rules and regulations that apply to the water treatment aspect of providing water to the public

11

The Safe Drinking Water Act

1

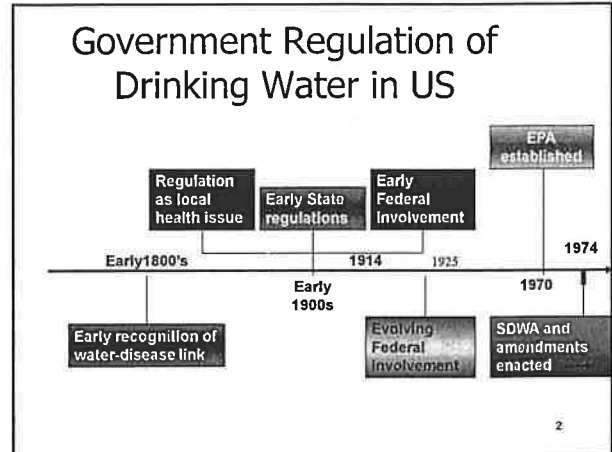

- ## Safe Drinking Water Act 1974
- Impetus for passage
 - Increased concern and awareness
 - Inconsistent State Requirements
 - Development of Standards
 - Scientifically Based on Health Impacts
 - National Enforceable Standards
 - Required Water Systems to Monitor to Ensure Compliance
 - SDWA enacted – December 16, 1974
- 3

- ## Safe Drinking Water Act Contents
- EPA established National Primary (Enforceable) and Secondary Drinking Water Standards (Recommended)
 - Regulations use a multi-barrier approach.
 - Establishes a public water system supervision program (PWSS), based on the level of risk posed to the public.
 - Provide for State implementation and enforcement
 - Requires Licensed Operators
- 4

Safe Drinking Water Act

- Gave EPA authority to set drinking water standards in Three Ways:
 - Maximum Contaminant Level Goal (MCLG) (**Secondary Standards**) Note: all are MCLs in Florida!
 - Maximum Contaminant Level (MCL) or numeric standards (**Primary Standards**)
 - Provided for Treatment Techniques (TT) for Surface Water Plants

5

SDWA Contaminant Monitoring

- Chemicals (Inorganic)
- Pesticides (Organic)
- Bacteria and Viruses (Micro-organisms)
- Radioactivity
- Turbidity
- Trihalomethanes (Disinfection By-products)

6

1986 SDWA Additions

- PWS system revised; Created the NTNC category of water system
- Organic Chemical Monitoring and Detection Added (led to detection of previously unidentified microbial problems)
- Tightened Requirements for Surface Water Treatment
 - provided for Higher Filtered Water Standards (lower NTU requirements)
 - Disinfectant CT calculations for Giardia (Birds) and Viral Inactivation

7

State and Federal Regulations

- Multiple Barriers Regulated:
- Plans and Specifications for Water Systems after 350 customers
 - Plans and Specs
 - Facility Locations
 - EMP
 - Backup Generation
- Sanitary Surveys Required
- Training for Operators Required

8

Effects of 1986 Amendments (continued)

- Ground water under the direct influence (GWUDI) must meet Surface Water Standards (Microscopic Particle Analysis)
- More stringent coliform monitoring requirements added for all PWS
- Lead/Copper and Corrosion Monitoring
- Public Notification for CWS (Tier 1, 2 & 3)
 - Tier 1: violations, exceedances, and failures posing an acute health risk; Public notice NLT 24 hours after learning of problem
 - Tier 2: violations of a non-acute MCL or TT; Public notice NLT 30 days after learning of problem
 - Tier 3: other violations, variances or exemptions; Public notice within 3 months after learning of problem

9

Public Water System (PWS) Designations


10

Public Water System (PWS)

A public water system (PWS) is defined by the Safe Drinking Water Act (SDWA) as “a system for the provision to the public of water for human consumption through pipes or other constructed conveyances, if such system has at least fifteen service connections, or regularly serves at least twenty-five individuals at least 60 days out of the year.”

11

Regulatory Distinctions Between Water Systems

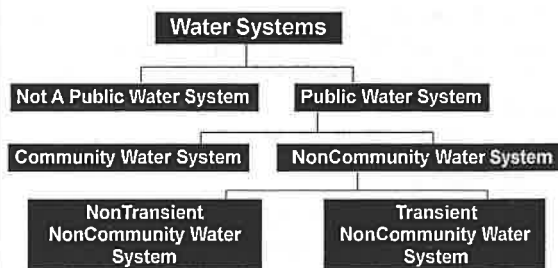

12

Community Water System (CWS)

- A public water system that serves at least 15 service connections used by year-round residents or regularly serves at least 25 year-round residents.
- Serves people where they live.
- Exposure to contaminants could be lifetime.

13

Noncommunity Water System (NCWS)

- A public water system that is not a community water system.
- There are two types of non-community systems (based on the length of exposure of the consumers to the water): transient and non-transient.

14

Non-transient Non-Community Water System (NTNCWS)

- A public water system that is not a community water system but that regularly serves at least 25 of the same persons over 6 months of the year.
- e.g., schools or businesses with their own water system
- Exposure to contaminants could be similar to that for community water systems.

15

Transient Non-Community Water System (TNCWS)

- A noncommunity water system that does not regularly serve at least 25 of the same individuals at least 6 months per year.
- e.g., rest areas, campgrounds, truck stops, visitor centers with their own water system
- Individual exposure to the water is very short-term.

16

Specific Rules and Regulations of the Safe Drinking Water Act

17

Current SDWA Regulations

- Total Trihalomethanes (TTHMs and HAA5s)
- Chemical Rules (Phases I, II, IIB, and V)
- Surface Water Treatment Rule (Turbidity Control)
- Total Coliform Rule (Monitoring Based on Population)
- Lead and Copper Rule (Action Levels Established)
- Stage 1 D/DBP Rule (DBP Monitoring)
- Interim Enhanced SWTR (CT and Disinfection Profiles)
- Radionuclides
- Consumer Confidence Report Rule
- Arsenic
- Filter Backwash Recycling Rule
- Long Term 1 Enhanced Surface Water Treatment Rule

18

Total Trihalomethanes (TTHM) and Haloacetic Acids (HAA5s)

- Disinfection By-Products are Trihalomethanes and Haloacetic Acids. They are the by-products of disinfectants that combine with organic materials in the water
- Standard applies to CWS' and NTNCS' that use a disinfectant
- TTHM < 80 PPB or .08 mg/l and HAA5 < 60 PPB or .06mg/l based on RAA (Rolling Annual Average)

19

Chemical Contaminants

- Regulations cover 72 drinking water contaminants, most of which are carcinogens
- Applies to CWSs and NTNCWSs
- Contaminants cover three types:
 - Inorganic chemicals (metals)
 - Volatile organic chemicals (Solvents)
 - Synthetic organic chemicals (Chlorinated Hydrocarbons such as herbicides and pesticides)

20

Inorganic Contaminants

Chemical	Probable Source	Health Effect
Aluminum	Coagulation	Dialysis Dementia
Arsenic	Dissolution of Rock	Gastrointestinal, Cardiac
Asbestos	Dissolution of Rock and As pipeline	Gastric, kidney, pancreatic cancer
Barium	Industrial Release	Hypertension
Cadmium	Industrial Release	Testicular, prostrate tumors
Chromium	Industrial Release	Liver and kidney damage

21

Inorganic Contaminants (cont.)

Chemical	Probable Source	Health Effect
Molybdenum	Industrial Discharge	Bone loss, infertility
Nickel	Industrial Discharge	Possible carcinogen
Nitrate/Nitrite	Agriculture and Urban septic tanks	Methemoglobin, possible carcinogen
Selenium	Industrial Discharge	Liver, fatigue, diarrhea
Sodium	Water Softeners	Hypertension
Sulfate	Natural Waters	Laxative Effects
Zinc	Corrosion	Muscular weakness, pain, nausea

22

Volatile (evaporative) Organic Compounds

#	Contaminant	Constituents	Probable Source
1.	Petroleum or Petroleum additives	Benzene, Toluene and Xylenes	Leaky fuel tanks (also MBTE)
2.	Halogenated VOCs	Dichlorobenzene, Dichloroethane, Dichloroethylene, Tetrachloroethylene (PCE), Trichloroethylene (TCE)	Degreaser and solvent disposal, former use as Septic Tank cleaners (low odor thresholds)
3.	Chlorinated Disinfection by-products	Trihalomethanes	Industrial discharge

23

Synthetic Organic (Pesticides) Contaminants

#	Contaminant	Constituents	Probable Source
1.	Insecticides	<ul style="list-style-type: none"> ■ DDT, DDE, DDE. ■ Carbamates, i.e. Aldicarb, Carbofuran, Oxamyl, Dieldrin. ■ Organophosphates, i.e. Diazinon 	Agricultural
2.	Herbicides	Alachlor, Atrazine, Cyanazine, Dachal, Dicamba, 2,4,D, Picloram, Microprop	Agriculture, Picloram is used in ROWs; Mecoprop is used on lawns
3.	Fungicides	1,2-Dichloropropane, Ethylene Thiourea (ETU)	Agriculture

24

Surface Water Treatment Rule

- Applies to systems that use surface water (including GWUDI)
- Sets MCLGs for Legionella, Giardia, and Viruses at zero due to their health risk
 - Establishes treatment techniques for these contaminants because identification is not feasible
- Requires Disinfection and Filtration (adequacy of filtration is measured by turbidity)
- Establishes monitoring requirements for turbidity and disinfectant residuals

25

Total Coliform Rule (TCR) of 1989



Purpose: "To protect public health by ensuring the integrity of the drinking water distribution system and monitoring for the presence of microbial contamination."

- All Public Systems must monitor
- Promulgated to decrease the risk of waterborne illness
- Corrective measures based on detection
- Required public notice based only on the presence of total coliforms
- Coliform group used because disease-producing organisms are NOT easily isolated and identified.

26

TCR (continued)

The TCR applies to **all** public water systems



Community Water Systems



Non-Transient Water Systems



Transient, Non-Community Water Systems


27

Bacteria that cause Disease (Human and Animal Feces)

Type of Bacteria	Disease
Salmonella (Typhi, Paratyphi, other sp.)	Typhoid, Paratyphoid, Gastroenteritis
Shigella	Dysentery
Vibrio cholerae	Cholera
E. coli 0157:H7	Gastroenteritis
Yersinia enterocolitica	Gastroenteritis
Helicobacter Pylori	Peptic Ulcer

28

Lead and Copper Rule Basic Requirements



- Provide optimal corrosion treatment
- Determine tap water lead and copper levels
- Rule out Source Water as the problem
- When levels are exceeded notify the public of the dangers and perform corrective actions

29

Stage 1 D/DBP Rule

- Limits TTHMs and HAA5s in drinking water
- Establishes treatment performance standards for filtration, enhanced coagulation and softening
- Applies to all NTNCWS and CWS's
- Requires systems to sample for Disinfectant Residuals and Disinfection By-Products
- Number of Samples based on source and system size

30

Stage 2 D/DBP Rule

- Requires Monitoring Plan when Stage 1 > 60 PPM TTHM and/or > 40 PPM HAA5
- Must Submit Monitoring Plan or Apply for exemption
- Multiple locations depending on source and size different than Stage 1 D/DBP Sites

31


Interim and Long Term Enhanced Surface Water Treatment Rule (IESWTR) and (LTESWTR)

- Optimize existing conventional treatment systems for pathogen removal
- Requires disinfection profiling and benchmarking
- Requires filter profiles, filter self-assessments and comprehensive performance evaluations
- Applies to all surface water and GWUDI source waters according to size

32


Radiological Contaminants

Types of Radiation	Description
Alpha Radiation (massive ingestion can damage cells)	Large positively charged particles made up of two protons and two neutrons
Beta Radiation (smaller size with less damage to organs)	Electrons or positrons.
Gamma Radiation (min. effect at small levels)	Electromagnetic or wave energy such as X-rays



33

Consumer Confidence Reports



- Required Annually all CWS
- Easy-to-understand explanations of drinking water standards and health effects
- Information on the quality of the water system's source and monitoring results
- Health effects information on any contaminant in violation of an EPA health standard

34

Filter Backwash Recycling Rule

- Applies to all public water systems that:
 - Use surface water or GWUDI plants
 - Utilize direct or conventional filtration
 - Recycle backwash water
- To control microbiological contaminants in plant recycling streams; reduce risk to public
- Requires increased monitoring
 - filter backwash frequency
 - loading rates

35

Operator Certification Requirement

<p>EPA Role</p> <ul style="list-style-type: none"> ■ Publish operator certification and recertification guidelines <ul style="list-style-type: none"> - Specify minimum standards for State programs - Apply to CWSs and NTNCWSs 	<p>State Role</p> <ul style="list-style-type: none"> ■ Determine appropriate experience, education and training requirements ■ Certify operators
---	---

36

State of Florida
Drinking Water Rules

1

- Florida Drinking Water Rules are found in
Florida Administrative Code (FAC)
- "Florida Drinking Water Rules" Updated each Year by DEP
 - DEP also updates Forms each Year
 - Can be obtained from DEP or at FRWA, annual Focus on Change presentation hosted around the state beginning in February each year.
- 2

Florida Administrative Code and
adoption of CFR 40 Federal
Regulations
Rule Coverage and Requirements

Which F.A.C.
regulates
recordkeeping?
62-550.720

Florida Administrative Code -- Only In FL

- 62-550 FAC
Drinking Water Standards, Monitoring and Reporting
- 40 CFR 141, Subpart H, 7/1/03,
Filtration and Disinfection
- 40 CFR 141, Subpart I, 7/1/02,
Control of Lead and Copper in Drinking Water
- 40 CFR 141, Subpart L, 1/16/01
Disinfection Residuals, Byproducts and Precursors

3

- Florida Administrative Code and Adoption of
CFR 40 Federal Regulations
Rule Coverage and Requirements
- 40 CFR 141, Subpart O, 12/09/02
Consumer Confidence Reports
 - 40 CFR 141, Subpart P, 7/1/03,
Enhanced Filtration and Disinfection serving 10,000 people or more
 - 40 CFR 141, Subpart T, 7/1/03,
Enhanced Filtration and Disinfection serving less than 10,000 people
 - 62-555 FAC
Permitting, Construction, Operation and Maintenance of Public Water Systems
- 4

Florida Administrative Code and adoption of CFR 40
Federal Regulations
Rule Coverage and Requirements

- 62-560 FAC
- Requirements of Public Water systems that are out of Compliance
- 62-699 FAC
- Treatment Plant Classification and Staffing
- 62-602 FAC
- Drinking Water and Domestic Wastewater Treatment Plant Operators
- 62-532 FAC
- Well Permitting and Construction Requirements

5

When do secondary standards need to be included in the CCR?

When they exceed the MCL



Monitoring and Reporting
Excerpts from 62-550 FAC

6

Purpose of Monitoring

- Detect potential problems
- Inform the public of dangerous conditions
- Verify compliance
- Collect data on emerging contaminants of concern
- Determine program effectiveness

7

Monitoring Points

- Beginning of Process (Ambient monitoring)
- Within treatment processes
- End of treatment processes and distribution system

8

Parameters Monitored

- Chemical
 - Mostly numeric standards for contaminants or other parameters
- Physical
 - Numeric (flow, temperature, turbidity or narrative (objectionable color, taste)
- Biological
 - Presence (total coliform, fecal coliform)
- Radiological
 - Presence (gross alpha monitoring)

9

Florida Primary and Secondary Drinking Water Standards and Other Regulated Parameters

10

Florida Regulated Contaminants

Florida Rule CH 62-550	Coverage Area
Table 1	MCLs for Inorganic Compounds
Table 2	Maximum Residual Disinfectant Levels
Table 4	MCLs for Volatile Organic Contaminants
Table 5	MCLs for Synthetic Organic Contaminants
Table 6	Secondary Drinking Water Standards
Table 7	Monitoring Frequencies and Locations
Table 8	Initial and Routine Monitoring Schedule

11

SDWA Current Number of Regulated Contaminants by Category

Inorganic (IOC's)	17
Volatile Organic Contaminants (VOC's)	21
Synthetic Organic Contaminants (SOC's)	30
Radionuclides (RAD's)	4

12

Some Common Inorganic Contaminants and their Maximum Contaminant Levels (MCLs)

Contaminant	MCL (mg/l)
Arsenic	0.010
Asbestos	7 (MFL) Million fibers per liter
Fluoride	4.0 2.0 in FL
Mercury	0.002
Nickel	0.1
Nitrate	10
Nitrite	1
Total Nitrate+Nitrite	10
Sodium	160

Discovered by Dr Black at UF

13

Some Regulated Volatile and Synthetic Compounds

Select Volatile	MCL	Select Synthetic	MCL
Trichloroethylene (TCE)	.003	Alachlor	.002
Vinyl Chloride	.001	Diquat	.002
Trichloroethane	.2	EDB	.00002
Benzene	.001	Heptachlor	.0004

Removed by aeration

14

Chlorine Residuals

Contaminant	MCL in FL MRDL (mg/l)
Chlorine	4.0 (as Cl ₂)
Chloramines	4.0 (as Cl ₂)
Chlorine Dioxide	0.80 (as ClO ₂)

NH₂Cl + TOC = no DBPs

15

Secondary Regulated Contaminants (applies to CWS)

Contaminant	MCL (mg/l)
Chloride	250
Sulfate	250
TDS	500
Copper	1.0
Fluoride	2.0
Iron	0.30 > .30 causes red water
Manganese	0.05
Silver	0.1
pH	6.5 to 8.5
Color	15 cu

Corrosive

Scale

16

Maximum Contaminant Levels
for Disinfection Byproducts



<u>Contaminant</u>	<u>MCL (mg/l)</u>
Total Trihalomethanes	0.08
Haloacetic Acids (Five)	0.06
Bromate	0.010
Chlorite	1.0

17

Monitoring
and
Reporting

18

Initial and Routine Monitoring for CWS & NTNCWS

<u>Parameter</u>	<u>Frequency/Application</u>
Asbestos	Every 9 Yrs
Nitrate/Nitrite	GW: Yearly Subpart H: Quarterly
Microbiological	Monthly Multiple Locations
CL and NH ₂ Cl	Monthly at Coliform Location
THMs and HAA5s	GW: QTR ≥10K; Yrly <10K (Month w/warmest water temp) Subpart H: QTR ≥ 500; Yrly <500 (month w/warmest water temp)



19

Initial and Routine Monitoring
for CWS & NTNCWS

<u>Parameter</u>	<u>Frequency/Application</u>
■ Inorganic	Every 3 Years GW Yearly Subpart H
■ Volatile Org.	Every 3 Yrs, 4 Quarterly
■ Synthetic Org.	Every 3 Yrs, 4 Quarterly
■ Secondary	Every 3 Years
■ Radiological	Every 3 Years

20

Compliance Cycles

- Nine year cycle - Three year compliance periods
- Large systems 3,300 population and above sample first year of compliance period.
- Population <3,300 sample in second year of compliance period.
- Non-Transient Non-Community sample in third year of compliance period.

21

Specific State Requirements that Water Treatment Plant Operators Must Know

22

Specific Rules and Regulations that Water Plant Operators Must Know

- Chapter 62-550 Standards, Monitoring, and Reporting
- Chapter 62-555 Permitting, Construction and Operation and Maintenance of Public Water Systems
- Chapter 62-560 Requirements of Public Water Systems that are out of Compliance
- Chapter 62-602 Operator Certification Rule
- Chapter 62-699 Plant Classification and Staffing Requirements

23

Bacteriological Monitoring Four Principle DEP Requirements

1. All PWS Systems must test for coliform bacteria to determine compliance.
2. All PWS Systems must provide raw sample from each source or each well.
3. The number of distribution samples is dependent on the population served.
4. Provide bacteriological and chemical analysis results to FDEP postmarked by the 10th of following month.


24

Bacteriological Monitoring Failure to Meet Standards

- For systems collecting more than 40 samples per month, MCL is violated when more than 5% are total coliform-positive.
- For systems collecting fewer than 40 samples per month, MCL is violated when more than one sample is total coliform-positive.
- Repeat samples must be taken upon failure in the same month.
- Repeat samples must be taken at site of failure and at location within 5 service connections upstream and downstream within 24 hours of being notified of the result.
- Systems collecting fewer than five samples a month that has one or more total coliform-positive samples shall collect at least five routine samples the next month.
- If fecal coliform is detected DEP must be notified by the end of the day that the system is notified of the test result.

25

Requirements for Repeat Samples

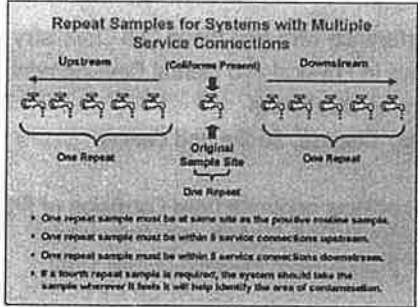

26

Chemical Constituents Nitrate/Nitrite Testing

- Transient Non-Community Water Systems (TNCWS) must test for Nitrate/Nitrite yearly, along with quarterly bacteriological samples.
- All PWS's must test for Nitrate/Nitrite yearly, with Community (CWS) and Non-Transient Non-Community (NTNCWS) monitoring for bacteriological samples monthly.
- Nitrate MCL - 10 mg/l
- Nitrite MCL - 1 mg/l
- Combination - 10 mg/l

27

Chemical Constituents Lead and Copper Action Levels

Chemical Constituent	Action Level	MCL (mg/l)
Lead (Pri DW Std)	>0.015 mg/l	0.015
Copper (Sec DW Std)	>1.3 mg/l	1.0

- All CWS and NTNCWS are covered
- Compliance is based on the 90th percentile
- Action levels are exceeded if the "90th percentile" is greater than the above action levels or more than 10% are exceeded.
- Samples are based on population served

28

Lead Toxicity

- Interference with Red Blood Cell Chemistry
- Delays in Physical and Mental Development
- Learning Disabilities
- Kidney Disease, Stroke and Cancer

Lead Problems originate from Corrosion of fittings and solder in Dist. System especially when copper fittings were installed before 1982.

Florida Rural Water Association 29

Chemical Constituents Secondary Contaminants


- Non-Transient Non-Community Systems must test for chemical analyses excluding secondary contaminants in their three year compliance cycle.
- Community Systems must test for chemical analyses and secondary contaminants in their three year compliance cycle.
- Secondary physical contaminants are non-health related (pH, color, odor)

30

Minimum Reporting Requirements for CWS

- MORs postmarked by the 10th of the month following the reporting period;
- Submit chemical analysis results for Pesticides & PCBs, Volatile Organics, Radionuclides, Primary Inorganics, TTHMs, Asbestos, Nitrate and Nitrite, Secondary Contaminants.

31



Water System Record Keeping Requirements 62-550.720

- Copies of written reports, cross connection control programs, sanitary surveys, shall be kept at least 10 years.
- Chemical analyses shall be kept for 10 years.
- Records of action to correct a violation shall be kept for 3 years.
- Water plant operation reports (MORS) shall be kept for not less than 10 years.
- Records concerning a variance or exemption granted shall be kept for at least 5 years.
- Records of bacteriological analyses shall be kept for not less than 5 years.

32

Water Treatment Plant Operating Requirements

- Must provide the required DEP certified water plant operator.
- Plant shall be maintained in good condition
- A hard bound Operation and Maintenance logbook shall be on site and available for inspection; all maintenance and daily testing records shall be recorded.
- Can not modify treatment or source without DEP approval
- Monthly Operating Reports (MOR's) are to be kept and submitted to DEP each month by the 10th.
- Can not operate plant greater than capacity without DEP approval

33

Water Treatment Plant Category Designations for C and D WTPs

Category	Description
I	Chemical Preparation
II	Demineralization
III	Filtration w/ Primary Treatment or Ion Exchange
IV	Primary Treatment, Aeration and Stabilization
V	Disinfection Only

34

DEP WTP License Requirements

- Lead Operator Must have License shown
- Your job as an operator will depend to a large degree on the capacity and type of water treatment plant

Water Treatment Process	Class A	Class B	Class C	Class D
Category I: Chemical preparation with filtration including lime softening, coagulation, direct filtration.	0.5 MGD and above	1.0 MGD up to 1.5 MGD	up to 1.5 MGD	None at this level
Category II: Demineralization including reverse osmosis, desalination, electrolysis, and ultra filtration.	0.5 MGD and above	1.0 MGD up to 0.5 MGD	up to 1.0 MGD	None at this level
Category III: Filtration (other than category II) including primary treatment or ion exchange.	0.0 MGD and above	2.0 MGD up to 0.0 MGD	up to 2.0 MGD	None at this level
Category IV: Primary Treatment (includes aeration, stabilization, and disinfection).	None at this level	1.0 MGD and above	0.1 MGD up to 1.0 MGD	Up to 0.1 MGD
Category V: Disinfection only	None at this level	None at this level	2.5 MGD and above	Up to 2.5 MGD

35

Class C Staffing Requirements

Category	I	II	III	IV	V
5 visits/week and 1 visit/weekend		Below 0.1 MGD	Below 0.25 MGD	0.1 to 1.0 MGD	0.25 to 3.0 MGD
Total hours/week		2.4	1.8	1.2	0.6
1 hr. ea. Day and weekend	Less than 0.1 MGD	0.1 to 0.25 MGD	0.25 to 0.5 MGD	1.0 to 3.0 MGD	3.0 to 5.0 MGD
3 hr. ea. Day and weekend	0.1 to 0.3 MGD	0.25 to 0.5 MGD	0.5 to 1.0 MGD	3.0 to 5.0 MGD	
6 hr. ea. Day and weekend	0.3 to 1.0 MGD	0.5 to 1.0 MGD	1.0 to 2.0 MGD	5.0 to 10 MGD	5.0 & Above

36

Class D Staffing Requirements

Category	TV	V
3 visits/week on nonconsecutive days for total of 0.6 hours/week	Less than 0.1 MGD	
3 visits/week on nonconsecutive days for total of 0.3 hours/week		0.05 to 0.25 MGD
2 visits/week on nonconsecutive days for total of 0.2 hours/week with no more than 5 days between visits		Less than 0.05 MGD

37

Water System Capacity Requirements

- For new community water systems (CWS), or for CWS and NTNCWS that grew to CWS status through facility expansion.
- Construction Permit from FDEP and demonstrate financial, managerial and technical capacity.
- Have required operator license
- Have capability to conduct monitoring and reporting

38

Water Distribution System Requirements

- Maintain 20 psi in distribution system at service connection except for break or extraordinary conditions.
- Document program for exercising all system valves
- Must have quarterly dead-end system flushing program and as necessary from complaints
- > 350 people or 150 connections
 - must map locations of valves, fire hydrants and facilities
 - must have Emergency Preparedness Plan for system,
 - and have minimum of two wells and backup generator

39

DOH GUIDELINES FOR THE ISSUANCE OF PRECAUTIONARY BOIL WATER NOTICES

40

Types of Problems Resulting in PBWN

- Microbiological
- Zero or Negative Pressure
- Low Water Pressure (maintain pressure during repair, maintain > 0.2 CI residual and limit affected area.)
- Water Main Breaks or Interruptions
- Flooding of Wells

41

Confirmed Microbiological Problems

- The Presumptive test is that Total Coliform has been detected.
- The Confirmation test is the confirmed presence of fecal indicator such as E coli or other fecal bacteria such as coliphage;
- Boil water notices must be issued ASAP but no later than 24 hours after results;
- DEP must be contacted by end of day;
- To lift notice repeat samples must be clear of TC, FC and EC and residual >0.20 mg/l Cl.

42


Main Break Clearance Samples

- Require two satisfactory days of sample results (PBWN may be lifted after first set contingent on second set)
- Two consecutive sets of repeat if second set is positive;
- Main clearance samples should be clearly marked and submitted with MORs.

43

Water Pipeline Additions to Distribution Systems

- Must have DEP permit
- Must provide a horizontal separation of 6' from sanitary sewer pipe
- Must maintain 6" above or at least 12" below gravity, vacuum sewer, or storm sewer and 12" above/below for pressure type sewers or reclaimed pipelines.
- Must maintain 1 full length centered of water pipe to ensure joints are farthest away from intrusion points.



44

Minimum Disinfection Requirements

- Maintain a free chlorine residual of 0.2 or combined chlorine residual of 0.6 mg/l throughout the distribution system.
- Provide an approved DPD "free chlorine" test kit and daily checks 5 days per week. Chlorination facilities with a daily demand of 10 lbs./day or more must provide gas chlorination with automatic switchover.

45

Water Treatment System Facility Maintenance Requirements

- Must inspect storage tanks with access every 5 years
- Must rehabilitate tanks as needed using approved coatings
- Must clean sludge accumulations yearly
- Must exercise isolation valves at water storage tanks and in-plant facility

46

Sanitary Surveys Requirements


- Currently cover Subpart H Systems and are performed every 3 years for CWS and 5 years for NCWS by DEP
- On-site evaluation
 - Source
 - Treatment
 - Distribution system
 - Finished water storage
 - Pumps, pump facilities, and controls
 - Monitoring and reporting and data verification
 - System management and operation
 - Operator compliance with State requirements

47

Basic Chemistry for Water Plant Operators

1

Matter



(It is anything that has weight and occupies space)

- Physical States of Matter
 - **Solids** – have a definite shape with the particles closely packed together; A solid doesn't change its shape to fit into a container
 - **Liquids** – maintain a constant volume but will change shape to fit their container.
 - **Gases** – have no fixed shape and their volume can be expanded or compressed to fit different sizes of containers.
- Matter can change in two different ways; physical and chemical changes


2

Elements

- All matter is made up of pure basic substances or combinations of these basic substances, known as **ELEMENTS**.
- 118 known elements
- The atom is the smallest unit of an element

3

Periodic Table of Elements

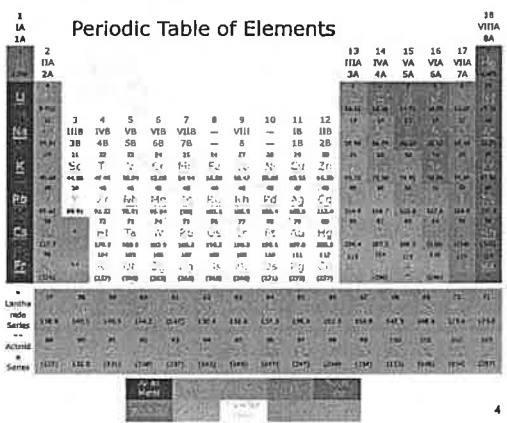

The periodic table displays elements organized by groups (IA to VIIA) and periods (1 to 7). It includes the Lanthanide and Actinide series at the bottom. Each element cell contains its atomic number, symbol, and name.

4

Properties of the Elements

- Metals (aluminum, iron, copper, gold, lead, mercury)
- Metals constitute the largest class of Elements.
 - Metals tend to lose electrons to form positive ions.
- Nonmetals (carbon, oxygen)
- Nonmetals are often gases at room temperature
 - As solids they are not lustrous, malleable or ductile, and are poor conductors of heat and electricity.
 - Nonmetals gain electrons to form negative ions.
- Semi-Metals (silicon, arsenic)
- Semi-metals may exhibit properties of either.


5

The Periodic Chart Use of Atomic Weight

	8	Atomic Number
	O	Symbol
	Oxygen	Name
Includes Isotopes Use 16	15.99	Atomic Weight

6


Atoms are classified by the # of Protons in the Nucleus called the Atomic Number

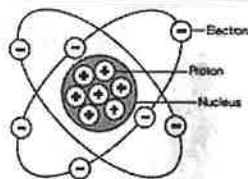

- Atoms are made up of protons, electrons and neutrons.
- Atoms are classified by the number of protons in the nucleus and is its atomic number.
- Nucleus is made up of protons and neutrons which give the atom its atomic mass. Mass of each is 1. Electrons do not have mass.
- Electrons orbit the nucleus and have a negative charge. Protons have a positive charge and neutrons have no charge.
- Atoms have the same number of electrons as protons unless acted upon by an external force.

7

Compounds

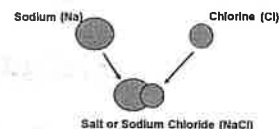

- Substances composed of two or more elements are called compounds
- If you sub-divide a compound into its smallest particle you have a molecule
- Chemical compounds are represented by chemical formulas like salt (NaCl)
- The majority of compounds that contain carbon are termed "organic"



8

Calculating Molecular Weight of a Compound

The Molecular Weight of a Compound is the sum of the Atomic Weights of all of the atoms in a compound. For example take sodium silicofluoride (Na₂SiF₆). What is its molecular weight?

Symbol	No. of Atoms	Atomic Weight	Molecular Weight
Na	2	22.99	45.98
Si	1	28.09	28.09
F	6	19.00	114.00
Molecular Weight of Chemical			188.07

Based on this information what is the Fluoride ion purity, % in the compound?

Fluoride Ion purity, % = $\frac{\text{molecular wt. of F in compound}}{\text{molecular wt. of the compound}} = \frac{114}{188} = .606$ or 60.6%

What is a molecule and how do you calculate molecular weight?

- A molecule is the smallest unit of a compound (a combination of two or more atoms).
- A molecule may contain two atoms of the same element or consist of two or more different atoms (such as O₂ and H₂O).
- The molecular weight of a molecule is calculated by adding the atomic weights (in atomic mass units or amu) of the atoms in the molecule.
- Given a molecule of calcium hydroxide (lime - Ca(OH)₂) how many atoms are there of each element and what is its molecular weight?

Element	Atoms	Atomic Wt
Ca	= 1;	40
Oxygen	= 2;	16
Hydrogen	= 2;	1

Molecular Weight = (1x40)+(2x16)+(2x1) = 74

Concentration: How does ppm and mg/l relate to each other?

Metric System			
1000	kilogram	kg	10 ³
100.0	hectogram	hg	10 ²
10.0	dekagram	dag	10 ¹
1.0	gram	g	10 ⁰
0.1	decigram	dg	10 ⁻¹
.01	centigram	cg	10 ⁻²
.001	milligram	mg	10 ⁻³
.000001	microgram	µg	10 ⁻⁶

1 mg = $\frac{1 \text{ mg}}{1 \text{ kg}} = \frac{1 \text{ mg}}{\text{million mg}} = \frac{1 \text{ part}}{\text{million}}$

- Metric system units go in steps of 10, 100, and 1,000.
- One milligram in a kg is 1 ppm (by mass).
- One liter (L) of pure water at 4°C and 1 standard atmosphere pressure weighs exactly 1 kg
- So 1 mg/L is 1 ppm. Another way to say it is a liter of water weighs 1,000 grams or 1 million milligrams.
- Therefore, 1 mg in 1 liter is 1 mg in 1 million milligrams or 1 part per million.

Concentration

- The concentration of a solution is a measure of the amount of solute dissolved in a given amount of solvent.
- A solution consists of two parts: a solvent and a solute.
- When working in water treatment, the solvent is usually water.

- Commonly expressed as mg/l (same as ppm) but can be expressed as percent strength and grains per gallon GPG.
- A concentration at which no further solute will dissolve in a solution is said to be saturated.

Concentration

- For the extremely dilute solutions, concentration is often expressed in parts per million (ppm).
- The amount of solute and solution present can be stated in terms of either mass or volume.
- Therefore, different types of percent (weight or strength) and ppm exist:
 - mass-mass;
 - volume-volume;
 - mass-volume

13

Percent Strength

- Percent strength of a solution can be expressed as percent-by-weight or percent-by-volume.
- To calculate percent strength by weight, the following formulas are used:
- Percent strength = $\frac{\text{Weight of Solute}}{\text{Weight of Solution}} \times 100$ or
- Percent strength = $\frac{\text{Weight (dry)}}{\text{Weight (prod)}} \times 100$ or
- Percent strength = $\frac{\text{part}}{\text{whole}} \times 100$

Weight of solution equals the weight of solute plus the weight of solvent.

14

If 10lbs of chemical are added to 100 lbs of water, what is the percent strength (by weight) of the solution?

- Percent strength = $\frac{\text{Weight of Solute} \times 100}{\text{Weight of Solution}}$
- Weight of Solute = 10lbs
- Weight of Solution = 110lbs
- Percent strength = $\frac{10 \times 100}{110} = 9\%$

15

Example: A lab procedure requires you to add 10 lbs of sodium hydroxide to water. How many lbs of sodium are required for this reaction?

- Weight percent = $\frac{\text{atomic weight of element} \times 100}{\text{molecular weight of compound}}$
- Step 1. Determine the molecular weight of sodium hydroxide (NaOH).
 - Atomic weight
 - Sodium = 23
 - Oxygen = 16
 - Hydrogen = 1
 - Molecular weight of NaOH = 40

16

Example: A lab procedure requires you to add 10 lbs of sodium hydroxide to water. How many lbs of sodium are required for this reaction?

- Step 2: Determine the percent of sodium in sodium hydroxide.
 - Weight percent = $\frac{\text{atomic weight of element} \times 100}{\text{molecular weight of compound}}$
 - Weight Percent = $\frac{23 \times 100}{40} = 57.5\%$
(of Sodium)
- Step 3: Calculate the amount of sodium.
 - Percent strength = $\frac{\text{part} \times 100}{\text{whole}}$
 - $\frac{\text{Whole} \times \text{Percent strength}}{100} = \text{Part}$
 - Part = $\frac{10 \text{ lbs} \times 57.5}{100} = 5.75 \text{ lbs of Sodium}$

17

In 50 gallons of solution, there is 50 lbs of chlorine. What is the strength of the solution? Assume the solution has the same density as water.

- Step 1: Determine the weight of the solution. Since there are 8.34 lbs/gal we know that the 50 gals of solution weighs:

$$\frac{8.34 \text{ lbs}}{\text{gal}} \times 50 \text{ gals} = 417 \text{ lbs of solution}$$
- Step 2: Determine the percent strength.
- Percent strength = $\frac{\text{Weight of Solute}}{\text{Weight of Solution}} \times 100$ or
- Percent strength = $\frac{50 \text{ lbs of Cl}}{417 \text{ lbs of Solution}} \times 100 = 12\%$

18

Question?

- An operator mixes 40 lb of lime in a 100-gal tank that contains 80 gal of water. What is the percent of lime in the slurry?
- A. 3%
- B. 6%
- C. 9%
- D. 12%

19


Dilution Calculations

- In some cases a particular strength of solution will be required. Usually this solution is created by diluting a stronger strength of that same solution with water or with a weaker solution of the same chemical.
- The best method to determine quantities of weak and strong solutions by percent is the "Rectangular diagram"



20

Example: A plant has a 45% and 23% solution of ferric chloride. The operator must create 150 gallons of a 30% solution. How much of each solution should be used to create a 30% strength?

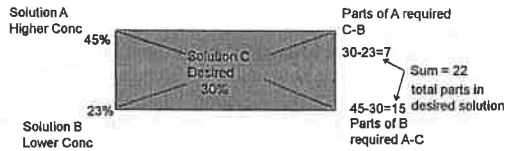

Percentage of Solution A Required = $7/22 = 32\%$
 Percentage of Solution B Required = $15/22 = 68\%$

Using Percent = $\frac{\text{Part}}{\text{Whole}}$ or Part = Percent x Whole

Solution A = $32\% \times 150 \text{ gals} = 48 \text{ gals}$
 Solution B = $68\% \times 150 \text{ gals} = 102 \text{ gals}$

21

Solutions and Standards

Aqueous Solution	Mixture completely dissolved in water
Standard Solution	A solution in which the exact concentration (molecular weight is known)
Standardize	Determining the exact strength of solution by comparison with standard of known strength
Titration	Process of adding chemical of known strength to determine concentration of unknown compounds

22

Alkalinity

- Alkalinity is the measurement of the water's capacity to neutralize an acid.
- There are three types of alkalinity: bicarbonate (HCO_3^-), Carbonate (CO_3^{2-}), and hydroxide (OH^-).
- Many of the chemicals used in water treatment, such as alum, chlorine, or lime, cause changes in alkalinity.
- Alkalinity of water is needed to:
 - Calculate the chemical dosages in coagulation and water softening
 - Calculate corrosivity
 - Estimate carbonate hardness of water
- Type of alkalinity and quantities determined from acid titrations.



23

Alkalinity/Acidity

Alkali	Soluble Salts that neutralize Acids
Alkaline	Sufficient amount of alkali to raise pH above 7
Alkalinity	Capacity of Water to neutralize acids Does not exist below pH 4.5
Acidic	Condition of Water to lower pH below 7

24

Acids

- An acid is any substance that releases hydrogen ions when mixed with water.
- For example: Hydrochloric acid (HCl) dissociates or breaks apart in water, forming H^+ and Cl^- ions.
- In general, acids contain an "H" in the chemical formula.
 - Sulfuric acid: H_2SO_4 ; Nitric acid: HNO_3 ;
 - Carbonic acid: H_2CO_3

25

Bases

- A base is any substance that produces hydroxyl ions (OH^-) when dissociated in water.
- For example, caustic soda (NaOH) releases sodium (Na^+) ion and a hydroxyl ion (OH^-) in water.
- Examples of bases: Calcium Oxide (Quicklime) – CaO ; Caustic soda - NaOH; Hydrated Lime – $Ca(OH)_2$; Potassium hydroxide – KOH; Ammonia – NH_3

26



Salts

- Salts are compounds resulting from an acid-base mixture.
- These compounds do not contain either a hydrogen or hydroxide ion.
- Mixing hydrochloric acid and caustic soda forms basic table salt (sodium chloride)

$$HCl + NaOH \longrightarrow NaCl + H_2O$$
- Mixing hydrated lime and carbonic acid form calcium carbonate.

$$Ca(OH)_2 + H_2CO_3 \longrightarrow CaCO_3 + 2H_2O$$

27



pH

- pH is most important parameter in our drinking water.
- pH of a solution is a measurement of how acidic or basic a solution is.
- pH is measured on a scale of 0 to 14.
- Pure water is considered neutral and has a pH of 7.0.
- Solutions that contain a greater number of hydrogen ions than hydroxide ions are considered acidic and has a pH below 7.0.
- Solutions that contain a greater number of hydroxide ions compared to hydrogen ions is considered basic and has a pH above 7.0.

28

pH (continued)

- pH is a major constituent in corrosion control.
 - Increasing pH above 7.0 in the distribution system reduces lead and copper.
 - In most cases, pH levels above 9.0 can induce scaling or precipitation of calcium carbonate.
- pH is also a major factor in floc formation for filtration.
 - Alum works best at pH's at or below 7.0.
 - Ferric products work best at pH's above 8.0.
- pH has an effect on chlorine disinfection and formations of trihalomethanes (THM's).

29

Ions in Water Treatment

- All acids, bases and salts disassociate or ionize in water. These are known as electrolytes.
- Electrolytes normally have the same number of protons as electrons that neutralize one another. When dissolved in water they split into their respective elements or compounds and lose or gain electrons. This results in the elements or compounds becoming positively or negatively charged.
- Sodium and Calcium give up electrons and become positively charged. Positively charged ions are called "cations."
- Chlorine is negatively charged because it gains electrons. Negatively charged ions are called "anions."

30

Important Ions in Water Chemistry and Common Valences





Cations





- H⁺
- Na⁺
- Ca⁺⁺
- Mg⁺⁺
- Mn⁺⁺ or ⁺⁺⁺
- Fe⁺⁺ or ⁺⁺⁺
- S⁺⁺
- NH₄⁺
- Al ⁺⁺⁺


Anions

- Cl⁻
- O⁻⁻
- OH⁻
- HCO₃⁻
- CO₃⁻⁻
- NO₃⁻
- SO₄⁻
- OCl⁻

31

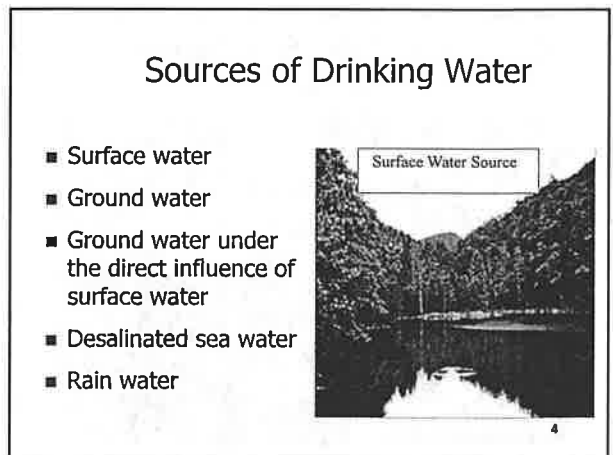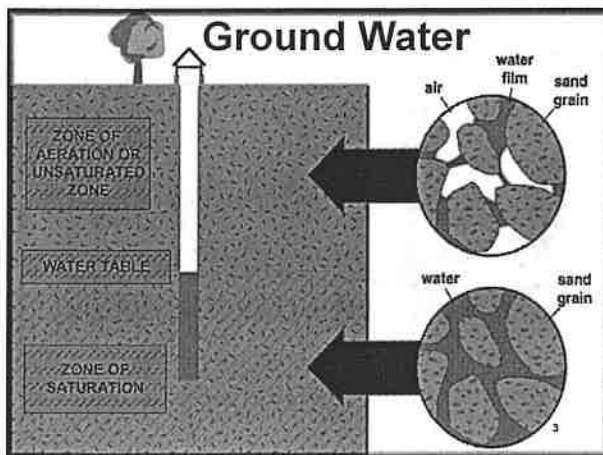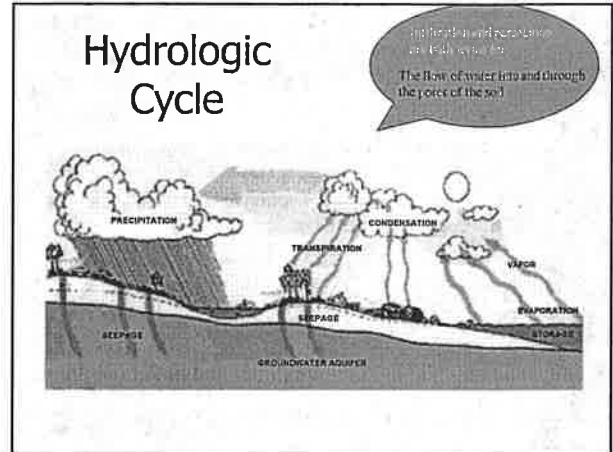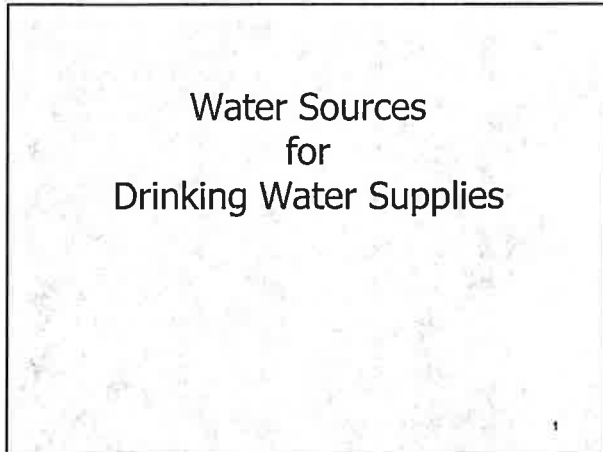

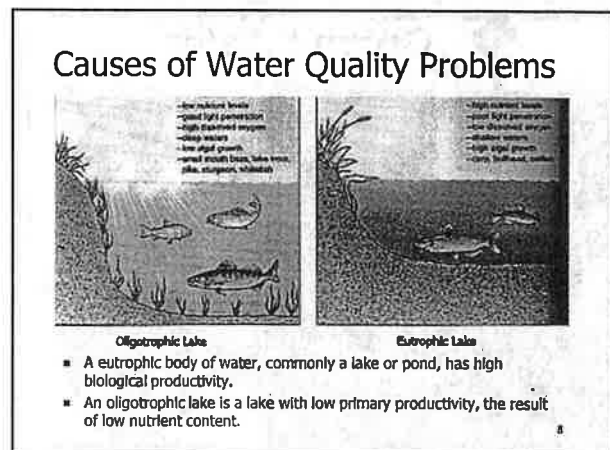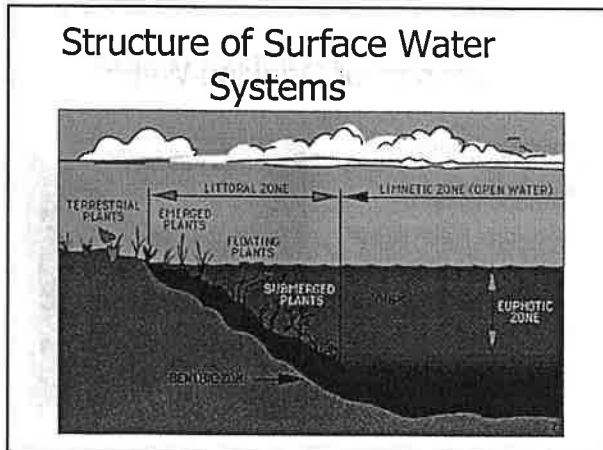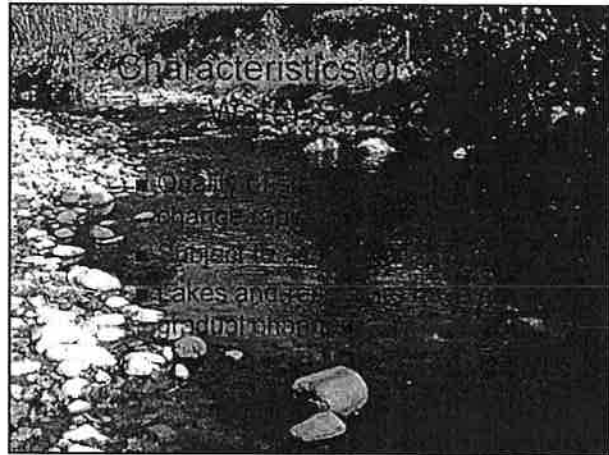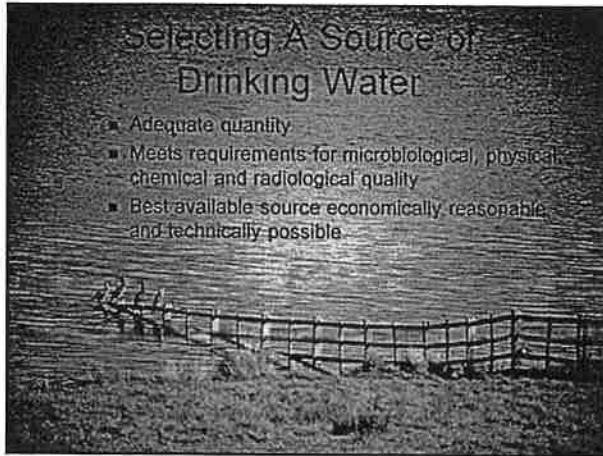

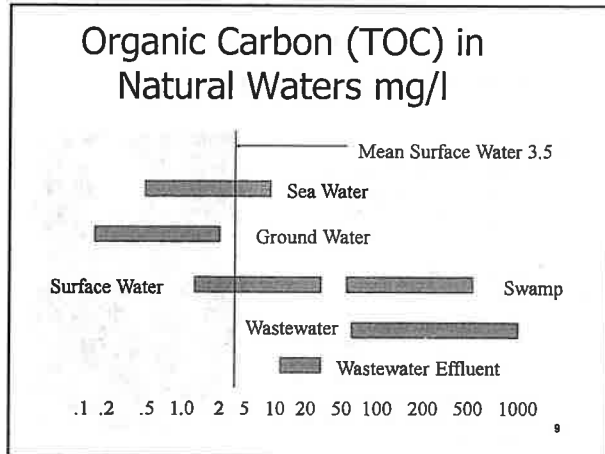


Algae Considerations

- Taste and Odor
 - Most common problem. Algae blooms in warm weather contribute to taste and odor.
 - Produce fishy, aromatic, grassy, septic, musty, and earthy tastes and odors.
- Shortened Filter Runs
 - Tends to clog filters reducing filtration rate and duration of filter runs.
- Increased pH
 - Algae blooms increase pH during daylight hours (decrease CO₂ content).
 - At night, algae blooms lower pH.
- Dissolved Oxygen Depletion
 - Water becomes supersaturated with oxygen as algal blooms progress.
 - As algal cells die, oxygen is used up. May be reduced to point that fish kills occur.
- Organic Loading
 - Increased color; increased Cl demand.
 - Associated with high THMs

Reaeration-Destratification

Purpose – to eliminate, control, or minimize the negative effects on domestic water quality that occur during periods of thermal stratification and dissolved oxygen depletion.


- Reaeration
 - Introduces air through forced air diffusers into the lower layers of the water body, replenishing the dissolved oxygen.
 - Also, rising bubbles cause lower waters to rise to surface where oxygen is transferred to the water (surface reaeration).
- Destratification
 - Vertical mixing with the water body to eliminate separate layers of temperature, plant or animal life.
 - Mixing is through mechanical (pumps) or through forced air diffusers.

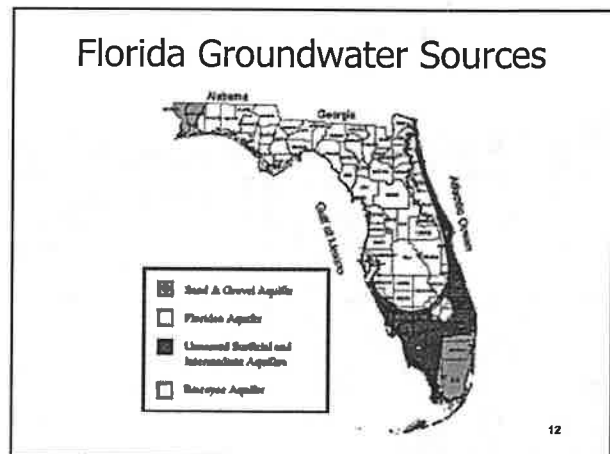

Characteristics of Ground Water Sources

- Seasonal quality is relatively constant
- Quality may vary greatly from well to well
- Usually superior to surface water in:
 - Bacteriological content
 - Turbidity
 - Total organic concentrations
- Mineral content may be inferior to surface water

In areas with low rainfall, the water table is low and the water is more concentrated. This results in higher chlorine demand.




Well being drilled

Ground Water Sources Must Provide Quantity and Quality

- **Quantity**
 - Equal or exceed design maximum and average day demands with largest producing well out of service
 - Minimum of two sources
 - Standby power supply
- **Quality**
 - Every new, modified or reconditioned ground water source must sample to demonstrate quality
 - Adequate separation of well and potential sources of contamination and ground water development




Artesian well ¹⁴

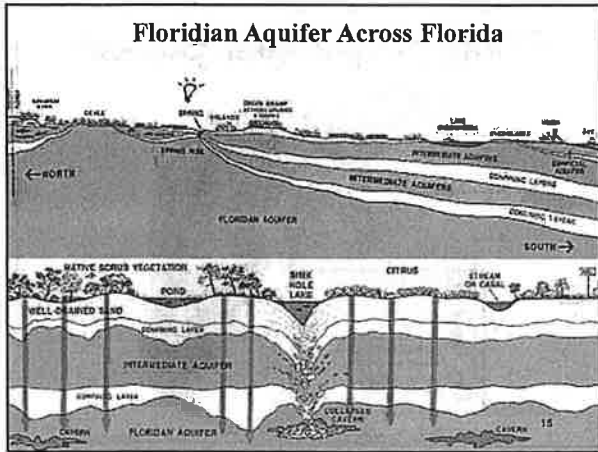


Karst Features

- Karst is a type of topography that is characterized by depressions caused by the dissolution of limestone.
- These features include caves, sinkholes, springs, and other openings.
- In karst areas, interactions between surface water and groundwater are extensive and groundwater quality can degrade quickly.

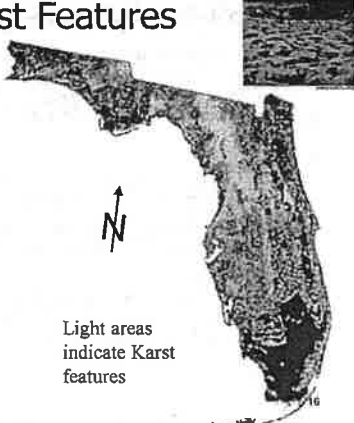

Light areas indicate Karst features

Karst Features and Solution Cavities

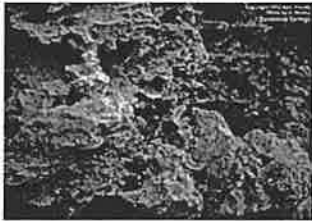

Karst Limestone Feature


Limestone is easily dissolved by Carbon Dioxide.

Carbon Dioxide is dissolved from the air and from decomposing matter.

Subsurface cavities, caves, drainage basins, sinkholes and other geologic features characterize Florida's karst conditions.

17

Florida Aquifer System Relative Vulnerability Map for Nitrate

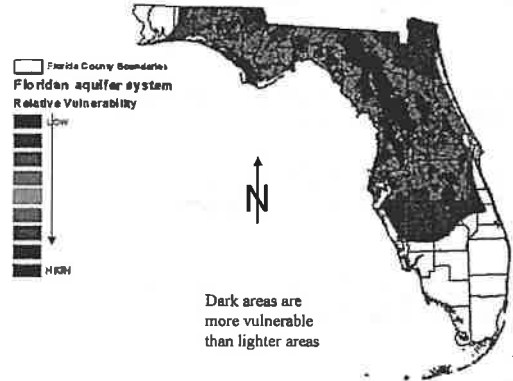

18

Threats to Drinking Water

19

Contaminant Effects

- Acute Health Effects – Immediate
Tier 1 Health Risk Notification - 24 hrs
Fecal, Nitrate, Turbidity, or treatment technique
- Chronic Health Effects – Long Term
Tier 2 Health Risk Notification – 30 days
all other MCLs not listed above
- Aesthetic Concerns
Tier 3 Health Risk Notification – 3 months
Secondary Standard

20

Pathogens Causing Acute Health Affects

- Bacteria (e.g., *Shigella*, *Legionella*, *Salmonella*, *E.coli*)
- Viruses (e.g., Hepatitis A & E, Norwalk Virus, Enteroviruses, Adenoviruses, Rotaviruses)
- Parasites, protozoa and cysts (e.g., *Giardia lamblia*, *Cryptosporidium*)

21

Indicator Organisms and Pathogenic Contaminants

Fecal and *E. coli* are very specific indicators of contamination and are not easily isolated and identified

22

Some Facts About Bacteria


- Bacteria are widely distributed on earth
- They have been found 4 miles above earth and 3 miles below sea sediments.
- One gram of fertile soil contains up to 100,000,000 bacteria.
- Bacteria are inconceivably small and measured in microns. One micron is equal to 1/1,000,000 of a meter.
- During the rapid growth phase bacteria undergo fission (cell division) about every 20 to 30 minutes.
- One bacterial cell after 36 hrs of uncontrolled growth, could fill approximately 200 dump trucks.

Gastroenteritis (Most Common Illness) from Fecal Contamination of Water


- Symptoms are nausea, vomiting and diarrhea; typically not reported
- Can be caused by viral or bacterial contamination
- Over 100 types of human enteric viruses have been identified in wastewater; some not yet identified may be virulent
- Viruses can survive outside host organism
- Viruses survive longer than indicator organisms in the presence of disinfectant

24

Regulated Protozoa



Giardia




Cryptosporidium

25

Cryptosporidium Oocysts and Giardia Oocysts

- Extremely Small
- Electron Microscope required
- Form protective layer
- Bunch in clusters
- Turbidity will protect from Cl and UV

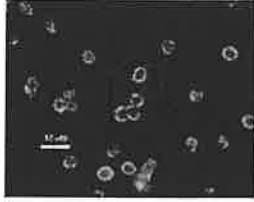

Oocysts showing protective layer

26

Attributes of the Three Waterborne Pathogens of Concern in Water Treatment

Organism	Size (µm)	Mobility	Point of Origin	Resistance to Disinfection	Removal by Sedimentation, Coagulation, and Filtration
Bacteria	0.1-10	Mobile, Nonmotile	Humans and animals, water, and contaminated food	Type specific - bacterial spores typically have the highest resistance whereas vegetative bacteria have the lowest resistance	Good, 2 to 3-log removal
Viruses	0.01-0.1	Nonmotile		Generally more resistant than vegetative bacteria	Poor, 1 to 3-log removal
Protozoa	1-20	Mobile, Nonmotile		More resistant than viruses or vegetative bacteria	Good, 2 to 3-log removal

27

Contamination Sources

- Septic Tanks, storm and sanitary sewers
- Waste disposal activities
- Horticulture and animal pasturing
- Chemically treated lawns
- Subsurface liquid disposal
- Runoff from storm events
- Characteristics of soil above rock
- Decomposition of organic matter

28

Types of Contaminants Causing Chronic Health Effects

- Volatile organic chemicals (VOCs)
- Inorganic chemicals (IOCs)
- Synthetic organic chemicals (SOCs)
- Radionuclides

29

Sampling

30

Types of Samples

Compliance Routine Samples	
	Annual, Monthly, or Quarterly samples, collected from representative locations throughout your water system in 100mL or 125mL containers and submitted to a lab within 30 hours.
- Repeat Samples	collected within 24 hours after you receive notification of a positive coliform result.
Non-Compliance Samples	
- Additional	samples required by DEP in order to help identify extent of the contamination or provide better info.
- Replacement	compliance sample that is collected but does not get analyzed, i.e., expired, broken, insufficient vol.
- Special Samples	collected due to repairs, complaints, or maintenance to ensure that coliform has not entered the water distribution system.

31

Sample Collection Procedures

- Accidental Contamination – Remove Obstruction (aerators, hoses, etc. that harbor bacteria)
- Sample Containers – Use Appropriate Type of Container (Sample Bottles or Whirl-Pac)
- Preservation- Use Specified Method; if refrigeration required use $\leq 4^{\circ}\text{C}$
- Label – Sample Container and Time
- Chain of Custody – Tracing and Handling

32

Source Water Protection

- Security and Safety
 - Secure from unwanted intruders
 - Safe from contamination (natural or man-made)
- Contamination Prevention Programs

33

Security and Safety of the Water Sources

- Secure surface water sources
- Properly seal wellheads
- Screen and securely attach well vents and caps
- Properly secure observation, test and abandoned wells

34



Long-Term Groundwater or Wellhead Protection

- Protection of ground water sources
- Subdivision growth controls
- Zoning
- Land purchase
- Acquisition of development rights
- Land use restrictions



35

Well Requirements for Public Water Systems

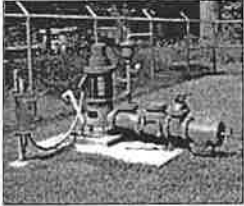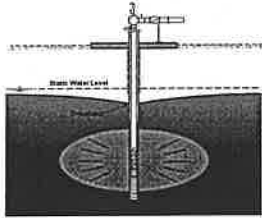1

Suitability of Well Construction

<p style="text-align: center;">Bored</p> <ul style="list-style-type: none"> ■ ~100' ■ 2-30" dia. ■ Soils or Small Boulders, Fractured Formations 	<p style="text-align: center;">Driven</p> <ul style="list-style-type: none"> ■ ~50' ■ 1.25 -2" ■ Soils, no Boulders & only very thin Rock Formations
<p style="text-align: center;">Jetted</p> <ul style="list-style-type: none"> ■ ~100' ■ 2-12" dia. ■ Soil Formations Only 	<p style="text-align: center;">Drilled</p> <ul style="list-style-type: none"> ■ ~1000' ■ 4-24" ■ All Geological Formations

2

Well Location Considerations

- Geologic/hydrologic Characteristics
- Slope of Ground Surface
- Nature of Soil and Homogeneous
- Slope of Water Table (field determined)
- Size of Drainage Area
- Nature and Distance to Pollution Sources
- Methods in-place to Protect Well

3

Source Water Parameters

Quality and Quantity Dictates Depth of Well

<ul style="list-style-type: none"> ■ TDS — Requires RO plant ■ Total Hardness ■ Total Fe and Mn ■ Chlorides & Sulfates ■ Total Alkalinity ■ Nitrate — 10mg/l Blue baby 	<ul style="list-style-type: none"> ■ pH ■ Corrosivity ■ CO₂ — Has to be removed. Will eat pipes. ■ H₂S ■ Fluoride ■ TOC — High TOC produces DBPs
--	--


4

Well Yield

- Depends on Characteristics of Aquifer and Drawdown (Porosity, Permeability and Thickness of Aquifer)
- Rule of Thumb is that Doubling Diameter increases Production by 10%
- Increasing Well Capacity requires Deepening
- Difficult to Predict Yield without pumping
- Based on estimating from Nearby Wells
- Driven Wells produce ~30 gpm and Jetted and Drilled Wells > 300 gpm.


5

Porosity: the percentage of the volume of the rock that is open space (pore space).

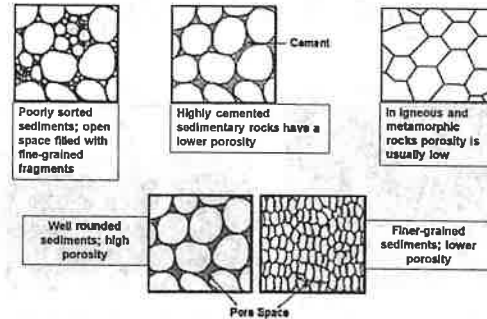

6

Permeability




A thin layer of water will always be attracted to mineral grains due to the unshielded ionic charge on the surface. This is called the force of molecular attraction. If the size of interconnections is not as large as the zone of molecular attraction, the water can't move.

- Permeability is a measure of the degree to which the pore spaces are interconnected, and the size of the interconnections.
- Low porosity usually results in low permeability
- High porosity does not necessarily imply high permeability. It is possible to have a highly porous rock with little or no interconnections between pores.


7

Component Parts & Operation of a Well

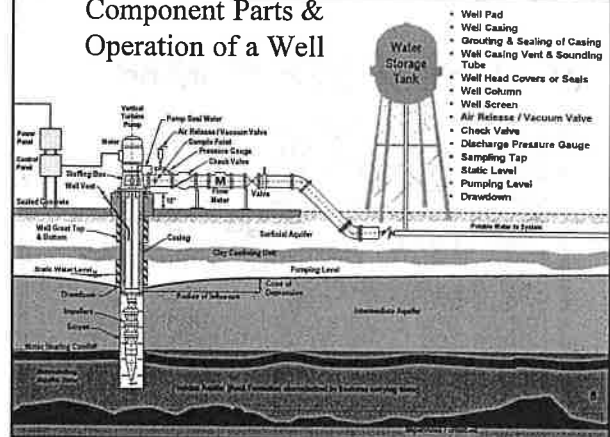

Well Terminology

- Static Water Level vs Static Water Depth
- Dynamic or Pumping Water Level
- Drawdown
- Cone of Influence
- Well Capacity



9

Systems for Sensing Water Level


There are several ways to measure the static water level

- an electric sounder or electric depth gauge
- wetted tape
- air line.

10

Air Bubbler System


- Air bubbler systems contain no moving parts.
- Uses a tube with an opening below the surface of the liquid level. A fixed flow of air is passed through the tube. Pressure in the tube is proportional to the depth (and density) of the liquid over the outlet of the tube.

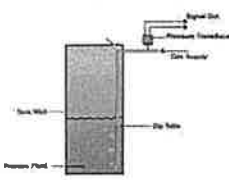

11

Wetted Tape

- Accurate for measuring water levels to depths up to about 90 feet.
- To use this method, you must know the approximate depth to water in your well.
- In this method, a lead weight is attached to the end of a 100 foot steel measuring tape. Eight to ten feet of tape end is dried and coated with carpenter's chalk before each measurement. The tape is lowered into the well until a part of the chalked section is below the water. The contractor will align and note an even foot mark on the tape exactly at the top of the casing or some other measuring point. Then, the tape is pulled up to read the mark where the line is wet. He can determine the actual depth from the top of the casing to water level by subtracting the wetted mark from the mark he held at the top of the casing.

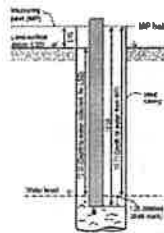

12



Question: Which of the following methods is best for determining the depth of water in a clearwell?

- A. A bubbler
- B. A load cell
- C. A rotameter
- D. A venturi

13

Importance of Well Grouting



Pressure Testing of Grout Seal @ ~10 psi for 1 hr. Should be Performed.

- Prevent movement of water between aquifer formations
- Preserve quality of producing zones
- Preserve Yield
- Prevent water intrusion from surface
- Protect Casing against Corrosion!

14

Well Disinfection is Critical in Obtaining DEP Approval

- Must Remove all Foreign Matter prior to Disinfection; grease, oil, and soil harbor bacteria, surfactant agents sometimes used should not contain phosphorus!
- Contact times of 8 hrs. for chlorine solutions of 50, 150 or 200 ppm (based on pH are effective)
- If well is not in use, chlorination should be continuous (~10 ppm Residual) to prevent bacterial growth

15

Methods for Disinfecting Wells

- Protect all parts and swab with 50 mg/l solution before installation
- Inject Chlorine through the column pipe not only the vent pipe!
- 50 mg/l is needed for 24 hours
- Pump well until no chlorine residual is observed
- Test for Coliform (mo-mug or Colilert has more false positives for fecal!)

16

Air Considerations

- Air lock - an accumulation of air in the pump housing that prevents the flow of water.
 - An air-relief valve used to prevent this condition.
 - Submersible pumps have footer valves.

17

Well Maintenance

- Well Yield Declines Over Time
- Failure or Wear of Pump (check pump curves!)
- Decline of Aquifer Water Levels
- Plugged or Corroded Screens
- Accumulations of Sand or Silt in the Well
- Build up of calcium carbonate in solution cavities

18

Acidization

- Can improve productivity and lower pumping (electricity) costs of older wells
- Injection of 18/20 Baum HCL into borehole
- Acid diversion is important, otherwise only the first interval will be affected; accomplished by packers or plugs
- Can increase specific capacitance (= pump rate/drawdown) by several hundred percent

19

Over Pumping Wells or Overdraft

- Can Permanently Damage Storage and Transmission Properties of the Aquifer
- Can Cause Subsidence and Compaction of the Aquifer
- Reduces Yield of the Well Field
- Can Result in Cascading of Water and Failure of the Well

20

Safe Yield vs Sustainable Yield

- Excessive pumping can have serious social and economic consequences.
 - Reduced discharge of groundwater to surface water features
 - Reduction in ecological base flows
 - Overlapping of drawdown cones
 - Depletion of reserves
 - Land subsidence due to pore pressure reduction
- Attempts to limit based on concept of "safe yield"
 - Balance between the annual amount of ground water withdrawn by pumping and the annual amount of recharge.
- New emphasis is on "sustainable yield"
 - Reserves a fraction of safe yield for benefit of surface waters
 - No set percentage (there are social, economic and legal issues)

21

Determining Well Yield with Well Pump Test

- Well is Pumped for at least 4 hours
- Determine how much water is pumped per min or hour (GPM)
- Determine the depth to pumping level (maximum drawdown) over time at one or more constant pumping rates
- If well does not recover in 24 hrs. to original level, Aquifer is not dependable
- Determine the recovery of water level
- Determine the length of time the well is pumped at each test

22





Well Pump Considerations


23

Types of Pumps and Uses

<p><u>Turbine Pumps</u></p> <ul style="list-style-type: none"> ■ <u>Single Stage</u> limited to 28' lift; <u>multi-Stage</u> 50 - 300' lift ■ <u>Submersible</u> low head and low flow conditions (typically <100' and 100 GPM) ■ <u>Vertical Turbine</u> high head and high flow 	<p><u>Positive Displacement</u></p> <ul style="list-style-type: none"> ■ Shallow ~25' Deep ~600' ■ Limited to ~25 GPM ■ High Maintenance Cost <p><u>Jet Pumps</u></p> <ul style="list-style-type: none"> ■ Shallow ~20' Deep 50 - 200' ■ Generally limited to small capacities < 50 GPM
--	---

24

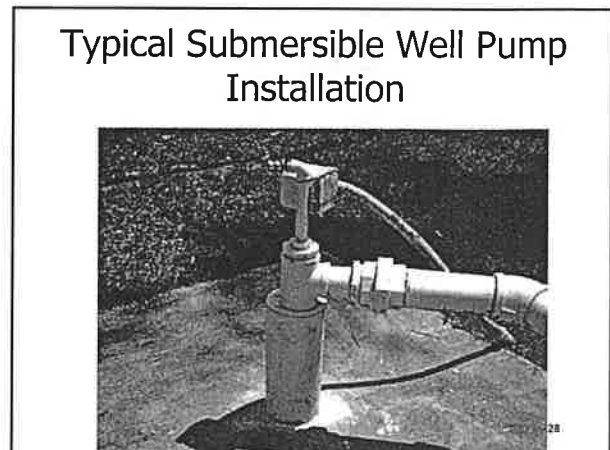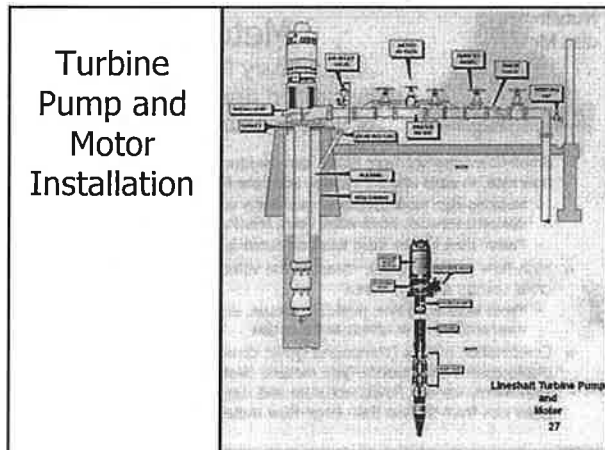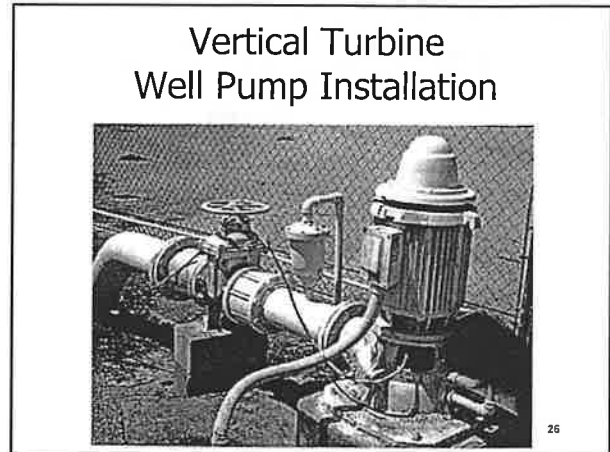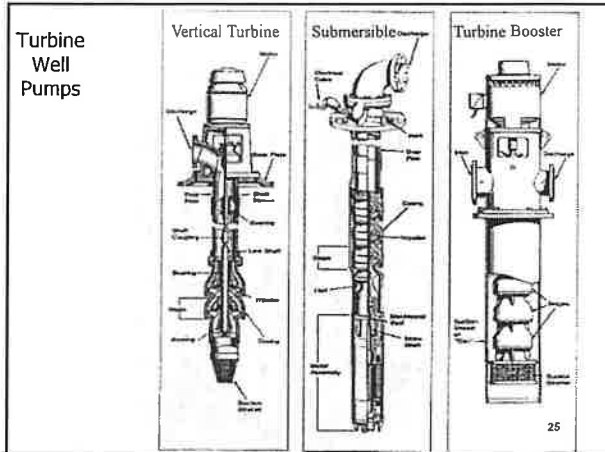

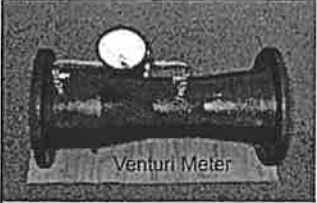

Venturi Meter

Meter Types (cont.)

- Large-flow (velocity type – sometimes called current meters)
 - Turbine: high flows and low friction loss
 - Propeller: high flows and low friction loss
 - VENTURI: DOES NOT INTERFERE WITH FLOW IF METER FAILS; ACCURATE AND CAUSE LITTLE FRICTION LOSS
 - Electronic: adversely affected by velocity interruptions; if used leave at least a distance of ten pipe diameters between an upstream obstruction or fitting and the flowmeter
 - Insertion: more severe pressure losses and are somewhat less reliable.

33

Well Field Management Preventing Contamination at the Wellhead

34

Preventing Contamination at the Well Head

#	Observation	Likely Pathway
1	Septic tanks, broken storm or san. pipes, ponds	Through Surface Strata
2	Drainage up-hill	Surface water runoff
3	Well subject to flooding	Surface water transport of contaminants
4	Casing termination	Must be 1' and above 100 yr flood plane
5	Area around well is wet	Corroded Casing Pipe
6	Possible Abandoned wells in area	Surface water intrusion from contaminated source
7	Sanitary condition unacceptable	Contaminated water intrusion

Preventing Contamination at the Well Head (continued)

#	Observation	Likely Pathway
8	Cracking in Well Slab	Contaminated water intrusion
9	Evidence of Algae or Mold on Slab	Birds and insects attracted by moist conditions
10	Poor Drainage	Surface water intrusion from contaminated source
11	Seal water draining into well head	Contaminated water entering borehole
12	Well Seal damaged	Contaminated water intrusion
13	Fittings pointing upward	Contaminated Water Intrusion Into casing
14	Well vent not properly installed	Contaminated Water intrusion into casing

Preventing Contamination at the Well Head

#	Observation	Likely Pathway
15	Check Valve absent or not working	Contaminated water back-flowing into casing
16	Cavitation or water hammer	Ck. Valve damage & water back-flowing into casing
17	Well Site Security Compromised	Contaminated Water from undesirable activities
18	Livestock or wild animals close by	Animal source of Contamination
19	Surface water evidence ID	Indicator organisms, color, temp and T&C contributing

37

Preventing Contamination at the Well Head

#	Observation	Likely Pathway
20	Several wells available	One well is more likely to contribute than others
21	Intermittent Well Operation	Contaminated occurring from long-term biological activity
22	Wet or extreme weather events	Contamination from run-off or from higher pumping levels.

38

DEP Well Setback Requirements

Minimum Setbacks

- 200 feet from septic tank if over 2000 gpd (commercial)
- 100 feet from septic tank if under 2000 gpd (residential)
- 100/50 feet from a sanitary hazard (high vs moderate risk)
- 500 feet from domestic wastewater residuals land application areas
- 500 feet from land application areas for reclaimed water

39

Water System Well Capacity Requirements

- For GWPWS serving > 350 people or 150 service connections
 - Minimum of two wells
 - Wells must meet design average daily demand with largest well out of service.
- For all GW Public Water Systems well(s) must provide capacity to meet maximum-day demand.

40

Water System Auxiliary Power Requirements

Community systems over 350 or more people, or 150 connections shall provide a minimum of 2 wells and auxiliary power for the operation of the systems source, treatment and pumping facilities at a rate of equal to average daily demand for the system.

- Auxiliary power shall be equipped with automatic startup unless 24 hr., 7 days per week supervision is provided.
- Auxiliary power shall be operated at least 1 per month for 4 hours under load.

41

Water System Wellhead Protection Requirements


- Provide wellheads with fenced & locked gate (2 hr notification to DEP for security breach).
- Provide a well site with concrete apron which is centered around well casing and is at least 6'x6'x4" and 12" above the 100 yr. flood elevation.
- Provide a flow meter for the measurement of treated water.
- Provide a check valve on the discharge line of the pump between the raw tap and chlorinator.
- No hazardous materials can be stored on-site.

42

Wellhead Protection

- Obtain Community Involvement
- Collect existing data, i.e. geology, hydrology, locations of underground storage tanks, septic tanks,
- Collect additional data and conduct surveys of the well head area
- Determine what land uses present a threat to groundwater quality
- Analyze the data and hydrogeology
- Test for contaminants
- Set well head protection zones from certain activities
- Obtain public support and implement new well head protection regulations



43

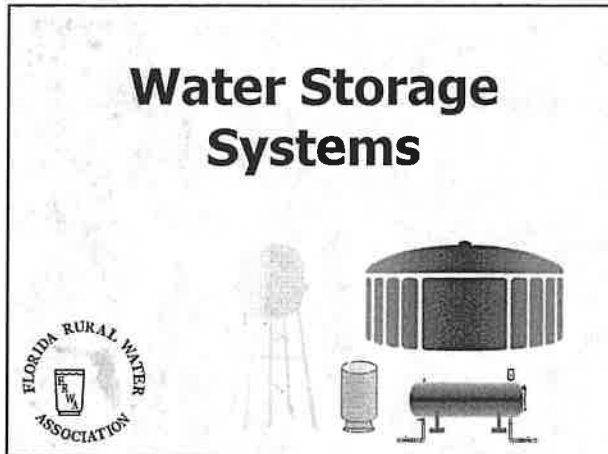



Water Storage Tanks

Types:

- Gravity or Elevated
- Ground Storage
- Hydro-pneumatic

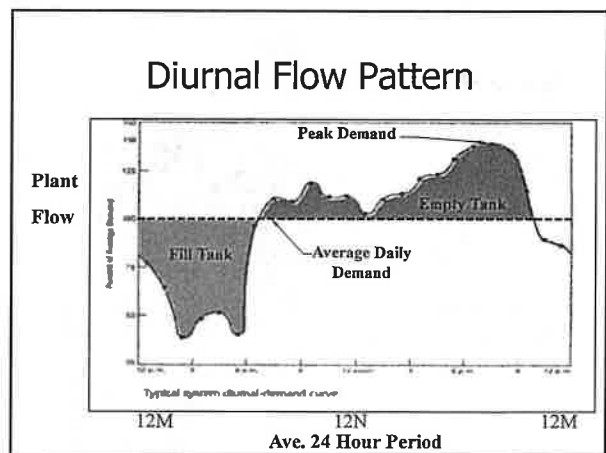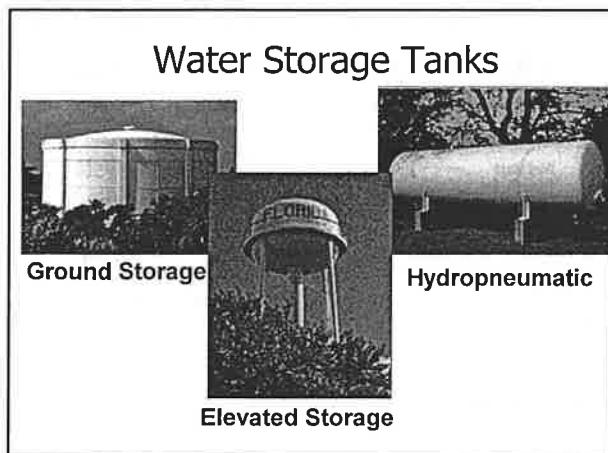

Schematic Illustrating the Benefits of a Storage Tank

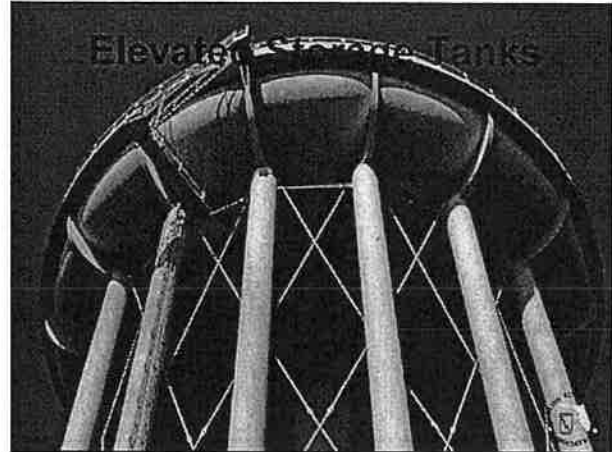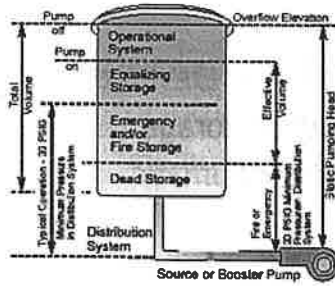


Elevated Tanks

- Stabilize distribution system pressures
- Provide water to meet peak demands
- Keeps pumps from cycling and operating in efficient ranges



Fluctuating Levels in an Elevated Storage Tank

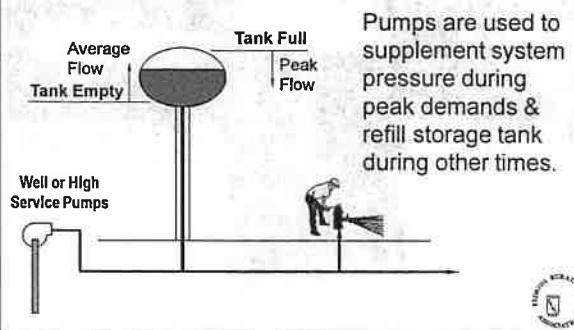


Advantages Offered by Elevated Tanks

- Less variation in pressure
- Available water for fire fighting
- Storage to meet peak demands
- Allows use of lower capacity wells
- Cycling of well pumps is reduced
- Wells can be better matched to average water demand
- High service pumps and the treatment plant can operate more efficiently

Maintenance Considerations for Elevated Water Storage Tanks


- Check for Intrusion of Water
- Secure Tank Site from unauthorized access
- Clean Tank yearly recommended (DEP 5-yr. required!)
- Ensure that overflow structures are working, secure and properly drained
- Inspect Structures for Stability, Blockages and Surface and Internal Corrosion.


Standpipes

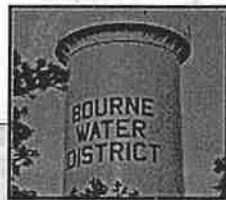

Elevated Tank and Standpipe Comparison

- Used to provide pressure head to the distribution system.
- Large storage capacity
- Shallow tanks with large diameter are preferred over deep one with small diameters.
- Less pressure drop in elevated tanks.


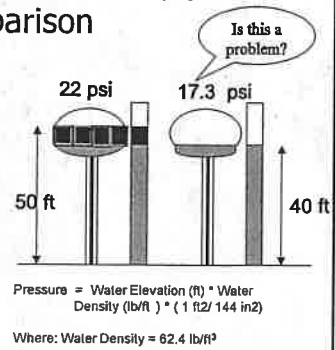


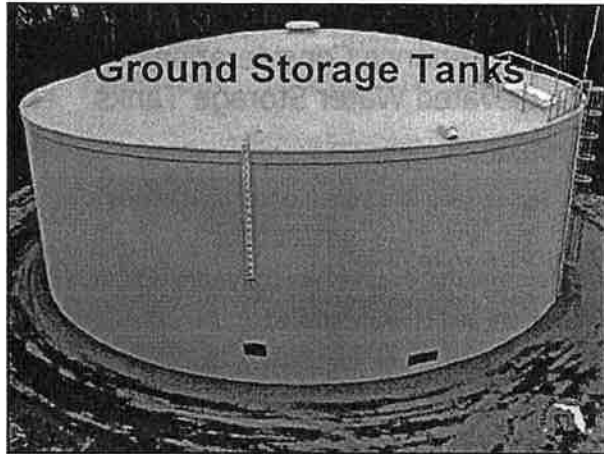

Ground Storage



- Used for storing large amounts of water.
- New Tanks must be Covered!
- Not under pressure uses transfer pumps to pressurize or pump to elevated tank.
- Sometimes has aerators on top for waters that require it.

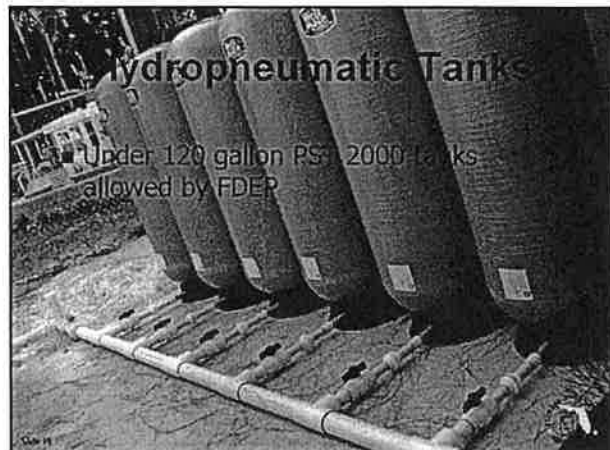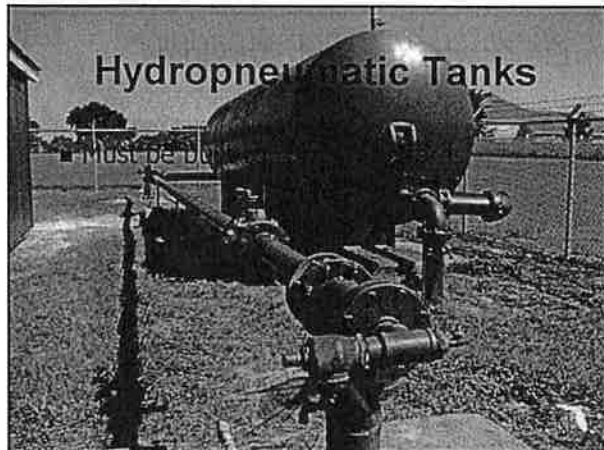



Types of Hydropneumatic Tanks

- Conventional
- Floating Wafer
- Flexible Separators
 - Flexible diaphragm
 - Bladder type

Traditional Hydropneumatic Tank

Bladder that separates air and water




Bladder Tank

Operating Considerations for Conventional Hydropneumatic Tanks

- Must have air to operate correctly
- Must have a pressure relief valve
- Need a sight glass to observe level in tank
- Must have By-pass piping for repairs
- Valve for flushing
- Air volume control
- Scheduled maintenance program

Components of Conventional Hydropneumatic System

<u>Components</u>	<u>Function</u>
■ Air Volume Control -	Control amount of air in tank
■ Relief Valve -	Prevent excessive high pressure
■ Pressure Gauge -	Monitor water/air pressure
■ Motor Controls -	Control cut-in and cut out
■ Level Controls -	Regulate high/low water levels
■ Compressor -	Replenishes Air

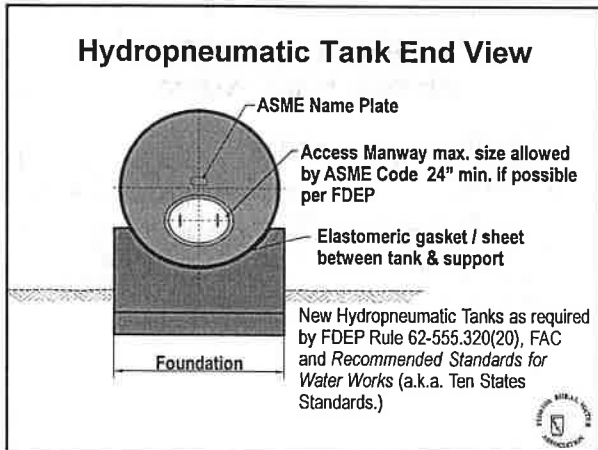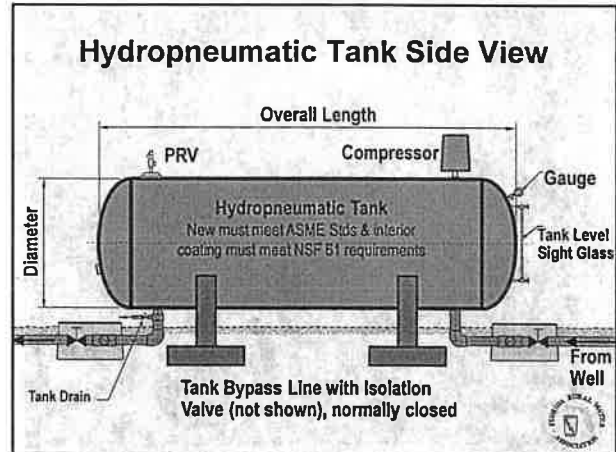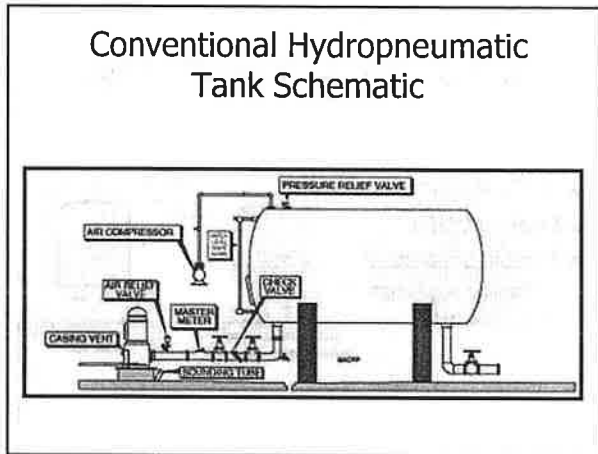

- ### Sizing Considerations for a Conventional Hydropneumatic Tank
- Capacity of the wells and pumps should be at least ten times the average daily consumption.
 - Gross volume of the tank, in gallons should be at least ten times the capacity of the largest pump, rated in gpm.
 - Sizing must consider the need for disinfectant contact time.
 - Operating pressure is generally sized to operate between 40 and 60 psi
 - The pressure pump should not cycle more than 6 to 8 times per hour


Air Compressor Maintenance Considerations




- Regularly scheduled maintenance:
- Clean or replace filters
- Drain condensate frequently
- NSF approved lubrication



Hydro-Tank Sanitary Deficiencies

- Pitting, spalling, cracks, holes, coating deterioration

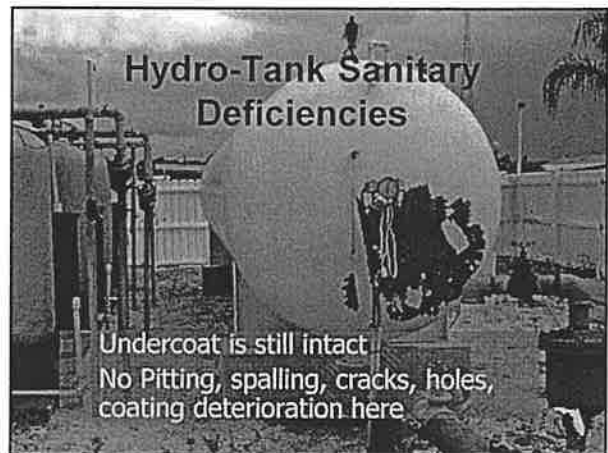

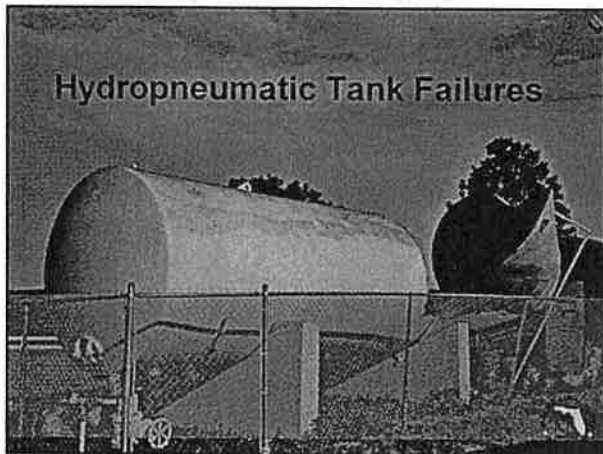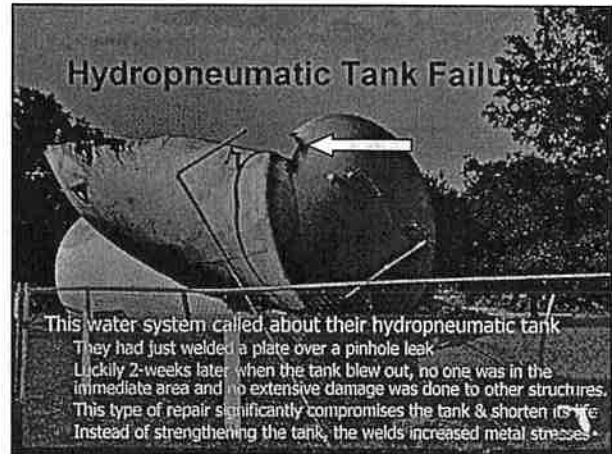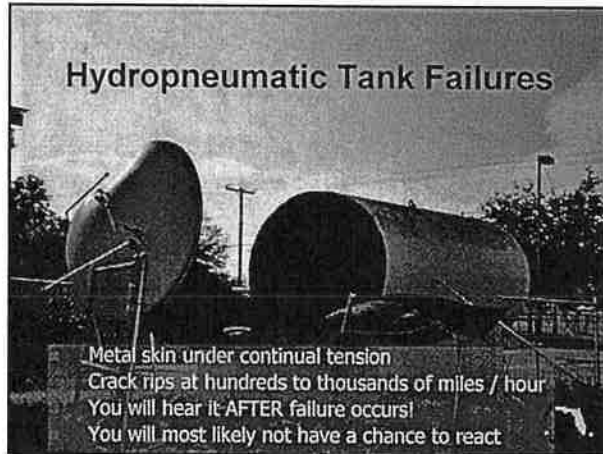

Chlorination and Disinfection

1

Disinfection and Sterilization


- Disinfection – inactivates pathogenic organisms
- Sterilization - destroys all organisms


“To all Citizens: boil and strain the water before drinking to prevent hoarseness.”
Hippocrates, 350 B.C.

2

Purpose of Disinfection

- Destroy harmful organisms
- Protect the public from disease-causing pathogens by **inactivating** pathogens to ensure that they are reduced to non-harmful levels
- The measure used to determine the effectiveness of disinfection is the coliform group; means pathogenic bacteria may be present.

Disease producing organisms are commonly called **Pathogens** 



3

Coliform Group of Bacteria

Includes all the aerobic and facultative anaerobic gram-negative, nonspore-forming, rod-shaped bacteria that ferment lactose (a sugar) within 48 hours at 35 °C (human body temperature).

4

Considerations for Choosing a Disinfectant

- Effective for the Conditions Encountered
- Economical
- Operationally practical
- Reliable
- Safe for public consumption with no unintended consequences

5

Disinfection Agents

- Heat energy
- Radiant energy – UV
- Chemical Agents

6

Disinfection by Heat

- Expensive to operate on large scale
- Used for emergency situations in distribution systems
- Precautionary Boil Water Notices are issued when the distribution system is compromised
- Clearance requires two consecutive days of negative coliform samples

7

Disinfection by Radiant Energy (Ultraviolet Radiation)

- Ultraviolet Radiation (UV) used selectively in surface water treatment plant applications
- No residual activity so chlorine is used as secondary disinfectant
- Inactivation of cysts (Giardia) and oocysts (Crypto) difficult to measure
- Very Susceptible to turbidity

8

Disinfection by Chemical Agents in the U.S.

- Chlorine and Monochloramine 93%
- Potassium Permanganate 5%
(Used as alternate oxidant w/ Cl₂ secondary)
- Ozone (O₃) 1%
(requires secondary disinfectant)
- Chlorine Dioxide 1%
(requires secondary disinfectant)
- Hydrogen Peroxide < 1%
(requires secondary disinfectant)

9

Reasons for the Selection of Chlorine as a Disinfectant

- Readily available and economical
- Low cost compared to other substances
- Proven effectiveness in relatively low dosages
- Simple feed and control procedures
- Requires safe storage and handling

10

Disadvantages in the Use of Chlorine

- Highly toxic
- Regulatory agencies placing tightening restrictions on storage and use
- Must have Emergency Response Plan
- Produces Disinfection Byproducts

11

Other Uses of Chlorine at a Water Treatment Plant

- Control Aquatic Life
- Oxidize Iron, Manganese and Sulfides
- Remove Tastes and Odors
- Maintain a Microbial Residual in Water Distribution System
- Prevent Algal Growth in Basins and Plant Process Facilities
- Improve Coagulation and Filtration

12

Use of Chlorine for Removing Taste and Odors

- Most widely used chemical for color removal
- Effective for use for organic odors such as fishy, grassy or flowery
- Very effective for removing (oxidizing) inorganics such as iron or hydrogen sulfide
- Will intensify phenolic (solvent) odors
- Will increase THM's and HAA5's
- Alternatives include Potassium Permanganate, Ozone and Chlorine Dioxide

13

Use of Potassium or Sodium Permanganate as Disinfectant

- Powerful Oxidizing Agent
- Used to Remove Fe/Mn and TOC
- Does not produce DBPs
- Shipped as a Solid (KMnO4) or Liquid (NaMnO4)
- Two to three times as expensive as Cl
- Corrosive, stains purple and can color water pink (removed with chlorine).
- Requires Secondary Disinfectant


14

Use of Ozone (O₃) as a Disinfectant

- Effective in taste in odor removal. Does not produce TTHMs or DBP
- Bromate, MCL must be controlled
- No residual, so secondary disinfectant required
- Requires on-site generation
- Unstable - not stored
- Utilizes sensitive equipment which requires careful monitoring

15

On-site Ozone Generation

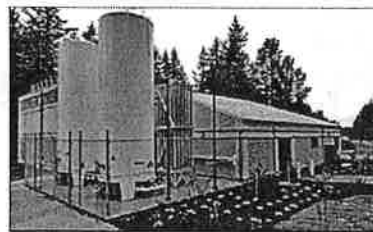

Ozone is always generated on-site. Dosing is accomplished in chamber, any residual Ozone is purged and secondary disinfectant is added.

16



Chlorine Dioxide

- Long been used for taste and odor and for iron and manganese control.
- Will not produce THMs and HAA5s.
- Can produce chlorite and chlorate residuals in drinking water. Chlorate has an established MCL.
- Must be prepared on-site and uses gas chlorination system to produce feed product.
- It is hazardous and can cause suffocation due to lack of oxygen.
- It is odorless, colorless, and will accumulate at lowest level because it is heavier than air.

17

Chloramines

- Compounds formed by the reaction of hypochlorous acid (or aqueous chlorine) with ammonia
- Used as an alternative disinfectant but is less effective as a disinfectant than free chlorine residual
- Its use dependent on raw water quality
- Effective in accomplishing these objectives:
 - Reducing formation of THMs and DBPs
 - Maintaining residual in distribution system
 - Penetrating the biofilm and reducing the potential for coliform regrowth.
 - Killing or inactivating HETEROTROPHIC plate count bacteria
 - Reducing taste and odor problems

18

Methods of Producing Chloramines

- Preammoniation followed by later chlorination (produces less THMs with no phenolic tastes and odor)
- Concurrent addition of chlorine and ammonia (produces the lowest amount of THMs)
- Prechlorination/Postammoniation (will result in formation of more THMs)

19

Use of Chlorine

20

Forms of Chlorine

- Gas Chlorine (Cl_2) - 100% available as chlorine
- Liquid Chlorine or Bleach (NaOCl) - Sodium hypochlorite (5% - 15% active chlorine) is a pale yellow liquid
- Solid Chlorine [Ca(OCl)_2] - Calcium hypochlorite comes in a granular, powdered or tablet form. It is a white solid that contains 65% to 75% available chlorine.

21

Gas Chlorine



- Lowers the pH of the water
- Produced from liquid chlorine shipped in pressurized cylinders
- 100% available as chlorine
- Moisture in a chlorination system will combine with the chlorine gas and cause corrosion

22

Liquid Chlorine (Sodium Hypochlorite)



- Liquid chlorine raises the pH of the water
- Arrives in a plastic container
- 5 -15% chlorine by weight
- More expensive than converting chlorine in liquid form to gas
- Safe and easy to handle and dose
- Very corrosive
- Toxic - apply in vented area
- Weakens over time

23

Solid Chlorine (Calcium hypochlorite)

- Solid chlorine raises the pH of the water
- 65% to 75% available chlorine
- Easily dissolves in water
- Easy to store; longer shelf life than liquid
- Very corrosive
- Highly reactive
- Toxic - apply in vented area
- Undissolved solids can foul check valves and plug injection fittings

24




Factors Affecting Chlorination Effectiveness

- Chlorine concentration (higher increases effectiveness)
- Form (gas lowers pH, more effective)
- Effluent pH (lower increases effectiveness)
- Effluent temperature (higher increases effectiveness)
- Contact time (generally, longer increases effectiveness)
- Effluent suspended solids (turbidity reduces effectiveness)

25

Chlorine Residual Requirements in Distribution System

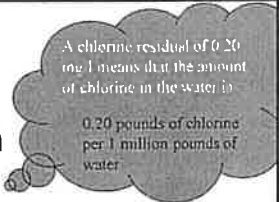

A free chlorine residual of 0.20 mg/l or a combined chlorine residual of 0.60 mg/l or an equivalent chlorine dioxide residual, must be maintained in the water distribution system at all times.

26

Breakpoint Chlorination

Breakpoint chlorination is the process of adding chlorine to water until the chlorine demand has been satisfied.

- Further additions of chlorine will result in a chlorine residual that is directly proportional to the amount of chlorine added beyond the breakpoint
- Public water supplies are normally chlorinated PAST THE BREAKPOINT.

27


Reactions of Chlorine with Water Constituents



Order of Reaction

1. Reducing agents (inorganics)
(hydrogen sulfide (H₂S), ferrous ion (Fe²⁺), manganous ion (Mn²⁺), and nitrite ion (NO₂⁻))
2. Reducing agents (organics and ammonia)
Chloramines and chlororganics will form
3. Chlororganics and chloramines partly destroyed
4. Breakpoint - Free available residual formed (some chlororganics remain)
5. Process is called "Breakpoint Chlorination"

28

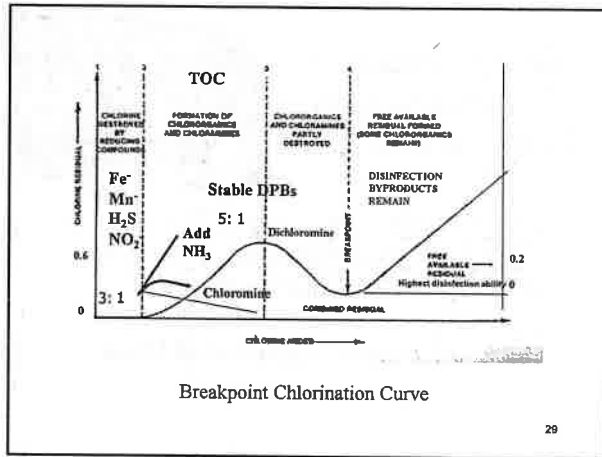

Process Calculations

- Two process calculations
 - Chlorine dosage, mg/l
 - Chlorine demand, mg/l
- To calculate dose use feed rate formula or use Davidson's Pie

$$\text{Chemical feed, lbs/day} = \frac{(\text{Chlorine Dose, mg/l})(\text{Flow, MGD})(8.34 \text{ lbs/gal})}{(\text{Purity, decimal})}$$

$$\text{Chlorine Dose, mg/l} = \frac{(\text{Chemical feed, lbs/day})(\text{Purity, decimal})}{(\text{Flow, MGD})(8.34 \text{ lbs/gal})}$$

30

Example: A chlorinator is set to feed 15 pounds of chlorine in 12 hours to a flow of 0.95 MGD. Find the chlorine dose in mg/l.

$$\text{Chlorine Dose, mg/l} = \frac{(\text{Chemical feed, lbs/day})(\text{Purity, decimal})}{(\text{Flow, MGD})(8.34 \text{ lbs/gal})}$$

$$\text{Chlorine Dose, mg/l} = \frac{30 \text{ lbs Cl/day}}{(0.95 \text{ MGD})(8.34 \text{ lbs/gal})}$$

$$\text{Chlorine Dose, mg/l} = 3.8 \text{ lbs Cl/million lbs of water}$$

$$\text{or} = 3.8 \text{ ppm or } 3.8 \text{ mg/l}$$

31



Chlorine Relationships

$$\text{CL Dose} = \text{Chlorine Residual} + \text{CL Demand}$$

$$\text{Chlorine Residual} = \text{CL Dose} - \text{CL Demand}$$

$$\text{CL Demand} = \text{CL Dose} - \text{Chlorine Residual}$$

32

Determine the chlorine demand in mg/l for our previous example if the chlorine residual after 30 minutes of contact time is 1.0 mg/l.


$$\text{Chlorine Demand} = \text{CL Dose} - \text{CL Residual}$$

$$\text{Chlorine Demand} = 3.8 \text{ mg/l} - 1.0 \text{ mg/l}$$

$$\text{Chlorine Demand} = 2.8 \text{ mg/l}$$

33

Inactivation of Bacteria and Virus with Chlorine

- Inactivation of Pathogens is accomplished by meeting CT limits (Time that Pathogen is in contact with concentration of residual chlorine) 
- 3-Log Giardia Inactivation for SW— 99.9%
- 4-Log Virus Inactivation for GW— 99.99%
- Tables of acceptable Inactivation (mg-min/l) are published by DEP

34

Chlorine Residual

- Free Chlorine - aqueous chlorine, hypochlorite ion and hypochlorous acid
- Combined Chlorine Residual - compounds formed by reactions of hypochlorous acid and ammonia (chloramines)
- Total Chlorine Residual - sum of free and combined chlorine

35

Minimum Chlorine Residual

- DEP requirements are 0.20 PPM Free Chlorine Residual or 0.60 PPM Chloramine Residual at all points in Distribution System

The most probable cause of the coliform count falling to meet regulatory standards is?

A low chlorine residual

36

Considerations for Hypochlorination Systems

37

Difference between Gas and Hypochlorination


- Gas chlorine lowers the pH (increases the hydrogen concentration) favoring the formation of Hypochlorous acid (more effective)
- Hypochlorination (both Sodium and Calcium) raises the pH favoring the formation of the Hypochlorite ion. (less effective)

38

Parts of a Hypochlorinator

Parts:

- Mixing Tank
- Metering Pump
- Check Valve
- Well Pump

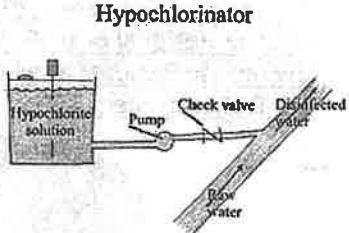




Hypochlorinator

39

Chemical Feed Pumps

2 Basic Types

- Peristaltic (tube or hose) 
- Diaphragm (solenoid, Motor or Hydraulic) 



40

Parameter	Peristaltic Pump	Diaphragm Pump
Fluid		
Chemical resistance	- Fewer components to be attacked. Few pump tube material options. - Excellent: no valves to clog.	- Many components to be attacked. Many component material options. - Poor: valves can clog causing failures.
Un-dissolved solids	- Excellent: automatically primes	- Poor: difficult to prime
Outgassing	- Excellent: will not damage fluid	- Poor: can damage delicate fluid
Shear stress	- Limited range: pump tubing is affected by high and low temperatures.	- Extended range: effect of temperature on the diaphragm is minimal.
Temperature		
Pressure		
Injection Pressure	- Limited discharge range - <125psi typical. No change in output due to changes in system pressures.	- Extended discharge range - >125psi typical. Large change in output due to changes in system pressure.
Control		
Remote Adjustment	- Excellent: steady dispersion of chemical at very low output with speed adjustment.	- Good: intermittent dispersion of chemical at low outputs.
External communications	- Excellent	- Excellent
Diagnostics	- Excellent: tube failure and flow verification alarm systems available.	- Excellent: diaphragm failure and flow verification alarm systems available.
Maintenance		
Service interval	- Service required at regular intervals.	- Service recommended at regular intervals.
Life expectancy	- Excellent	- Excellent

Diaphragm Metering Pump

Change stroke length only when running

- The coil is energized via electrical charge on the board
- The solenoid shaft pushes the diaphragm into the pump head cavity
- The suction ball valve seats (via gravity)
- Liquid in the pump head is forced out through the discharge valve as the ball is forced to raise in the guide

Peristaltic Metering Pump

- A motor drives a shaft that is connected to rollers
- The rollers push the tubing flat against the collet which drives the liquid through the tube

Color collet depending on tubing I.D.


Hypochlorination System Maintenance Considerations

Cl lines are what color? YELLOW

- Scale has a tendency to form in pumps, feed lines, and injection points
- Regularly inspect and clean pumps, poppet valves, and injector points. If this is not done, scale will prevent the pump from moving solution into the water to be disinfected. Monitoring chlorine residuals may point to needed pump maintenance.
- Clean by pumping a mild acid (HCL) solution through system.
- Pump should be properly lubricated and free of corrosion
- Adjust feed rate only when running
- Do not store chemical for long periods
 - @ Date of Manf. 12.5% after 30 days 11.5%

Considerations for Hypochlorite Storage

- Protect skin, eyes, and respiratory tract
- Wear protective gloves Hypochlorite will burn skin
- Cover all containers
- Keep chemical dry, covered and stored away from direct sunlight.
- Add water to container before the hypochlorite is added to avoid splashing of acid.
- Flush all spills with large amounts of water
- Keep the chlorine room well ventilated.
- Store Calcium hypochlorite away from contact with organic matter to prevent fire.




45

Considerations for Gas Chlorination Systems

46

Physical and Chemical Properties of Chlorine as a Gas



- Pressurized liquid expands 450 times in atmosphere
- Under normal atmospheric pressure at room temperature, chlorine is a yellow-green gas
- 2.5 times heavier than air

Exhaust fans should be located where?
Floor level.

47

Maximum Draw-Off Rates


150 lb cylinders - approximately 40 lbs/day
 1-ton containers - approximately 400 lbs/day
 Computed as 8 pounds / F° drop

- Temperature of remaining chlorine decreases as the rate of withdrawal increases
- When temperature of chlorine is low enough it will not evaporate

48

Preventing Chlorine Icing


- When attempting to feed more than the allowable amount from any container, manifolding is required

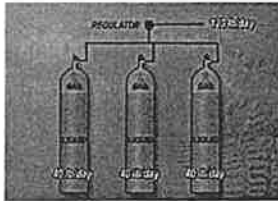


Computed as 8 pounds / F° drop

49

Dosing Configurations of Chlorine Cylinders

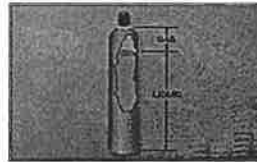

150 lbs Cl - 92 lbs Tare
Total Weight ~ 242 lbs

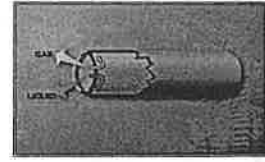

2000 lbs Cl - 1550 lbs Tare
Total Weight ~ 3,600 lbs




When exposed to heat gas inside tank will expand and could easily rupture a cylinder. For this reason cylinders are not filled to more than 85% of their volume.

50

Storage of Chlorine Cylinders

- Keep away from heat or direct sunlight.
- Provide separate room with ventilation.
- Maintain temperature above 50°F to prevent icing.
- Protect from Fire
- Never store near turpentine, ether, anhydrous ammonia, hydrocarbons or other materials that will react violently with chlorine.

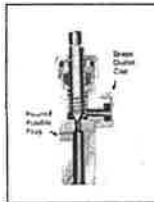


- Chlorine tanks are provided with fusible plugs that melt between 158 to 165 degrees F.
- Ton cylinders will have 6 to 8 of these plugs, 3 or 4 on each end; 150 lb, one below the valve seat.



51

Safe Handling of 1-Ton Cylinder

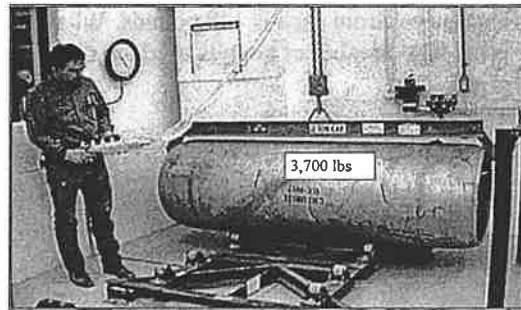

52

Principles of Gas Chlorination

Feed pump is not pumping, what is the problem?
Vacuum leak

- Pressure Regulating Valve - maintains proper operating pressure
- Rotameter - indicates the rate of flow
- Regulator - used to adjust the CL feed rate
- Injector - injects gas into flow stream

Primary advantage of vacuum operation is safety. If there is a break in vacuum the chlorinator stops the flow of chlorine.

53

Disinfection Troubleshooting

Symptom	Cause
<ul style="list-style-type: none"> ■ Increase in coliform level ■ Drop in chlorine level 	<ul style="list-style-type: none"> ■ Low chlorine residual level ■ Increase in chlorine demand ■ Drop in chlorine feed rate

54

- Question: A plant uses 647 chlorine containers in a year. The average withdrawal from each is 138 pounds. What is the total number of pounds used for the year?

- 89,286 lb
- 28,487 lb
- 89,875 lb
- 69,876 lb

55

Find the Chlorine Dose

A chlorinator is set to feed 20lbs of chlorine in 12 hrs to a flow of 0.85 MGD. Find the chlorine dose in mg/l.

Dose = Feed / (flow x 8.34)

Check units

$$\text{Feed} = \frac{20\text{lbs}}{12\text{hrs}} \times \frac{24\text{hrs}}{1\text{ day}} = \frac{40\text{lbs}}{\text{day}}$$

$$\text{Dose} = \frac{40\text{lbs}}{\text{day}} \times \frac{\text{day}}{0.85\text{ MGD}} \times \frac{\text{gal}}{8.34\text{lbs}}$$


Dose = 5.6 ppm or 5.6 mg/l

56

Chlorine Safety

57


All Forms of Chlorine are Hazardous



- Chlorine gas/liquid - extremely hazardous substance
- Calcium hypochlorite and sodium hypochlorite - hazardous substance
- Disinfection agents kill living organisms and tissue


58

Chlorinator Start Up

- Use Self Contained Breathing Apparatus, Protective Clothing and work in pairs
- Inspect cylinder before connecting
- Check fittings
- Use new lead gasket 
- Connect yoke with ¾ turn
- Open cylinder valve one turn
- Check for leaks with ammonia (rag preferable)
- Have emergency repair equipment on-hand (A-kit 150, B-kit 2000, C-kit tank car)

59

Chlorine Leaks



- Inspect for leaks by placing an ammonia - soaked rag near each valve and joint.
- A polyethylene "squeeze bottle" filled with ammonia water to dispense ammonia vapor may also be used.
- Avoid spraying ammonia water on any leak or touching the soaked cloth to any metal (will form acid).
- The formation of a white cloud of vapor will indicate a chlorine leak .

60

Emergency Eyewash Shower at Small Plant



61

Effects of Chlorine on Humans

If a victim of chlorine gas contact has throat irritation, what liquid will help to reduce the irritation?

MILK

Chlorine Conc	Physiological Response
■ 0.3-3.5 mg/L	■ detectable by smell & devices
■ 5 mg/L	■ noxiousness
■ 15 mg/L	■ throat irritation
■ 30 mg/L	■ causes coughing
■ 40-60 mg/L	■ damage to tissue
■ 1000 mg/L	■ death after a few breaths
- Permissible Exposure Level (PEL) is 0.5 ppm (8-hour weighted average)	
- Immediately Dangerous to Life or Health (IDLH) concentration is 10 ppm	

62

Contents of a Chlorine Emergency Preparedness Program

- Chlorine Safety Program
- Written Rules and Safety Procedures
- Periodic hand-on training
- Establishment of Emergency Procedures
- Establishment of Maintenance and Calibration Program
- Fire, Police, Emergency Agency Coordination and (Chemtrec 800-424-9300.)

63

Fluoridation

64

Fluoridation Considerations

- Added as Supplement to Natural Occurring Concentrations
- Typically 1 to 1.2 mg/l as Fluoride
- Regulated MCL at 4 mg/l SDA and 2 mg/l DEP
- Halogen and as Oxidant very Active!
- Overdosing causes mottling of teeth and bone deterioration
- When working with fluoridation systems using sodium fluoride, a hardness greater than 75 mg/l will cause severe scaling in the equipment.

65

Fluoride Compounds

Compound Name	Formula	Purity	pH
Sodium Fluoride	NaF	97%	7.6
Sodium Fluorosilicate	Na ₂ SiF ₆	98%	3.6
Hydrofluoro-silicic Acid *	H ₂ SiF ₆	23%	1.2



* Because hydrofluosilicic acid is a liquid it is the easiest to feed and requires the least maintenance

66

Symptoms of Fluoride Poisoning

When swallowed

- Vomiting
- Stomach cramps
- Diarrhea

When inhaled

- Sharp biting pain in the nose
- Runny nose
- Nosebleed

67

Disinfection and Disinfection Byproducts (DBP)

1


Regulatory Requirements for Disinfection By-Product Management & Disinfection By-Product Monitoring for Water Treatment Plants

2

DPB Rule Requirements

Rule/Requirement	Applicability/Rule or Change	Key Dates
Stage 1 D & DBPs- Compliance with D/DBPs	Monitor Mo'ly/ Qtr 'ly Ave. D-DBPs	1/01/04
Stage 2 D & DBPs- Compliance with D/DBPs	All SWTP & UDI Individual D-DBPs	mid.-2005
Interim Enhanced Surface Water Treatment- Disinfection Profiles (DP)	All SWTP & UDI DP at Dosing Points	1/14/06
Filter Backwash Recycle- Monitoring & Construction	All SWTP & UDI New Facilities on-line	6/08/06
Stage 2 D & DBPs- Compliance with IDSE	All CWS	10/01/06 Varies ³

Disinfection By-Product (DBP) Formation

- Disinfection Byproducts (DBP) are produced by the reaction of free chlorine with organic substances found in natural waters (formed from decomposition of vegetation). 
- The amount of organic materials in a natural water called NOM can be approximated by the amount of Total Organic Carbon (TOC) present in the water source.
- NOM consists of various chemical compounds containing carbon, originating from decayed natural vegetative matter found in water.

4

Raw Water Considerations

- Generally surface waters or ground waters under the direct influence of surface water will have higher levels of organic materials (TOC.)
- Surface waters have higher organic content than Ground Water
- If surface water mixes with ground water, each well may experience different levels of TOCs.
- Type of organic content will influence how the water is treated.
 - Specific type of TOC can be determined by conducting a Specific Ultraviolet Absorption (SUVA) test.
 - Used to determine if enhanced coagulation is appropriate.

6

DBP Health Impacts

- Can be carcinogenic (cancer causing)
- Can cause reproduction problems
- Can damage blood or kidneys
- For these reasons, EPA has set DBP limits in the drinking water

6

Production of Trihalomethanes

- Trihalomethanes (THMs) are produced by the reaction of chlorine with organic constituents found in natural waters.
- The 4 compounds of concern are:
 - Chloroform (typically 70%)
 - Bromoform
 - Bromodichloromethane
 - Dibromochloromethane
- The sum of the concentrations of these four compounds are Total Trihalomethanes (TTHMs)

7

Production of Haloacetic Acids

- Haloacetic Acids (HAA5) are produced by the addition of chlorine with organic constituent found in natural waters
- The 5 compounds of concern are:
 - Monochloroacetic Acid
 - Dichloroacetic Acid
 - Trichloroacetic Acid
 - Monobromoacetic Acid
 - Dibromoacetic Acid
- The total concentrations of these five compounds are known as HAA5s

8

Disinfection Byproducts (DBP) and Chlorination Considerations

- DBP's are produced by the reaction of free chlorine with organic material called "precursors"
- "Precursors" are best reduced prior to chlorination for minimizing DBP production

9

Factors Affecting Disinfection By-Product Production

- Turbidity and the type of NOM present
- Concentration of Chlorine added
- pH of water
- Bromide Ion Concentration
- Temperature
- Contact Time

10


Which will have a Higher DBP Formation Potential?

- A softening plant or a plant using conventional coagulation?
 - Softening
- A surface water treatment plant or a ground water treatment plant in the summer?
 - Surface Water Treatment Plant

11

Locating TTHM Areas

- High Water Age
- Storage Tanks do not fluctuate
- No / Few Customer Areas
- Stagnant Areas
- Dead Ends
- Bad Pipe
- Regrowth Areas

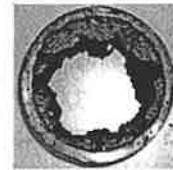

Pipe Tuberculation
with Bacterial
Growth producing
Organic Precursors

12

Locating HAA5 Areas

- Low Demand Areas
- Toward Middle System Areas w/ Stagnant / High Water Age
- Areas with No / Little Regrowth
 - Eliminate Biodegradation Locations
 - Free Chlorine Residuals < 0.2 mg/L
 - HPC Data
- No Dead Ends

13

Treatment Techniques for Controlling DBPs

14

Which of the following will increase the production of THMs?



1. Using chloramines as a disinfectant
2. Using chlorine dioxide
3. Using PAC or GAC to reduce precursors
4. Using prechlorination in the treatment process

15

Strategies for Reducing DBPs in Order of Cost Effectiveness

- Precursor Removal
- Disinfection By-Product Management using System Flushing and Storage Tank Management
- Use of Alternative Disinfection Strategies
- Disinfection By-Product Removal

16

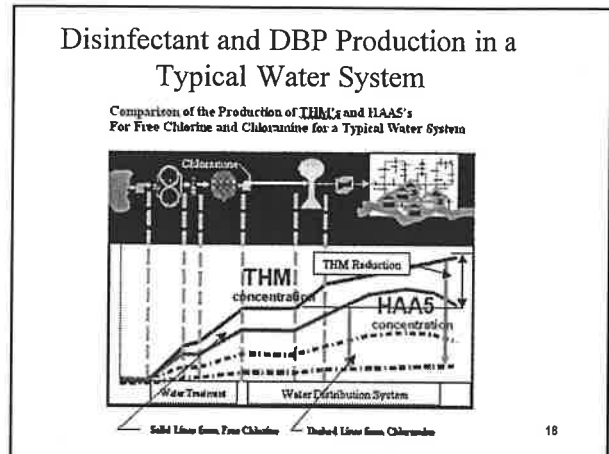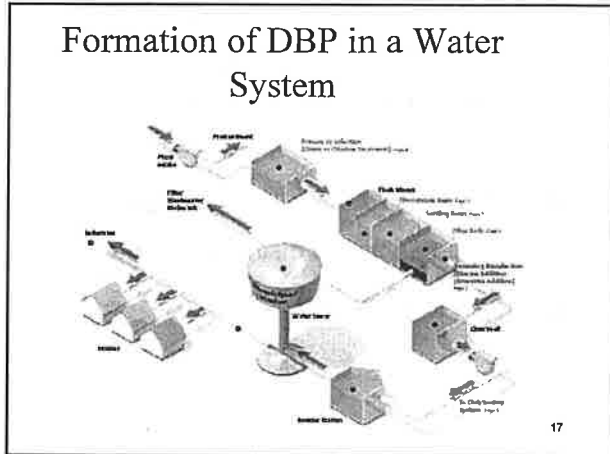

DBP Precursor Reduction Strategies

- ### Methods for Reducing Precursors
- Disinfection By-Product Management
i.e. Nutrient control in source and finished water.
 - Solids removal systems including:
pre-sedimentation, infiltration galleries, filtration, coagulation and membrane filtration.
 - Addition of powdered or granular activated carbon to remove organics.

DBP Management in a Water Distribution System

21

DBP Reduction Techniques in a Water Distribution System

- Reducing detention time in storage tanks
- Ensuring turnover in distribution system
- Flushing dead-end lines.

22

Typical Distribution System Water Age (Days)

Population	Miles of WM	Water Age
> 750,000	> 1,000	1 – 7 days
< 100,000	< 400	> 16 days
< 25,000	< 100	12 – 24 days

AWWA: Water Age for Ave and Dead End Conditions

23

Effects of Water Age on DBP Production

Relationship Between TTHM Concentrations and Distribution System Residence Time

Franchi and Hill, 2002

24

Problems with Water Turnover and Sediments in Storage Tanks

- Sediments contain significant concentrations of organic nutrients
- Sediments exert a disinfectant demand
- Sediments provide protective layers for biofilms which allow pathogens to repair
- Sediments encourage the growth of slow growing nitrifying bacteria that lower residual
- Can contribute toward the formation of DBPs
- Can cause turbidity, taste and odor problems

25

Turnover Guidelines for Water Storage Tanks

Georgia - Daily Goal: 50% of storage volume
 - Minimum: 30% of storage volume

Virginia - Complete turnover every 72 hrs

Ohio - *Required* Daily: 20% of storage volume
 - Recommended 25% of volume

26

DBP Reduction by Establishment of a Flushing Program

Flushing Program	Suggested Actions/DEP Rule	Benefits to Treatment System
Written Flushing Procedures	Submit a Written Water Main Flushing Program. DEP Rule 62-555.350	Sampling is during normal operating conditions, and is not valid if you ONLY flush the day you are collecting samples
Treatment Components in Contact With Water	Clean & remove biogrowths, calcium or iron / manganese deposits, & sludge DEP Rule 62-555.350(2)	Improves water quality, reduces chlorine demand & regrowth in the water system.
Reservoirs and Storage Tanks	Clean & remove biogrowths, Ca or Fe / Mn deposits, & sludge from storage tanks. DEP Rule 62-555.350(2) FAC	Improves water quality, reduces chlorine demand & biological regrowth in the water system.
Water Distribution Mains	Begin systematic flushing of water system from treatment plant to system extremities.	Improves water quality, reduces chlorine demand & biological regrowth in the water system.
Dead-End Water Mains	Flushing (every other day) or Automatic Flushing. DEP Rule 62-555.350(2)	Improves water quality, & reduces biological regrowth.

27

In-Plant DBP Management Disinfectant Strategies

28

Use of Disinfectant Strategies

- Reduce Dosing Concentration of Disinfectant
- Change Points of Application
- Change forms of Disinfectant
- Use of Multiple Disinfectants
- Change Disinfectant


29

Effective Chlorination System Modification Strategies

Disinfection Location	Action	Benefit
Chlorine Feed	Reduce chlorine feed rates while maintaining proper chlorine residuals	Fewer DBPs formed in the water system. No / little cost for this option.
Chlorine Injection Point	Change point of chlorine injection to reduce the age of chlorinated water	Fewer DBPs formed in the water system. Small cost for this option.
Chlorine Injection Boosters	Add chlorine injection point(s) to boost Chlorine residuals in the distribution system instead of at the plant	Lower total chlorine added at the plant site. Fewer DBPs formed in the distribution system.
Alternate Disinfection / Application	Use of chloramines in distribution systems with long detention times with ozone or chlorine dioxide as a primary disinfectant	Fewer DBPs formed in the water system. Costs for this option could be significant.

30

Effects of Moving the Point of Disinfection

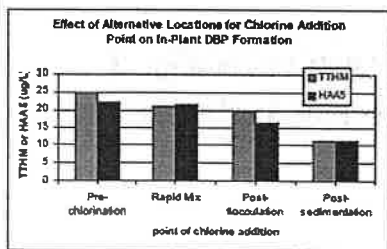

- Pre-chlorination is used to oxidize taste and odor problems but causes DBPs.
- Moving the point of disinfection is effective because TOC is being removed at each step in the treatment process

31

Changing the Disinfectant to the Use of Chloramines

32

Chloramines are Formed by adding Ammonia to Chlorine

- Ammonia Gas (anhydrous ammonia): fed like chlorine gas.
- Aqueous Ammonia: anhydrous ammonia dissolved into deionized or softened water. Feed is similar to other chemical feed systems
- Chlorine and ammonia reactions
 $NH_3 + HOCl = NH_2Cl + H_2O$ (Monochloramine)
 $NH_2Cl + HOCl = NHCl_2 + H_2O$ (Dichloramine)
 $NHCl_2 + HOCl = NCl_3 + H_2O$ (Nitrogen Trichloride)

33

Chloramine Advantages

- Chloramines Not As Reactive With Organic Compounds
- Chloramine Residual are More Stable & Longer Lasting
- Chloramines Provides Better Protection Against Bacterial Regrowth in Systems with Large Storage Tanks & Dead End Water Mains when Residuals are Maintained
- Since Chloramines Do Not React With Organic Compounds; Less Taste & Odor Complaints
- Chloramines Are Inexpensive
- Chloramines Easy to Make

34

Chloramine Disadvantages

- Not as strong as other disinfectants
Eg. Chlorine, ozone, & chlorine dioxide
- Cannot oxidize iron, manganese, & sulfides.
- Necessary to periodically convert to free chlorine for biofilm control in the water distribution system
- Chloramine less effective at high pH than low pH
- Forms of chloramine such as dichloramine cause treatment & operating problems
- Excess ammonia leads to nitrification
- Problems in maintaining residual in dead ends & other locations

35

Nitrification Concerns in Water Storage Tanks with the Use of Chloramine

- Nitrification is the conversion of ammonia to nitrate (can cause serious health effects)
- During conversion a small amount of nitrite is produced and will rapidly consume free chlorine and chloramine disinfectants.
- Nitrification can cause a loss of total chlorine and ammonia residuals and an increase in heterotrophic plate count (HPC) bacteria concentration.
- Occurs in dark areas, at pH > 7, at warm temperatures and long detention times
- Must ensure that disinfectant residual levels are adequate (> 1.5 ppm chloramine with 2.5 mg/l recommended)

36

Nitrification Monitoring Indicators

- Depressed Disinfectant Levels
- Elevated DBPs
- Elevated Bacterial Counts (HPC)*
- Elevated Nitrate/Nitrite Levels for Chloramination Systems
- High Corrosion Potential
- Note: Direct Monitoring ineffective

* HPC use organic carbon as food, include total coliform;
Not to exceed 500/ml in 95% of samples

37

Biofilms in Drinking Water Distribution Systems



- Found anywhere in a distribution system where water contacts a surface
- Formed when microbial cells (large particles, including microorganisms) attach to pipe surfaces and form a slime layer
- Microorganisms convert dissolved organic material into biomass
- Water flowing past cells provide nutrients for survival and growth
- Bacteria comprise largest portion of biofilm
- Cause esthetic problems with water quality, including taste, odor, and color problems
- Pathogens can exist even in the presence of high levels of free chlorine

38

How do microorganisms get in the system?

Microorganisms enter through two main categories:

- Surviving the treatment process
 - effectively treated water contains some bacteria
 - potable water is not sterile
- Recontamination
 - cross connections
 - back flow
 - leaking pipes, joints, and valves

39

Biofilm Management

- Regular line flushing
- Maintain adequate residual levels
- Monochloramine more effective at controlling biofilm growth
 - Chlorine does not penetrate thick biofilms and sediments
 - Chlorine consumed by side reactions with organic material
- Additional in-plant treatment to reduce organic carbon levels
- Corrosion control

40

Direct Removal of DBP

41

Disinfection By-Product
Removal Systems

- Oxidation: Ozone, Chlorine Dioxide, and UV.
- Aeration: Open Storage, Diffused Air and Packed Towers.
- Adsorption: Powdered Activated Carbon and Synthetic Resins

42

DEP Water Quality and
Treatment Process Requirements
for D - DBP

43

Safe Drinking Water Act
MCL's for TTHM, HAA5, Chlorite
and Bromate

- TTHM .080 mg/l
- HAA5 .060 mg/l
- Chlorite 1.0 mg/l*
- Bromate 0.010 mg/l **

* associated with the use of Chlorine Dioxide

** naturally occurring precursor in systems near saltwater, associated with use of Ozone

44

Also Maximum Residual Disinfectant Limit

Chlorine	4 mg/l
Chloramine	4 mg/l
Chlorine Dioxide	0.8 mg/l

These concentrations have been found to have adverse health effects

45

Inactivation Reductions for Pathogens required for Surface Water/UDI Systems

- Giardia lamblia 99.9% or 3 log
- Viruses 99.99% or 4 log
- Cryptosporidium 99% or 2 log *

Water Systems are assumed to be in compliance if they use conventional or direct filtration and meet turbidity requirements

46

Simultaneous Compliance Balancing Disinfection Protection with DBP Removal

- Deactivation is proportional to concentration of chlorine and contact time ($C \times T$).
- Reducing free chlorine (C) will reduce disinfection inactivation potential but reduce DBP formation potential.
- Reducing contact time (T) will reduce disinfection potential and reduce DBP formation potential.

47

General Guidelines for Surface Water Treatment

48

Turbidity Standards

Alternative filtration technology in combination with disinfection consistently achieves removal and/or inactivation of:



- 99.9% of Giardia lamblia cysts (filtration + disinfection)
- 99.99% of viruses (filtration + disinfection)
- 99% of Cryptosporidium (filtration alone) (Interim Enhanced SWTR 12/16/98)

49

Turbidity Reductions for Subpart H Treatment Plants Using Conventional or Direct Filtration

- 95% of samples taken each month must be less than 0.3 NTUs
- no one sample can exceed 1 NTU

Plants meeting these criteria are assumed to meet the 2 log removal for Cryptosporidium

50

Subpart H System requirements for Conventional Filtration


- Must use enhanced coagulation or enhanced softening
- may be exempted if source water are consistently below 2.0 mg/l TOC and 2.0 L/mg-m SUVA
- can achieve .040 mg/l TTHM and .030 mg/l HAA5

51

Considerations for Required TOC Reductions for Subpart H Plants for Enhanced Coagulation and Softening

- High TOC source water concentrations require greater removal rates
- Higher Alkalinity source water concentrations the lower the removal rate

52

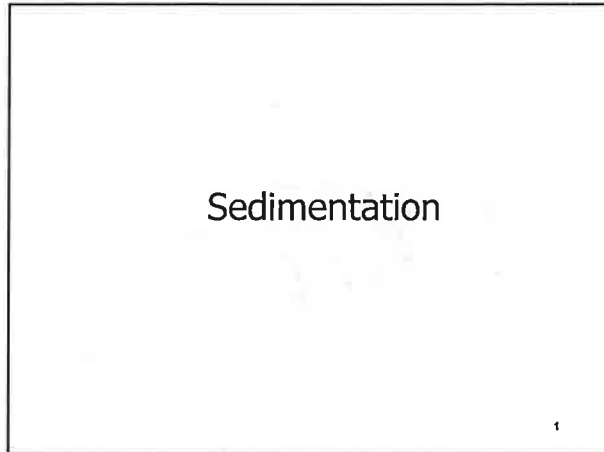

Theory of Sedimentation

- Slow velocity of water to provide sedimentation
- Two to four hours detention is usually provided
- Velocity through the basin should be from 1 to 3 feet per minute.

Types of Basins

Rectangular



- Achieve Higher Solids Removal
- Less Sensitive to Short Circuiting

Circular

- More Compact per Unit Space

Factors That Affect Particle Settling

1. Particle size and distribution
2. Shape of the particles
3. Density of particles
4. Temperature (viscosity and density of water)
5. Electrical charge on particles
6. Dissolved substances in the water
7. Flocculation characteristics of particles
8. Wind
9. Inlet and outlet conditions and shape of basin

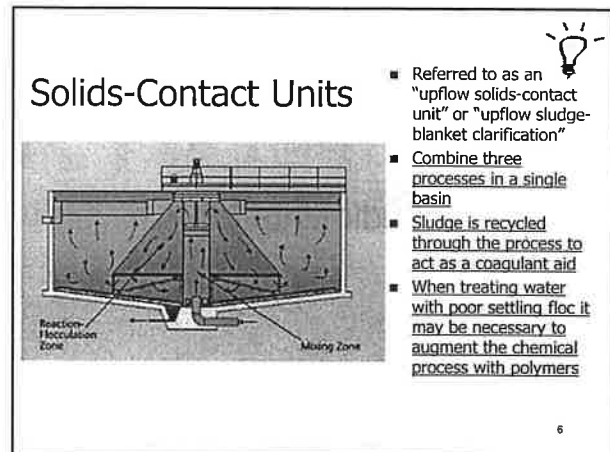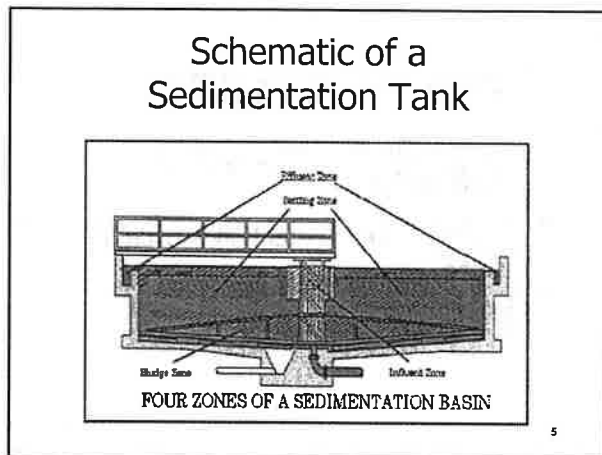

Influent Sedimentation Zone

- Inlet to the sedimentation basin
- End point in a rectangular tank and middle in a round tank
- Baffles direct flow ensuring lateral flow and prevent short circuiting and carryover.
- Inlet should be designed to minimize high flow velocities near the bottom which could scour settled particles causing them to become resuspended.


7

Settling Sedimentation Zone

- Largest Portion of the Tank
- Velocity reduced to 1 to 3 ft/min
- Detention times ranges from 2 to 4 hours
- Overload Loading rates of ~ 800 gpd/ft²
- Tube and plate settlers can greatly improve settling rates

8

High Rate Settling

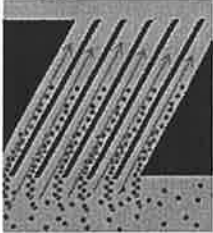


Tube settlers and lamella plates - Water flows up through slanted tubes or along slanted plates. Floc settles out in the tubes or plates and drifts back down into the lower portions of the sedimentation basin. Clarified water passes through the tubes or between the plates and then flows out of the basin.

- Tube and plate settlers increase the area to allow more settling
- Use much smaller footprint
- Increase capacity of existing basins. Loading rates 5 to 10 X conventional for plates and 2 to 5 X for tubes
- Placed at 60° angles to allow solids to be removed by gravity
- Currents and wind are dampened by tubes

9

Effluent Sedimentation Zone

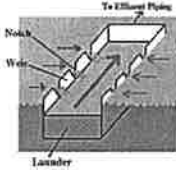

- Effluent Lander collects effluent flow
- Weirs along the edge skim water evenly
- Typically weirs have V notches every foot
- Weirs must be kept clean and level to ensure even flow and sludge blanket
- Baffle plate used to retain floating solids
- Weir Loading rates of 10,000 to 14,000 gpd/ft are used

10

A rectangular basin has a total flow of 1,000,000 gal/day. There are 6 double sided effluent launders that are six-feet long. What is the weir overflow rate in gal/day/ft?

Weir Overflow rate, gal/day/ft = $\frac{\text{total flow, gal/day}}{\text{length of weir, ft}}$


Total flow is 1,000,000 gal/day
 Total Length of Weir is (6, weirs x 2, sides x 6, ft long)
 Total Length of Weir is 72 ft

Weir Overflow Rate = $\frac{1,000,000 \text{ gal/day}}{72 \text{ ft}} = 13,889 \text{ gpd/ft}$

11

Sludge Sedimentation Zone

- Collection zone at bottom of tank
- Sludge must be removed at min. once per day to prevent septicity and bulking.
 - Useable volume of the tank will decrease, reducing efficiency.
 - Sludge built up on the bottom of the tank may become septic, meaning that it has begun to decay anaerobically.
 - Septic sludge may result in taste and odor problems and may float to the top of the water and become scum.
 - To prevent interference with the settling process (such as resuspension of solids due to scouring).
- Turbine or rake equipped with torque indicator: high torque will break shear pin (too much sludge); fluctuating torque (uneven sludge distribution)



12

Performance Monitoring for Sedimentation Processes

Filter effluent turbidity is a good indicator of overall process performance. However you must still monitor performance of each process

- The sedimentation tank is measured by a comparison of the turbidity entering and leaving the basin; measured several times per shift or when quality changes
- Observe clarity of settled water noting size and appearance of any suspended floc
- Ensure clean weirs at influent and effluent
- Observe sludge blanket depth; high blanket depths favor particles passing over weirs at higher flows.
- Remove sludge at min. daily
- Do not exceed loading rates

13

Record to be Maintained for Sedimentation Basin Performance

1. Influent and effluent turbidity and influent temperature
2. Process Water Production
3. Process Equipment Performance
4. Solids Removed from Basin

14

Short Circuiting in Sedimentation Tanks

- Short-circuiting occurs when the path of the flow passes directly through portions of the sedimentation tank; these can usually be observed as floc over the ends of basins.
- These high velocities occur under high flow conditions.
- Short-circuiting causes particulate matter to be held in suspension and be transported through the tank.
- Baffling can help break up the flow paths and can help control short-circuiting.
- Sedimentation tanks should not be loaded above tank design overflow rates.
- When dealing with chemical floc loading rates must be reduced

15

Sludge Treatment and Disposal

16

Volumes of Waste Sludge Produced

Amount of residuals produced is a function of:

- Raw Water Quality
- Facility Design
- Flow
- Treatment Process Employed
 - Lime plants generate 3 pounds of solids for every pound of hardness removed
 - Small alum plants with flows of 0.5 to 1 MGD can generate several 100,000 gallons of alum wastes per year

17

Raw Water Constituents that may Limit Disposal Options

- Excessively high or low pH;
- High total suspended solids (TSS);
- High total dissolved solids (TDS);
- High concentrations of heavy metals, including arsenic, lead, and aluminum;
- High concentrations of competing ions, including fluoride, sodium, sulfate, chloride, and other salts concentrations; and,
- High concentrations of radionuclides and daughter products

18

DISPOSAL ALTERNATIVES

- Disposal options will be limited by regulation, type of waste (liquid or solid, hazardous or non-hazardous) and the concentrations of contaminants in the waste
- Public law 92-500 restricts or prohibits the discharge of process wastes from water treatment plants. These wastes are considered industrial waste and under the National Pollutant Discharge Elimination System (NPDES) requires a permit to discharge to:
 - Land Disposal and Landfilling
 - Deep Well Injection
 - Discharge to POTW
 - Surface Water Disposal
 - Beneficial Reuse

19


Off-site Disposal of Waste Sludge

- Regulations require monitoring of liquid wastes prior to off-site disposal for water quality indicators such as pH, turbidity, TDS, settleable solids and other harmful materials.
- Treatment of liquid waste streams prior to off-site discharge often include:
 - Flow Equalization
 - Brine Recycling
 - pH Neutralization
 - Settling and Gravity Thickening
 - Evaporation
 - Chemical Precipitation


20

Processing of Liquid Sludge


Filter Presses



Evaporation and Drying

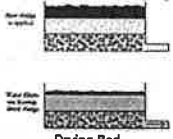


Mechanical Dewatering




Centrifuge filter press

Drying Bed



Thermal Processing



There are a variety of options for thickening sludge. All reduce the volume of sludge and the cost of handling.

21

Effects of Concentrating Chemical Sludge

Concentration (% solids)	Volume Total (gallons)	Water Removed (gallons)
2%	10,000	0
4%	5,000	5,000
8%	2,500	7,500
16%	1,250	8,750
32%	625	9,375
64%	312	9,688

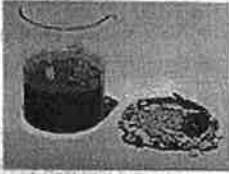


FIGURE 1 The goal of any sludge handling system is maximum dewatering at minimum cost.

The liquid from settled sludge is called "Supernatant"

22

Water Treatment Plant Maintenance Considerations

1

Operation and Maintenance

- Purpose of O&M
 - maintain design functionality (capacity)
 - restore the system components to their original condition and thus functionality.
- Effective O&M programs are based on:
 - knowing what components make up the system
 - where they are located
 - condition of the components.

2

Types of Maintenance

- Corrective
 - Reactive
 - Includes emergency maintenance
- Preventive
 - Proactive
 - Improved system performance
- Predictive
 - Proactive
 - Planned and scheduled basis

3

Corrective Maintenance

- Reactive – operate equipment until it fails
- Little or no scheduled maintenance
- Results in poor system performance
- Approach characterized by:
 - Inability to plan and schedule work
 - Inability to budget adequately
 - Poor use of resources
 - High incidence of equipment and system failures

4

Preventive Maintenance

- Proactive - performed on regular schedule
- Programmed, systematic approach
- Based on equipment operating time or number of days in operation
- Major elements of a good program:
 - Planning and scheduling
 - Records Management
 - Spare parts management
 - Cost and budget control
 - Emergency repair procedures
 - Training program

5

Predictive Maintenance

- Proactive
- Establishes a baseline using performance criteria
 - Vibration Monitoring
 - Infrared Heat Monitoring
 - Electrical Monitoring (Volts and Amps)
 - Flows & Pressure Monitoring - Laser Alignment
 - Wear/Corrosion Monitoring - Ultrasonic Testing

6

Development of an Effective Work Management Monitoring System

- Work is categorized
- Work standards that include time and quality are developed
- Work is assigned based on standards to individuals or crews
- Work is completed, data recorded (and inspected)
- Work data is compared to acceptable standards
- Deviations of acceptable performance is identified
- Problems that inhibit performance are eliminated
- Maintenance equipment histories are often an outcome of a successful work management program

7

Pumps

8

Pumps Used in Water Treatment

Application	Function
Low service (transfer pump)	To lift water from the source to treatment processes or from storage to filter backwashing system.
High service	To discharge water under pressure to distribution system
Booster	To increase pressure in the distribution system or to supply elevated storage tanks
Well	To lift water from shallow or deep wells and discharge it to the treatment plant, storage facility, or distribution system
Chemical feed	To add chemical solutions at desired dosages for treatment processes
Sampling	To pump water from sampling points to the laboratory
Sludge	To pump sludge from sedimentation facilities to further treatment or disposal

9

Pump Classifications

Material Handled


- Raw water
- Filtered water

Condition of Pumping

- High lift
- Low lift
- High capacity

Principal of Operation


- Centrifugal (variable heads and flow) or turbine pumps
- Piston or Reciprocating (fixed head and flow)
- Rotary
- Progressive Cavity (sludge)



High Service Pumps

10

Centrifugal Pump

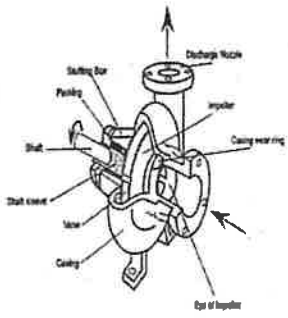

Three main components:

- Impeller: device that creates a vacuum by spinning and impelling liquid outward between the blades by centrifugal force.
- Casing (volute): The volute is the casing that receives the fluid being pumped by the impeller
- Shaft: part of the pump that turns the impeller.


Other components:

- Wear rings act as the seal between the casing and the impeller. Prevents excessive internal water circulation between the suction and discharge sides of a pump and prevents wear of the impeller and inside case.
- Bearings allow smooth rotation of the pump shaft.
- Stuffing boxes are used to keep air leakage out of a pump.

Note: never start a centrifugal pump until it is properly primed

11

The Stuffing Box

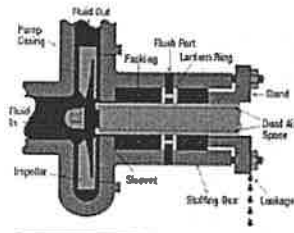


- Stuffing boxes are used to keep air leakage out of a pump. It consists of a casing, rings of packing (or mechanical seal) and a gland at the outside end.
- Packing: The function of packing is to control leakage and not to eliminate it completely. The packing must be lubricated, and a flow from 40 to 60 drops per minute out of the stuffing box must be maintained for proper lubrication; Packing ring notches should be staggered 90 degrees.
- Lantern ring: distributes liquid uniformly around the shaft to provide lubrication and cooling; also prevents or limits air from entering the flow stream.

Note: If there is excessive leakage around the packing gland you should first try to tighten the packing gland.

12

Centrifugal Pump

- Centrifugal pumps raise the water by a centrifugal force
- Never allow a pump to run dry (either through lack of proper priming when starting or through loss of suction when operating). Water is a lubricant between rings and impeller.

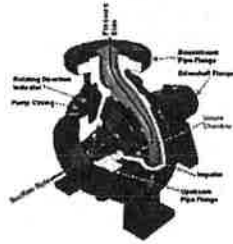

13

Pump Maintenance: Common Problems with Centrifugal Pumps

- Packing should be replaced periodically. Packing gland should have small amount of water leakage for lubrication (1 drop/sec) to keep packing cool and in good condition.
- Replace wearing rings when necessary to plug internal leakage
- Pump should be checked for excessive vibration
- Minimize friction in bearings and stuffing boxes by proper lubrication
- Misalignment
 - Alignment should be performed using a laser
 - Foundation deterioration or settlement
 - Piping can change position and bolts can loosen
- Foreign materials
- Mechanical defects

14


Centrifugal Pump Operation

- Every pump has certain characteristics under which it will operate efficiently.
- These conditions can be illustrated with characteristic curves.
- Operating a pump outside these ranges will cause damage to the pump

15

Pump Curve Basics

- Different size impellers have different capacities and head
- Shutoff head is maximum head of pump
- Best efficiency point is 80-85% of the shutoff head
- Capacity expressed in gallons per minute, liters per minute, or cubic meters per hour
- Head of a pump is read in feet or meters
- Power consumption expressed in horsepower or kilowatts

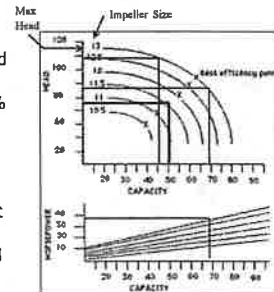

16


Question: Two pumps, having equal output, pump 6.5 MGD of water into a plant. What is the rating of each pump in gallons per minute?

- Two pumps have an output of 6.5 MGD
- One pump would have output of 3.25 MGD
- We are looking for gal, not MG, so we change 3.25 MG to 3,250,000 gal.
- We also need to change from days to minutes so we use the conversion of 1 day is equal to 1440 minutes

$$\frac{3,250,000 \text{ gal}}{\text{day}} \times \frac{1 \text{ day}}{1440 \text{ min}} = 2257 \text{ gpm}$$

17


Piston or Reciprocating Pump

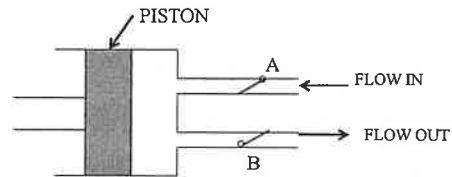

- A piston pump is a positive-displacement pump
- A reciprocating pump is one that moves a liquid by a piston that moves back and forth
- Never operate it against a closed discharge valve or the pump, valve, and/or pipe could be damaged by excessive pressures
- Suction valve should be open when the pump is started. Otherwise an excessive suction or vacuum could develop and cause problems

18

Rotary Pump

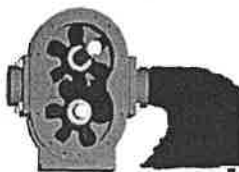

- The rotary pump uses cogs or gears, rigid vanes and flexible vanes to move the water
- As the gears rotate they separate on the intake side of the pump, creating a void and suction which is filled by fluid. The fluid is carried by the gears to the discharge side of the pump, where the meshing of the gears displaces the fluid.
- Rotary pumps are usually used for booster purposes and are generally used in conjunction with another pump.

19

Progressive Cavity Pump



The shape of the cavities between the rotor and the stator is shown in blue

- A progressive cavity pump is a positive displacement pump.
- It transfers fluid by means of the progress, through the pump, of a sequence of small, fixed shape, discrete cavities, as its rotor is turned.
- Commonly used to pump sludge.
- Never operate dry and never run against a closed discharge valve.

20


Lubrication Considerations



- Too much grease in antifriction type bearings (ball or roller) will promote friction and heat.
- The main job of grease in anti-friction bearings is to protect steel elements against corrosion, not friction.
- Lubricant should be changed in accordance with the manufacture's recommendations or before it's too worn or becomes too dirty.
- Some utilities analyze oil to identify the amount of metal wear to optimize lubrication and lubrication scheduling.

21

Problems With Defective Mechanical Seals or Packing

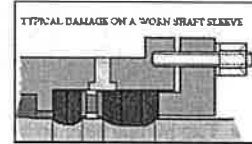

- Loss of suction due to air leak
- Shaft or sleeve damage from wear
- Water contamination of bearings
- Severe leakage causing flooding of building or pumping facility

22

Common Pumping Problems

- Blockage
- Air Lock
- Vibration
- Water Hammer
- Cavitation

23

Air Locks

- An accumulation of air that impedes the flow of water.
- Air locking is caused by air being trapped in the volute of the pump.
- These gasses collect becoming compressed creating an artificial head pressure within the pump housing.
- This artificial head will continue to build as more air is sucked into the pump until the maximum discharge head pressure (shut off head) is reached completely restricting the flow of water.
- Air locking is most often caused by leaks in the suction line


24

Excessive Vibration

- Pumps should run smoothly. Excessive vibration causes expedited and excessive wear especially on bearings.
- Vibration is typically caused by misalignment or base problems
- Vibration can be measured with specialized equipment

25


Water Hammer



- Water hammer is caused by the rise and fall of pressure caused by the rapid change of a valve position.
- Water hammer can cause pipes to rupture and damage equipment
- This condition should always be corrected by adjusting the check valve

26

Cavitation

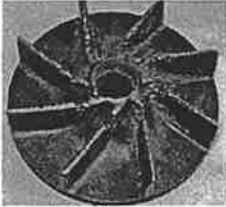

- Cavitation is a condition that can cause a drop in pump efficiency, vibration, noise, and rapid damage to the impeller.
- Cavitation is usually caused when:
 - Pump inlet pressure drops below the design inlet pressure.
 - Pump is operated at flow rates considerably higher than design flows
- Cavitation occurs when the pump starts discharging water at a rate faster than it can be drawn into the pump.
- This situation is normally caused by the loss in discharge head pressure or an obstruction in the suction line.
- When cavitation occurs, immediate action must be taken to prevent the impeller from being damaged

27

Air Compressors

28

Air Compressors Operation

- Used for activation of pump controls, for valve operators, to pressurize small water systems and to power portable pneumatic tools.
- Types include: diaphragm, rotary, piston and sliding vane.



Two Stage Piston Compressor 29

Compressor Maintenance Considerations

- Air filter inspection at least monthly replace at least at 3-6 mo.
- Lubrication; crankcase reservoirs, oil cups, grease fittings or separate pump. Must be inspected daily. Drip at proper rate and force feed oilers at proper pressure; compressors designed to use oil! Do not overfeed crankcase!
- Compressor heat breaks down oil; change oil at 3 months.
- Clean cylinder fins weekly to ensure proper cooling.
- Unloader allows compressor to come up to speed without load; should hear change; if not, compressor will stall or burn belts.
- Pop off valve (safety valve) are located on air receiver or storage tank; Some compressors have high pressure, low oil and high temperature cutoff switches; Record settings.
- Drain condensate daily!
- Check belt tension; tightness causes overheating and excessive wear. Check while locked out-at $\frac{3}{4}$ inch.
- Inspect operating controls; record settings.
- Clean monthly to prevent dirt from entering system.

30

Record Keeping

31

Record Keeping

- Don't rely on memory
- Keep up to date on a daily basis
- Track all equipment and treatment processes
- Compare the information for consistency

32

Library of Manufacturers' Operation and Parts Manual

- A plant library can be helpful information to assist in plant operation
- Material should be cataloged and filed for easy use and include...
 - Plant operation and maintenance instruction manuals
 - Plant plans and specifications
 - Manufacturers' instructions
 - Reference books on water treatment
 - Professional journals and publications
 - First-aid book
 - Reports from other plants
 - A Dictionary

33

Emergencies

- Emergency procedures must be established for operators to follow when emergencies are caused by the release of...
 - Chlorine
 - Hazardous or toxic chemicals into raw water supply
 - Power outages or broken transmission lines or distribution mains
- Include emergency phone numbers

34

Emergency Team

- Team must be physically and mentally qualified
- Proper equipment must be available
- Proper training on a regular basis
- Regularly simulate field emergencies or practice drills
- Annually review team performance

One person should never be permitted to attempt an emergency repair alone. Always wait for trained assistance.

35


Water Treatment Plant Safety

1

Safety Program

Most accidents in a water plant are caused by what?
Negligence and carelessness

- Everyone is responsible for safety
- Utility manager is responsible for the safety of the agency's personnel and the public exposed to the water utility's operations
- Supervisors control the operators' general environment and work habits and influences whether or not the operators comply with safety regulations.
- Operators share in the responsibility for an effective safety program. The development of safe working habits is an employee responsibility.



2

Confined Space Definition

(1) Is large enough and so configured that an employee can bodily enter and perform assigned work; and

(2) Has limited or restricted means for entry or exit (for example, tanks, vessels, silos, storage bins, hoppers, vaults, and pits are spaces that may have limited means of entry.); and

(3) Is not designed for continuous employee occupancy

3

Employer's Confined Space Entry Program

- Required for all Employees working in a Confined Space
- Procedures include Permitting System for entering, attendant, testing devices and monitors and personal protective equipments
- Training for all Employees

4

Hazardous Atmospheres and Confined Spaces

- Workers may not enter spaces with < 19.5% or > 23.5% Oxygen
- Workers may not enter spaces with a combustible gas concentration of 20% of the Lower Flammable Limit
- Workers may not enter spaces with Threshold Limit Values of Airborne Contaminants established by American Conference of Governmental Industrial Hygienists

5

Testing of Atmospheric in Confined Space

- Testing must be conducted before employees enter a trench
- Oxygen must be not less than 19.5%
- Frequency of testing must be increased if equipment is operated in the confined Space
- Testing Frequency must be increased if welding, cutting or burning is occurring

6

Confined Space Requirements

- Fitted Respirators must be used in Hazardous Atmospheres
- Employees must be trained in their use and a program established
- Attended (at all times) lifelines must be provided when employees enter bell-bottom pier holes, deep confined spaces, or other similar hazards.
- Employees who enter confined spaces must be trained.

7

Fire Protection

- Fire prevention is the best fire protection
- Fire protection is good "housekeeping"
 - Means a plant that is well-kept, neat and orderly
 - Fire hazards removed
 - Trained in use of equipment
- Make a fire analysis of the plant once a year

8

Classes of Fires and Extinguishers

Fires that involve electrical equipment are classified as what class of fire?

- Class A: ordinary combustibles
- Class B: flammable liquids and vapors
- Class C: energized electrical equipment
- Class D: combustible metals

Note: fire extinguishers are classified as A, B, C, D to correspond with the class of fire each will extinguish.

9

Electrical Test Equipment

10

Basic Electrical Measurement Devices



Volt/Ohm Meter



Infrared Temperature Indicator




Ammeter



Megger Tester

NEVER USE A METER UNLESS QUALIFIED AND AUTHORIZED 11

Electrical Relationships

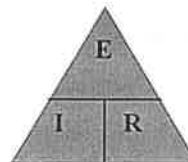

- Voltage (E) is the electrical pressure available to cause a flow of current (amperage) when an electric circuit is closed. Voltage is also called Electromotive Force (E.M.F.)
- Amperage (I) is the strength of an electric current measured in amperes. The amount of electric current flow, similar to the flow of water in gallons per minute.
- Ohm (R) is the unit of electrical resistance. The resistance of a conductor in which one volt produces a current of one ampere.

12

Voltage Testing (E.M.F.)

- To check voltage use a multimeter
- Used on energized circuits so use caution
- Used to check:
 - to determine if circuit is live
 - voltage (electrical pressure) at each leg
 - electrical components for activation
 - continuity of a circuit or a device such as a fuse

13

Ohmmeters

- Used to measure the resistance (ohms) in a circuit
- Use only on de-energized circuits
- Often used to:
 - Test the control circuit components of coils, fuses, relays, resistors, and switches
 - Check for continuity

14

Some Uses of an Infrared Thermometer

- Check tightness of conduit connections
- Check for high heat that varies from equipment signature

15

Ammeter: records the current or amps flowing in a circuit

Uses of an ammeter in Testing Pumps and Motors

Problem	Indication
Pump clogged with rags or other obstructions	Amp Readings that exceed FLA or normal signature
Pump shaft broke or Impellor loose	Amp Readings that are significantly under FLA or normal signature
Problem with motor or electrical feed	Motor legs have amp imbalance

16



Megger Tester

- Used for checking the insulation resistance on motors, feeders, bus bar systems, grounds and branch circuit wiring.
- Use only on de-energized circuits or motors.
- Results indicate if the insulation is deteriorating or cut
- Motors and wirings should be megged at least once a year.
- Record and plot readings to determine if insulation is breaking down; downward trends may indicate a problem

17



Chemical Handling

- Acids are used extensively in water treatment
- Always pour acid into water
- The antidote to all acids is neutralization
- Hydrochloric acid: often used for cleaning; highly reactive to metals and will produce hydrogen gas
- Hydrofluosilicic acid is hazardous to handle under any conditions; use protective equipment

18



The antidote to all acids is:

- a. Flushing
- b. Oxidation
- c. Neutralization
- d. Chelation

19



If an operator comes in contact with chlorine gas and has a throat irritation, what liquid would help reduce the irritation?

- a. Water
- b. Coke
- c. Milk
- d. Cough syrup

20

Chemical Safety

21

Hazards Communication Plan (Hazcom)

- Identify Hazardous Materials
- Obtain Chemical Information and Define Hazardous Conditions
- Properly Label Hazards
- Train Operators

22

Chemical Labeling

- All chemical containers must be labeled, tagged or marked with the identity of hazardous chemical and must show hazard warnings appropriate for employee protection
- The hazard warning can be any type of message, words, pictures or symbols that provides information regarding the hazards of the chemical in the container, generally ANSI standards will be used
- Labels must be legible, in English and all other necessary languages appropriate to the facility
- Exemption to requirement would be for
 - Portable containers in which hazardous chemicals are transferred from labeled containers and that are intended only for the immediate use of the employee who makes the transfer

23

Detection and Protection for Hazardous Chemicals

Detection Training

- During training provide samples of hazardous chemicals to observe for odor, color and viscosity
- Prior to observation, review each SDS for hazardous chemical and review
- Go over exposure and symptoms
- Review the standard precaution of any unmarked, unidentifiable chemical. Dispose of as a hazardous chemical.

Protective Measures

- For all hazardous chemicals in your facility you must include in your training employee's PPE. It is important to provide this training at the same time as SDS training

24

NEW! Globally Harmonized System (GHS)

- What is GHS?
 - Stands for the Globally Harmonized System of classification and labeling of chemicals
 - Same criteria throughout the world
 - Standardizes Warning Labels and Safety Data Sheets
- Who will be Affected? Manufacturer, supplier and user
- When will GHS start? It has already begun.

25

What must be done to comply with GHS?

- Classification of chemicals to GHS criteria
- Prepare GHS format "Safety Data Sheets" (SDS)
- Prepare labels with GHS elements
- Train Employees on New Label Elements and SDS Format (complete by 12/1/13)

26

Elements of a Container Label (OSHA adopted "GHS" labeling requirements)

- Identity of product or chemical
- "Signal" word
 - Danger or
 - Warning
- Hazard Statement(s)
 - Standardized
 - Based on hazard classification & category

27

Elements of a Container Label (cont)

- Precautionary Statements
 - Standardized in GHS
 - How to prevent exposure
 - Storage requirements
 - First aid procedures
 - Spill response
 - Disposal of chemical

28

Elements of a Container Label (cont)

- Supplier Information
 - Name of manufacturer or distributor
 - Address
 - Telephone number
- Supplemental Information
 - Directions for use
 - Expiration date
- Pictograms

29

Pictograms

- Appear on container labels and Safety Data Sheet's
- 9 different labels



30

SULFURIC ACID

DANGER!



HAZARD STATEMENT:

Keep locked up. Keep container dry. Do not breathe gas/fumes/vapors/spray. Never add water to this product. Keep away from incompatibles such as oxidizing agents, reducing agents, combustible materials, organic materials, metals, acids, alcohols. May corrode metallic surfaces. Store in metallic or coated fiberboard drum using a strong polychloroethylene liner package.

Will react with water or steam to produce toxic and corrosive fumes. Reacts with carbonates to generate carbon dioxide gas. Reacts with cyanides and sulfides to form poisonous hydrogen cyanide and hydrogen sulfide respectively.

PRECAUTIONARY STATEMENT:

AVOID CONTACT WITH SKIN AND EYES. Very hazardous in case of skin contact, if eye contact, if ingestion, if inhalation. Liquid or spray mist may produce tissue damage particularly on mucous membranes. Skin contact may produce burns. Inhalation of the spray mist may produce severe irritation of respiratory tract. Severe over-exposure can result in death.

The substance may be toxic to kidneys, lungs, heart, cardiovascular system, upper respiratory tract, eyes, teeth. Repeated or prolonged exposure to the substance may produce general deterioration of health in one or many human organs.

FIRST AID INFORMATION:

In the event of any personal contact, seek medical attention immediately. Flush with water. If inhaled, remove to fresh air. If digested, do not induce vomiting.

COMPANY NAME _____
 STREET ADDRESS _____
 CITY _____ STATE _____
 ZIP CODE _____ COUNTRY _____
 EMERGENCY PHONE NUMBER _____

SUPPLEMENTAL INFORMATION:
 Other information may be included on the label as needed.
 Example: See Safety Data Sheet for further details regarding the safe use of this product.

31

Deadlines


- Revised Haz-Com standard published March 24, 2012
- Employers provide training on new labeling system by December 1, 2013
- GHS-compliant labels by June 1, 2015
- Update written Haz-Com program by June 1, 2016

32

Water Transmission and Distribution for Water Treatment Plant Operators

- ### Standards for Materials Used in Water Pipelines
- AWWA and ANSI/NSF Standards
 - Cast Grey Iron Pipe (prior to 1948)
 - Cast Ductile Iron Pipe
 - Steel Pipe
 - Concrete Pipe
 - Asbestos Cement Pipe
 - Plastic Pipe (after 1970)


Comparison of Plastic (PVC) and Ductile Iron (DI) Pipe

 <p>PVC Pipe</p> <ul style="list-style-type: none"> ■ Used in 4" – 12" installations ■ PVC Lighter thus easier to install ■ Low Friction Head ■ Not Subject to Corrosion ■ Less Costly 	<p>DI Pipe</p> <ul style="list-style-type: none"> ■ Used in 4 to 36" installation ■ Can withstand heavy external loads ■ Provides extra surge allowances ■ Used under roads and crossings of water courses
---	---

Valves Used in Water Systems

Type	Application	Size	AWWA Standard
Butterfly (rotary)	Isolation and throttling. Water mains typically larger than 8". Have movable disc.	3" and up	C504 Rubber Seated Butterfly Valves
Ball (rotary)	Isolation. Used in water service lines to provide an on or off position.	6" and below	C507 6" – 48" and for pressures to 300 psi
Plug (rotary)	Isolation. Water service lines.	6" and below	
Globe (linear stroke)	Throttling. Efficient in either flow or pressure regulation	6" and below	
Gate (linear stroke)	Isolation. Most common valve in Dist. System. Should never be used for throttling. Vee-ported gate valve can be used in controlling flows	3" and up	C500 3" – 48"

Gate Valves

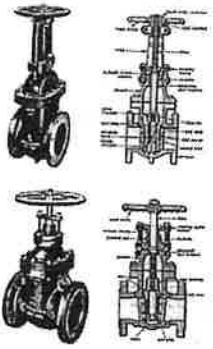


Rising Stem

- Has companion threads in the valve bonnet
- As valve is opened, the stem is threaded out, lifting the wedged disc

Non-rising Stem

- The stem is held in place in the bonnet by a collar
- The stem is threaded with companion threads in the wedged disc




5

Check Valves

- There are three basic designs of the check valve:
 - the swing check valve,
 - the horizontal and vertical lift check valve,
 - and the ball check valve.
- Ensures water flows in one direction to prevent contamination
- Exert highest amount of friction


6

Swing Check Valve

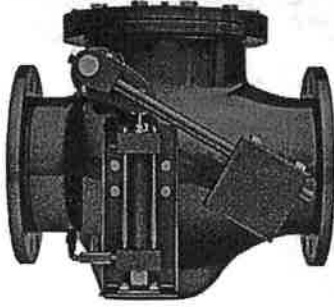


- Most popular
- Little resistance to flow when open
- Not recommended for frequent flow reversal, causes valve chatter
- Can cause "Water Hammer" if not properly adjusted

7



Horizontal/Vertical Lift Check Valve



Horizontal Lift Check Valves

- installed in a horizontal position
- Often used with smaller piping
- Used in frequent flow reversal applications

Vertical Lift Check Valves

- similar to horizontal lift check valves
- designed for vertical pipe installation
- foot valves are nearly always of the vertical lift disc design
- foot valves may be installed on the inlet of the pump suction pipe to keep the pump and suction line full of water

8

Pipes Used for Service Lines

- Galvanized Steel Pipe
- PVC (schedule 40; thick wall, glued joints)
- Polybutylene (compression or banded Joints)
- Copper (Type K; soft and Type L; hard)

9

Importance of Leaks in Water Systems (60 psi)

Leak Size	Gallons/Day	Gallons/Month
1/8 "	300	11,160
1/4 "	3,096	95,976
3/8 "	8,424	261,144
1/2 "	14,952	463,512

10

Leaks in Water Mains

- Lost Revenue (typical \$5.00/1,000 gallons)
- Chemical and Electrical Costs at Water Plant (typical 66% of cost)
- Capital Cost for System Upgrades (from \$3M to \$5M per MGD)

11

Water Loss and Unaccounted for Water

- Typical Water System 10% loss is acceptable
- Meter Comparison Used to Calculate Efficiencies
- Unaccounted by Authorized Losses are Estimated
- > 10% loss indicates problem

12

Meter Service Life

5/8" Meter Normal Use 7 – 15 years
 5/8" Meter High Use 5 - 7 years
 > 5/8" Meter Normal Use 7 - 10 years

* Meters should be tested on both life span and registered consumption



13

Domestic Meter Testing AWWA C700

5/8	Flow Range	Gallons/ Minute	Low Range	High Range
1.	Max. Rate	15 GPM	98%	101.5 %
2.	Int. Rate	2 GPM	98%	101.5 %
3.	Low Rate	1/4 GPM	95%	101.0 %

14

Identifying Leaks in Water Mains

- Customer Complaints
- Physical Inspections
- Standing Water in Dry Periods
- Continuous Flow in Storm Sewers
- Ponding in Low Areas
- Use of Leak Detection Equipment

15

Pipeline Systems

- Must Comply with "Ten State Standards" and DEP FAC Chapter 62 Pipelines
- Pipelines must meet AWWA Standards for materials used in construction
- Pipelines designed to carry at Max 5 fps
- Pipelines must be restrained at changes in direction
- Pipelines require proper bedding and bedding material

16

Water Distribution DEP System Requirements



- Maintain 20 psi in distribution system at service connection except for break or extraordinary conditions.
- > 350 people or 150 connections
 - Document program for exercising all system valves
 - Have quarterly dead-end system flushing program
 - Program for responding to complaints
 - Map locations of valves, fire hydrants and facilities
 - Emergency Preparedness Plan for system

17

Cross-Connections



“CROSS-CONNECTION” means any physical arrangement whereby a public water supply is connected, directly or indirectly, with any other water supply system, sewer, drain, conduit, pool, storage reservoir, plumbing fixture, or other device which contains or may contain contaminated water, sewage or other waste, or liquid of unknown or unsafe quality which may be capable of imparting contamination to the public water supply as the result of backflow.

- By-pass arrangements, jumper connections, removable sections, swivel or changeable devices, and other temporary or permanent devices through which or because of which backflow could occur are considered to be cross-connections.
- A cross connection is a improper connection between a contaminated water source and the public water system.
- A connection between an approved and an unapproved water supply.

18

Taste and Odor Control, Aeration, Iron Removal and Basic Stabilization

1

Taste and Odor Control Problems

- Taste and odors in drinking water is a common problem faced by the operator
- Consumer evaluates water on three senses: sight, smell, and taste
- Effects of taste and odor problems
 - Complaints by customers
 - Consumer may switch to unsafe water
 - Loss of confidence in utility to produce a safe water
- Secret to successful taste and odor control is to PREVENT TASTES AND ODORS FROM EVER DEVELOPING

2

Causes of Tastes and Odors

Can be the result of natural or manmade conditions that exist within the total water supply system

- Raw water sources
- Conveyance facilities
- Treatment plants
- Chlorination stations
- Finished storage facilities
- Distribution systems
- Consumer plumbing

3

Types of Pollutant Sources

- Municipal wastewaters
- Domestic wastes
- Industrial discharges (requires NPDES permit)
- Chemical spills (primary concern is health related effects)
- Urban runoff
- Agricultural wastes
- Irrigation runoff
- Distribution system maintenance
- Consumer plumbing



Note: If taste and odor problems and organic loadings are controlled, the need for activated carbon treatment at the plant may be reduced or eliminated.

4



What is the first step in determining the cause of taste and odor problems in a water system?

- a. Flush the system
- b. Change the coagulant dosage
- c. Do a taste test
- d. Locate where in the system the problem is originating

5


Environmental Conditions



- Organisms (bacteria, algae, diatoms, or fungi) that grow in water or in the sediments of lakes, reservoirs, and rivers are significant contributors to tastes and odors.
- If organic matter decays when there is no oxygen present (anaerobic conditions) undesirable tastes and odors are produced.
- When sulfate is reduced to sulfide in the anaerobic bottom sediments of a lake or reservoir the result can be a strong odor of rotten eggs.
- The diurnal variation in dissolved oxygen concentrations may have significant effect on taste and odor.

6

Diurnal Variation in Dissolved Oxygen Concentrations

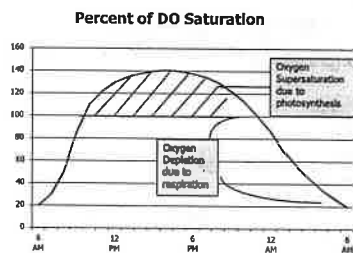


- Large populations of algae can produce oxygen faster than it can escape to the atmosphere
- Oxygen depletion during the night may result in fish kills and die-off of aquatic organisms and vegetation which will produce foul tastes and odors

Importance of Diurnal Oxygen Fluctuations

- Significantly different conditions can and do exist from day to night
- Oxygen depletion at night may result in fish kills and die-off of aquatic organisms and vegetation which will produce foul tastes and odors
- During darkness anaerobic organisms may become established and contribute to the aesthetic qualities of the water

8

Operations Impact

- Significant dissolved oxygen fluctuations caused by algae in raw water will also be accompanied by changes in the pH.
 - During daylight hours when algae produces oxygen, carbon dioxide (CO₂) is removed and the pH will increase
 - At night during the respiration process, algae will consume oxygen and release carbon dioxide which will lower the pH
 - These changes will influence the chemical doses required to effectively treat the water.
-  Tastes and odors caused by algae are best removed through improved coagulation and sedimentation.
 - Allows longer filter runs
 - If chlorine is used upstream of filtration it will reduce the reaction of chlorine on algae cells that would be release cellular materials into the water.

9

Taste and Odor Control by Aeration

- Effective in removing gases and organic compounds which are relatively volatile, this is known as DEGASIFICATION
- Can also destroy some compounds by OXIDATION, such as ferrous iron and manganous manganese.
- Aeration may also reduce the chemical dosage needed.

10

Taste and Odor Control Through Adsorption

- Adsorption is the process of removing materials from water by adding a material to the water to which taste-and-odor-producing compounds will attach themselves
 - Addition of powdered activated carbon; usually at the influent
 - Use of granular activated carbon as a filter medium

11

Iron and Manganese Problems

- Dissolved ferrous iron (Fe²⁺) gives water a disagreeable taste and will encourage the growth of iron bacteria in the water distribution system .
- Iron combined with tea, coffee and other beverages, produces an inky, black appearance and a harsh, unacceptable taste.
- Vegetables cooked in water containing excessive iron turn dark and look unappealing.
- Concentrations of iron as low as 0.3 mg/l will leave reddish brown stains on fixtures, tableware and laundry that are very hard to remove.
- Precipitates will form in the distribution system
- When these deposits break loose from water piping, rusty water will flow through the faucet.

12

Forms of Iron Found in Water Treatment

- Soluble Iron or Clear Water Iron (Fe^{+2})
- Precipitant Iron or Red Water Iron (Rust, Fe^{+3} , settles out)
- Organically Bound Iron Soluble Iron
- Iron Bacteria (Slime or biogrowth)

13

Iron and Manganese Facts

Regulated SMCL

Iron < 0.30 mg/l

Manganese < 0.05 mg/l

Problem Types

Red Water

Black Particles

- Weathering processes release the elements into waters.
- Iron dissolved by reaction with CO_2 . Reduces insoluble iron (Fe^{+3}) & Manganese (Mn^{+3}) to soluble Fe^{+2} & Mn^{+2} only under anaerobic conditions.
- Ground waters that contain Iron and Manganese are devoid of Oxygen otherwise they would settle out.
- When exposed to O_2 precipitants forms insoluble hydroxides in water.
- Visible as red and brown color. Will stain fixtures and clothes. Imparts taste and odor to water.

14

Iron Bacteria in Water Supply System



Iron Bacteria Cells



Bacterial Growth



Iron Problem

- Iron and manganese are most frequently found in water systems supplied by wells and springs.
- Iron and manganese react with oxygen to promote the growth of iron bacteria.
- These bacteria form thick slime growths on the walls of the piping system and on well screens.
- The growth can be controlled by chlorination

15

Iron and Manganese Control

- Alternate source
- Ion exchange
- Oxidation
- Phosphate treatment
- Lime softening

16

Soluble Iron (Fe²⁺) and Manganese (Mn²⁺) Can be Removed by Aeration

- Water with Fe + Mn > 0.3 PPM will have disagreeable taste and odor.
- Removal of Fe/Mn by aeration is dependent on pH, contact time, temperature and presence of organic material.
- By maintaining pH above 7, contact time can be significantly reduced.
- pH can be adjusted by adding lime (increases pH and speeds oxidation).
- It will be necessary to periodically chlorinate the aeration system to control slime growths.

17

Treatment Methods to Remove Iron and Manganese

Comparison of Oxidants Required to Oxidize 1mg/l of Ferrous Iron or Manganous Manganese

Oxidant	Iron	Manganese
Oxygen	0.14	0.29
Chlorine	0.62	1.30
Chlorine Dioxide	1.21	2.45
Ozone	0.86	0.87
Potassium Permanganate	0.91	1.92


18

Aeration Processes

- Aeration works in two different ways to remove the undesirable compounds from the water, oxidation and volatilization (degasification.)
- Volatilization removes undesirable gases such as Hydrogen Sulfide or Carbon Dioxide by forcing them to escape into the air.
- Removal of iron and manganese is accomplished by chemical oxidation. Once oxidized, these new compounds can be removed by sedimentation or filtration.
- Aeration also facilitates the oxidation reaction by removing CO₂ which raises pH.

19

Schematic of Typical Fe Removal Aeration System

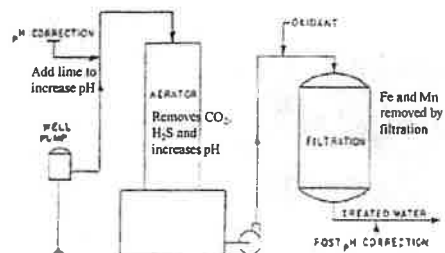

20

Results of Aeration

- Taste and odors caused by Fe, Mn, H₂S, and any volatile compounds are removed.
- Reduces corrosive constituents, i.e. CO₂ (to 5 ppm) and H₂S.
- Supersaturated water is corrosive and stability must be adjusted.
- Aeration will not remove tastes and odors caused by organic sources such as algae.

21

Types of Aeration Systems

- Water into Air. This method produces small drops of water that fall through the air.
- Air into Water. This method creates small bubbles of air that rise through the water being aerated. (less common in small systems).

22

Cascade Tray Aerator



- Termed to be a waterfall device; passes water through the air
- Even distribution of water over top tray
- Loading Rates of 1 to 5 GPM for each sqft. of tray area.
- Trays 1/2" openings perforated bottoms
- Protect from insects with 24 mesh screen
- May encourage biological growths which may cause taste and odor problems
- Evaporation losses are a disadvantage

23

Forced Draft Aeration System (Air Stripping)



- Combines elements of both air blowers and waterfall devices
- Includes weatherproof blower in housing
- Counter air through aerator column
- Includes 24 mesh screened downturned inlet/outlet
- Discharges over 5 or more trays



Blower

24

Packed Tower Odor Removal System



- Uses Henry's Law constants for mass transfer
- Usually requires pilot testing
- Used to Remove VOCs below MCL
- Col to Packing >7:1 ratio
- Air to water at pk >25:1 with max 80:1
- Susceptible to Fouling from $\text{CaCO}_3 > 40 \text{ PPM}$

25

Protection of Aerations Systems from Insect, Vermin and Slime

- Growth of Insects
- Contamination from Bird Droppings
- Contamination from Animals
- Growth of Slime

26

Chemical Oxidation of Fe and Mn Using Chlorine

- The main advantage of chlorine over aeration is the requirement for much shorter reaction times
- Chlorine is frequently used instead of aeration when iron concentrations exceed 5 PPM
- When levels of iron and manganese exceed 5 PPM, sedimentation may also be necessary prior to filtration
- The higher the amount of chlorine fed, the more rapid the reaction
- After filtration, water may need to be dechlorinated by addition of sodium bisulfide or sulfur dioxide to prevent TTHMs
- Chlorine residual concentration after a contact tank should never be allowed to drop below 0.5 PPM
- The Chlorine concentration that is most effective is determined by the use of a jar test

27

Clarification Requirements for Iron and Manganese

- Oxidized particles must be removed
- Anthracite filters are frequently employed
- With high Fe/Mn concentrations in source water (> 6 PPM) a clarifier may be necessary

28

Use of Potassium Permanganate

- Oxidizes iron and manganese to insoluble oxides
- Sulfides and color are also removed
- Potassium permanganate is added upstream of filters
- Permanganate is a reactive, fast-acting oxidizer
- Dose must be exact
 - Too little will not oxidize the manganese in the water
 - Too large a dose will allow permanganate to enter the system and may produce a pink color in the water
 - Bench scale tests required to determine the proper dosage
- It is a poor disinfectant



29

Filter Considerations Using Permanganate

- Filtration is used as the final step in Fe and Mn treatment
- Gravity and pressure filters are typically used
- The normally-used filter media will work if the combined concentration is below 1 ppm.
- Higher concentrations require different type of filter materials and different methods of operation
 - Use of manganese greensand filter
 - Charged with potassium permanganate after the backwashing process
 - This method allows the oxidation process to be completed in the filter

30

Stabilization of Iron and Manganese using Phosphates

- Phosphates are used keep Fe and Mn in a dissolved state. The effect is called sequestration.
- Reduces the layer of scale that forms on the pipe.
- Very small quantity are required to inhibit precipitation in water distribution lines.
- Sequestering agents bind with the mineral (Fe, Mn, Ca, Mg) to keep them in suspension. This prohibits (delays) them from falling out and causing buildup, stains, discoloration, etc.
- At high mineral levels, the agents are not very effective. With long detention times in your storage, they are also not very effective.
- Testing should be performed to determine if they work.

31

Some Benefits Attributed to Phosphate Addition

- Control of Iron and Manganese Color and Staining
- Scale Reduction
- Corrosion Inhibition
- Hydrogen Sulfide Oxidation
- Chlorine Demand Reduction
- Bacterial (MPN) Reduction
- Disinfectant By-Product Reduction
- Increased Life of Iron Pipelines
- Increased Life of Water Heating Elements
- Improved Taste of Water
- Water Color Enhancement

32

Considerations in the Use of Polyphosphates for Sequestering

- Polyphosphates are effective for low concentrations of iron and manganese
- Polyphosphate sequestering agents can start to degrade to orthophosphate after about 2 days
- Polyphosphate sequestering does not work under stagnant conditions (slow moving water or dead end conditions)
- Over feeding Polyphosphate can contribute phosphorus as a nutrient that favors the growth of slime bacteria

33

Considerations in the Use of Polyphosphates for Sequestering (cont.)

- The Polyphosphate, Hexametaphosphate is commonly used for Sequestering Soluble Iron and Manganese
- Large doses (>5 mg/l) will soften rust deposits in pipelines which are transported into homes
- Proper dose is to keep soluble iron and/or manganese tied up for 4 days so deposits won't build up on the pipe walls
- Chlorine usually must be fed along with the polyphosphate to prevent the growth of iron bacteria



34

Use of Orthophosphates for Sequestering

- Orthophosphate is used to sequester iron ions at pipe surfaces
- The sequestering forms a protective coating that prevents further iron migration
- Ortho/Poly Blends provide both sequestering of soluble iron and manganese movement from pipelines under corrosive conditions

35

DEP Limitations in Sequestering Iron and Manganese

- Sequestering with polyphosphates may be used when the combination of (Fe + Mn) < 1 mg/l
- Polyphosphate may not exceed 10 mg/l
- Sequestering with sodium silicates may be used when combination of (Fe + Mn) < 2 mg/l
- Sodium Silicate can not exceed 20 mg/l
- Sodium Silicate is applicable prior to air contact only!



Polyphosphate Dosing Systems



Taste and Odor from Hydrogen Sulfide

- Not uncommon in Florida well waters
- Typical concentrations not a health risk but do affect the taste of water; Detected in concentrations as low as 0.05 mg/l
- Presence of sulfate-reducing bacteria causes rotten egg odor of hydrogen sulfide.
- Free hydrogen sulfide (H₂S) can react with water forming sulfuric acid (H₂SO₄) which is extremely corrosive to metals.
- Removed by aeration, greensand/ potassium permanganate, and chlorination

37

Hydrogen Sulfide Removal Techniques (DEP)

Sulfide (mg/l)	Recommended Treatment Process	Achievable Range of Removal
<0.3	Direct Chlorination	100%
>0.3	Direct Chlorination (requires filtration)	100%
0.3 to 0.6	Conventional Aeration	50%
0.6 to 3.0	Forced Draft Aeration	90%
>3.0	Packed Tower Aeration	>90%

38

Distribution System Maintenance

- Flushing alone does not provide an adequate level of protection against tastes and odors in a distribution system
- Routine collection of samples for tastes and odor tests can provide an early warning of quality deterioration
- The location of flushing stations and the frequency at which they are flushed is determined from records of complaints and water quality tests. Records can be used to:
 - evaluate the effectiveness of these spot flushing's
 - the frequency of flushing
 - the need to add or rotate stations during the year.

39

Determining if Dissolved Iron is Present

- Draw a sample from the well and allow it to stand for 30 minutes
- Water should be clear and colorless turning to a slight yellow haze color after contact with air
- If allowed to stand it will finally form a yellowish brown color
- If aerated and allowed to stand it will form reddish brown deposits in bottom of container

40

Math for Water Operators

1

Remember the Three Rules for Conquering Math

- Always look up the proper formula
 - This means disregarding all the numbers and recognizing the type of problem.
- Write it down
 - Always use the same equation; don't try to remember multiple versions of the same equation.
- Plug in the right units !
 - Many times the units given in the problem are not those required in the equation
 - Conversion of terms is essential.

2

Movement of Terms

- In solving equations, terms must be moved from one side of the equation to the other.
- How the terms (numbers) are moved depends on the type of problem and how the numbers are related. For example, does the problem only involve multiplication and division or terms, or is addition or subtraction also indicated.
- Mathematical rules of movement and order operation must be followed to obtain the correct answer to a calculation.

3

Order of Operations - How do I remember what to do first?

PEMDAS

P - Parenthesis first
 E - Exponents (i.e. powers and sq roots)
 MD - Multiplication/Division (left to right)
 AS - Addition/Subtraction (left to right)

You can remember by saying "Please Excuse My Dear Aunt Sally".

4


Equations

- These are the formulas that operators deal with every day.
- Every part of the formula has a numerator (top) and a denominator (bottom)
- When no denominators are shown, a one is assumed to be the denominator of the fraction

5

Multiplication and Division Problems

- Move terms diagonally from one side of the equation to the other.



- Only one type of movement is permissible: Diagonal
- Example: Solve $Q = VA$ for A

6

Addition and Subtraction

- What you do to one side of an equation you have to do to the other.
- Applies to terms or numbers
 - Example: $A = B$, add C to each side
 $A+C = B+C$
 - Example: $3 = 4-1$, add 2 to each side
 $3+2 = 4-1+2$
 $5 = 5$

7

Example

- What would you do to rearrange the disinfection formula to solve for demand?
 - $Dose = Demand + Residual$
- Subtract Residual from each side
 - $Dose - Residual = Demand + \cancel{Residual} - \cancel{Residual}$
 - $Dose - Residual = Demand$

8

Some Basics

- Multiplying either side of an equation by 1 doesn't change the sides being equal it only changes the units.
- All of the conversions shown on the formula sheets are equal to 1!

$$\begin{aligned} \text{Length} &= 12 \text{ inches} \\ \text{Length} &= 12 \text{ in} \times \frac{1 \text{ ft}}{12 \text{ in}} = 1 \text{ ft} \end{aligned}$$

9

Terminology

- ft² of ft³
- π
- Radius
- Diameter
- Circumference
- Express inches in feet

10

Conversions - Box Method

- Many times people get confused on whether to multiply or divide
- The box method is an aid in making that decision. To use it first set up the boxes, with the smaller box on the left.




- Because multiplication is associated with increasing a number, we use multiplication when moving from the smaller box to the larger box
- When moving from the larger box to the smaller box, division is indicated (number gets smaller)

11



Example

To see how this works, convert 100 grains/gal to mg/l.



Going from left to right, do you multiply or divide?
We are going from the smaller box to the larger box, so using the association that the number is getting bigger, we multiply.

12

Example

A bladder tank holds 120 gallons. What is the weight of the water in pounds?

120

Conversion Factor
8.34

1001

Gal lbs

A tank weighs 50,000 pounds. How many gallons of water does it contain?


5,995

Conversion Factor
8.34

50,000

Gal lbs

13

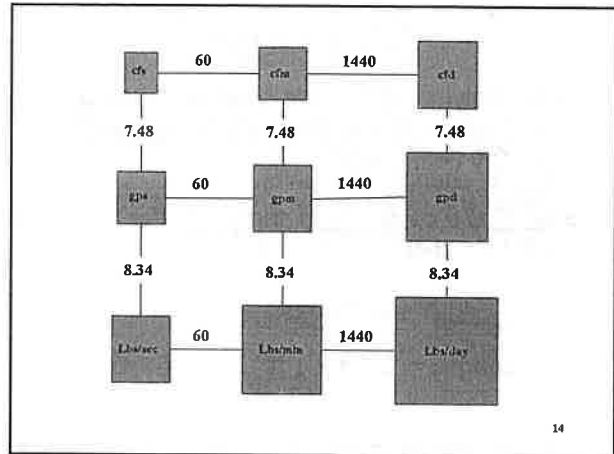

Fractions

A fraction represents a part of the whole

/

NUMERATOR: The numerator indicates how many parts are being considered.

DENOMINATOR: The denominator tells how many equal parts into which the whole has been divided. It gives the name of the fraction (halves, thirds, fourths, etc.)

15

Fractions (continued)

Mom's Apple Pie

If Mom made an apple pie and divided it equally for you and your brother what would be your portion?

Mom's Apple Pie

If Mom baked a pie for dinner and had six guests what would be your portion?

16

Fractions (continued)




- Fractions may also be used to indicated parts of a group as well as portions of whole objects
- In the example above, two of the eight meters are defective
- What fraction of meters are defective?
- Remember the numerator is the number of parts that are of interest.
- While, the denominator is the number of meters in the group

17


Decimal

- Our number system is based on the number 10
- A Decimal Number contains a Decimal Point
 - Numbers on the left are whole numbers
 - Numbers on the right are a portion of the number 1.
 - Each position gets bigger or smaller than the previous by a factor of 10

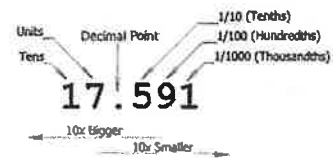

18

Decimals

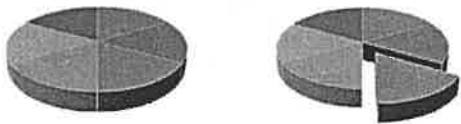

- How would you write the decimal for two whole pies? 2.0
- What fraction of pie is remaining if one piece is eaten? $1 \frac{5}{6}$
- To change the fraction to a decimal, do the division.
 $5/6 = 5 \text{ divided by } 6 = 0.833$
- What is the pie remaining written as a decimal? 1.833

19

Percentages

- Converting a decimal to a percentage is easy. Move the decimal two places to the right and add a % sign.
- Looking back at our meters, what percentage of meters are operable?

- Step 1: $6/8$
- Step 2: $6 \div 8 = 0.75$
- Step 3: $0.75 = 75\%$

Whenever you set a fraction up, it's always the number of items compared (good or bad) divided by the total number of items.

20

Fraction/Percentage/Decimal

- How do we change a fraction into a decimal?
 - Do the division.
- How do we convert a decimal to a percent?
 - Simply move the decimal two places to the right and add a % sign
- How do we convert from a percent to a decimal?
 - Simple remove the % sign and move the decimal two places to the left.
- How do we convert from a percent to a fraction?
 - Write the percent as a common fraction and then reduce the fraction to its lowest terms.

21

Percentage Problems

1. 25% of the chlorine in a 30 gallon vat has been used. How many gallons are remaining in the vat?
2. How many pounds of 67% calcium hypochlorite are required to make the equivalent of 50 pounds of pure chlorine?
3. A 2% chlorine solution is what concentration in mg/l?
4. A water plant produces 84,000 gallons per day. 7,560 gallons are used to backwash the filter. What percentage of water is used to backwash.
5. The average day winter demand of a community is 14,500 gallons. If the summer demand is estimated to be 72% greater than the winter. What is the estimated summer demand?
6. An operator mixes 40 lb of lime in a 100-gal tank that contains 80 gal of water. What is the percent of lime in the slurry?

22

Proportions

- Setting up a proportion
 - First group like terms (gallons to gallons and lbs to lbs)
 - Place the smallest numbers of each unit in the numerators (top)
- To solve a proportion
 - Get the x term (unknown) in the numerator
 - Get the x by itself

23

Example: 0.5 lbs of chlorine are dissolved in 45 gallons of water. To maintain the same concentration, how many pounds of chlorine would have to be dissolved in 100 gallons of water?

- First group the terms

$$\frac{\text{Gallons}}{\text{Gallons}} = \frac{\text{lbs}}{\text{lbs}}$$
- Place smallest numbers on top

$$\frac{45 \text{ gal}}{100 \text{ gal}} = \frac{0.5 \text{ lbs}}{x \text{ lbs}}$$
- Solve for x

$$x = \frac{0.5 \text{ lbs} \times 100 \text{ gals}}{45 \text{ gal}} = 1.1 \text{ lbs}$$

24

It takes 3 men 60 hours to complete a job. At the same rate, how many hours would it take 5 men to complete the job?

- First group the terms

$$\frac{\text{men}}{\text{men}} = \frac{\text{hours}}{\text{hours}}$$

- Place smallest numbers on top

$$\frac{3 \text{ men}}{5 \text{ men}} = \frac{x \text{ hours}}{60 \text{ hours}}$$

- Solve for x

$$x = \frac{3 \text{ men} \times 60 \text{ hours}}{5 \text{ men}} = 36 \text{ hours}$$

25

Example: In preparing a standard reagent, instructions indicate that you should weigh out 9.422 grams and dilute to 1 liter with demineralized water. How much demineralized water will you have to add to produce the desired concentration if you only weighed 9.210 grams?

- A. 98 ml
- B. 102 ml
- C. 650 ml
- D. 980 ml


26

Calculating the Area of a Tank or Pipe

- Area or Surface Area of a Round Shape

Area may be expressed as ft² or as sq.ft.
These terms are synonymous.

Area of a Circle

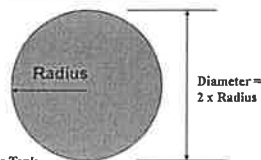

Storage Tank
or Pipeline
Shape

**Make sure that all
units are expressed
in feet!**

$$\begin{aligned} \text{Area} &= \pi \times R^2 \\ &= \pi \times R \times R \\ &= 3.14 \times R \text{ (ft)} \times R \text{ (ft)} \end{aligned}$$

27


What are some of the conversion factors that I might need to find the area?

- 1 ft = 12in
- What about ft²? How do I get there?
- Multiply each side by itself or square each side.
- 1 ft x 1 ft = 12 in x 12 in
- 1 ft² = 144 in²
- Let's work a problem!

28

Example: Determine the Area of Top of a Circular Tank or the end of a Pipeline

Calculate the area of the end of a pipe in square feet, given a pipe diameter of 8 inches.

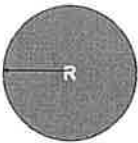


- Area = $\pi \times R^2$
- What is our radius?
- Radius is 4 inches.
- What units do I need for formula?
- Area = $(3.14) \times (4/12)\text{ft} \times (4/12)\text{ft}$
- Area = 0.35 sq.ft. or ft²
- How would it look using conversion factor?
- Area = $3.14 \times 4\text{in} \times 4\text{in} \times \frac{1\text{ft}^2}{144\text{in}^2} = .35 \text{ft}^2$

29

Determine the Surface Area of a Rectangular Tank/Basin/Filter

Calculate the Surface Area of a Basin. Remember the units for area are ft² or in².

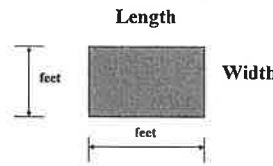


Make sure that all units are expressed in feet!

Area = Length x Width
= Length (ft) x Width (ft)

30

Example: Calculate the Surface Area of a Rectangular Tank

Calculate the Surface Area of a Rectangle.

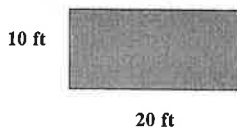


Area = Length x Width
Area = 20 ft x 10 ft
Area = 200 sq.ft. or ft²

31

Calculate the External Surface Area of a Tank

- Top area = $\pi \times R^2$ or $.785 \times D^2$
- Side = Circumference * height
= $\pi \times D \times H$

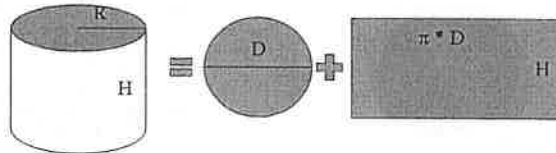


32

If our tank has a 20 ft radius and is 20 ft tall, what is the external surface area in sq ft?

Let's start with the top of the tank.

Step One - Find the right formula: Area of a Circle
 Step Two - Write it Down: $Area = \pi * R^2$ or $.785 * D^2$
 Step Three - Plug in the right units




Radius = 20 ft
 or Diameter = 40 ft
 $Area = 3.14 * 20 \text{ ft} * 20 \text{ ft}$
 $= 1,256 \text{ ft}^2$

33

If our tank has a 20 ft radius and is 20 ft tall, what is the external surface area in sq ft?

Next we need to calculate the area of the side of the tank.

Step One - Find the right formula: Area of a Rectangle
 Step Two - Write it Down: $Area = L * W$ or $L * H$
 Step Three - Plug in the right units

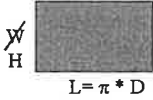

H = 20 ft
 What is L? Circumference or $\pi * D$
 $AREA = \pi * D * H$
 $D = 2 * R = 40 \text{ ft}$
 $AREA = 3.14 * 40 * 20 = 2,512 \text{ ft}^2$

34


What is the Total External Area of the Tank?

- From previous:
 - Area of Top = 1,256 ft²
 - Area of Side = 2,512 ft²
 - Total area is = 3,768 ft²
- If one gallon of paint covers 500 ft², how many gallons of paint are required to paint our tank?
 $(3,768 \text{ ft}^2) / (500 \text{ ft}^2 / \text{gal}) = 7.5$ or 8 gallons

35

Determining the Volume of a Rectangular Tank

- Volume of a Rectangular Shape, ft³

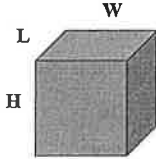


Make sure that all units are expressed in feet!

Volume = Length x Width x Height

36

Calculation of the Volume of a Rectangular Tank

Calculate the Volume of a Rectangular Tank with the dimensions of 15 feet long by 10 feet wide by 25 feet deep.

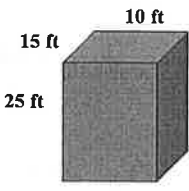


Volume = Length x Width x Height
 = 15 ft. x 10 ft. x 25 ft.
 = 3750 c.ft. or ft³

37

Volume can also be expressed in Gallons

- What conversion factor do we use?
- VOLUME: 7.48 gal = 1 ft³

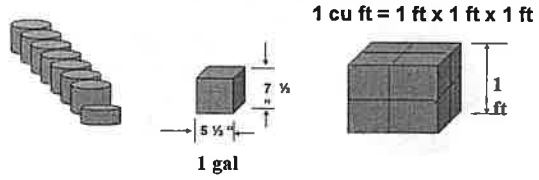

38

Example: Convert Cubic Feet to Gallons

Determine # Gallons in 78,500 ft³ Tank

VOLUME : 7.48 gal = 1 ft³

$$78,500 \text{ ft}^3 \times \frac{7.48 \text{ gal}}{1 \text{ ft}^3} = \text{Gallons of Water}$$

$$= 587,180 \text{ Gallons}$$


How many millions of gallons is this?

$$= 587,180 \text{ gals} / 1,000,000 = .587 \text{ million gallons}$$

39

Volume can be Converted to Weight

- What conversion factors do we use?
- Weight: 62.4 lbs = 1 ft³
- or 8.34 lbs = 1 gal

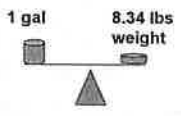

- What is the relationship between the two?
- 1 ft³ = 7.48 gals x $\frac{8.34 \text{ lbs}}{\text{gals}}$
- 1 ft³ = 62.4 lbs

40

Gallons to Pounds Example

8.34 LBS / GAL

Determine Pounds of Water in a 587,000 Gallon Tank

Gallons of Water x 8.34 = Pounds of Water

$$587,000 \times 8.34 = \text{Pounds of Water}$$

$$= 4,895,580 \text{ Pounds}$$

How many millions of pounds is?

$$4,895,580 / 1,000,000 = 4.9 \text{ Million Pounds of Water}$$

41

If 1 acre equals 43,560 ft²,
what is 1 acre-ft equal to?



- 1 acre = 43,560 ft²
- 1 acre x ft = 43,560 ft² x ft = 43,560 ft³


How many gallons of water will a 2.0 acre-ft basin hold?

- 1 acre-ft = 325,828 gal
- 2.0 acre-ft = 2.0 x 325,828 gal
= 651,656 gals or 0.65 MG

42

Detention Time Calculation

$$\text{DETENTION TIME} = \frac{\text{TANK CAP. (GAL.)}}{\text{RATE OF FLOW (GAL/TIME)}}$$

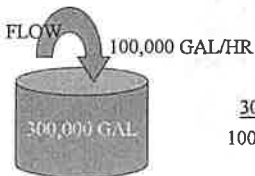


$$\frac{300,000 \text{ GAL}}{100,000 \text{ GAL/HR}} = 3 \text{ HOURS}$$

43

Detention Time Calculation

WHAT IS THE DETENTION TIME IN HOURS?

$$\text{DETENTION TIME} = \frac{\text{TANK CAP. (GAL.)}}{\text{RATE OF FLOW (GAL/TIME)}}$$

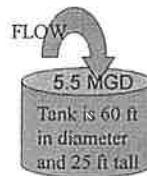

$$= \frac{.785 \times 60\text{ft} \times 60\text{ft} \times 25\text{ft} \times 7.48\text{gal/ft}^3}{5,500,000 \text{ gal/day}}$$

$$= .096 \text{ Days}$$

$$= .096 \text{ Days} \times 24 \text{ hours/day}$$

$$= 2.3 \text{ hours}$$

44

Detention Time Calculation



What is the detention time in minutes for a 6 inch water main, 1/2 mile long with a flow of 15 cfm?

$$\text{Detention Time (days)} = \frac{\text{Volume, gallons}}{\text{Flow, gpd}}$$

$$\text{Detention Time (min)} = \frac{\text{Volume, cu ft}}{\text{Flow, cfm}}$$

$$\begin{aligned} \text{Volume, ft}^3 &= .785 \times \text{Diameter}^2 \times \text{Length} \\ &= .785 \times .5^2 \times 2640 \\ &= 518 \text{ ft}^3 \end{aligned}$$

$$\text{DT (min)} = \frac{518 \text{ ft}^3}{15 \text{ cfm}} = 34.5 \text{ minutes}$$

45

Chemical Feed

$$\text{Feed lbs/day} = \text{Flow (MGD)} \times \text{Dose (mg/l)} \times 8.34 \text{ (lbs/gal)}$$

$$\text{Dose (mg/l)} = \frac{\text{Feed lbs/day}}{\text{Flow (MGD)} \times 8.34 \text{ (lbs/gal)}}$$

$$\text{Flow (MGD)} = \frac{\text{Feed lbs/day}}{\text{Dose (mg/l)} \times 8.34 \text{ (lbs/gal)}}$$

46

Raw water is flowing into a plant at a rate of 750,000 gallons per day and is prechlorinated at 5mg/l. How many pounds of chlorine are used per day?

$$\text{Feed lbs/day} = \text{Flow (MGD)} \times \text{Dose (mg/l)} \times 8.34 \text{ (lbs/gal)}$$

$$\text{Dose} = 5 \text{ mg/l}$$

$$\text{Flow} = 750,000 \text{ gpd} = \frac{750,000 \text{ gal/day}}{1,000,000} = .75 \text{ MGD}$$


$$\begin{aligned} \text{Chlorine feed lbs/day} &= 5 \text{ mg/l} \times .75 \text{ MGD} \times 8.34 \text{ lbs/gal} \\ &= 31.3 \text{ lbs/day} \end{aligned}$$

Is there another way of looking at this?

47

Chemical Dose Wheel

$$\text{Feed} = \text{Flow} \times \text{Dose} \times 8.34$$

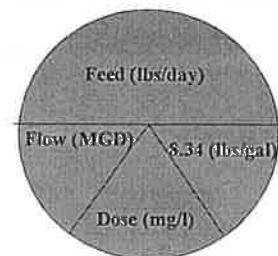

48

Converting Percent to mg/l

- Percent concentration is a percent of 1,000,000 or parts per million (PPM)
 - Thus 1% is equal to 0.01 and therefore
 $0.01 \times 1,000,000 = 10,000 \text{ mg/l}$
 - Hence, 1% = 10,000 mg/l
- Concentration may be referred to as dosage
 - Where 1 ppm = 1 mg/l
- Example: What is the concentration in mg/l of 2.89%?

2.89	Conversion Factor	28,900
%	10,000	mg/l

49

Concentration of Chemicals

Concentration of Chemical = PPM = mg/l

PPM = Pounds of Chemical Added to M lbs of Water

If 10 pounds of chemical are added to 1,567,066 pounds of water. What is Concentration in PPM and mg/l?

First, convert 1,567,066 lbs to M lbs = 1.6 M lbs of water

$$\frac{10 \text{ lbs}}{1.6 \text{ M lbs}} = 6.25 \text{ PPM or } 6.25 \text{ mg/l}$$

50

Example

- In preparing a standard reagent, you are to weigh out 15 grams and dilute to 1 liter with demineralized water. How many ml of demineralized water will you have to add to produce the desired concentration if you ONLY weighed 12.47 grams?

12.47 grams = $\frac{X}{15 \text{ grams}} \times 1 \text{ liter}$


$X = (12.47 \times 1) / 15 = 0.83 \text{ L}$

0.83	Conversion Factor	830
L	1,000	ml

51

Chemical Dosing Example

Feed = Flow x Dose x 8.34

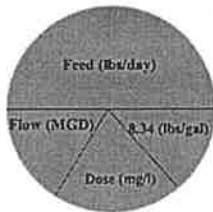

Dry Alum dose from a Jar Test has been determined to be 10 mg/l. Determine the setting on the alum feeder in pounds per day for flow of 3 MGD.

Feeder Setting (lbs/day) = Flow (MGD) x Dose (mg/l) x 8.34 (lbs/gal)

Feeder Setting = 3 MGD x 10 mg/l x 8.34 lbs/gal


Feeder Setting = 250.2 lbs/day

Cover the Variable Desired
Divide Top by Bottom or Multiply

52

Fluoridation Example

- A flow of 4 MGD is to be treated with a 20% solution of hydrofluosilicic acid which contains a fluoride purity of 79.2%. The water to be treated contains no fluoride and the desired fluoride concentration is 1.8 mg/l. Assume the hydrofluosilicic acid weighs 9.8 lbs per gallon. What should be the feed rate of hydrofluosilicic acid? Calculate the feed rate in lbs/day and gal/day.

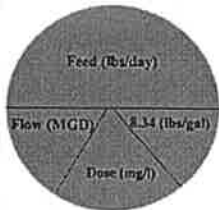

$$\text{Feed} = \text{Flow} \times \text{Dose} \times 8.34$$

Note: In this problem the dose quality has to adjusted. It comes from a 20% solution and is only 79.2% pure.

53

Fluoridation Example

- A flow of 4 MGD is to be treated with a 20% solution of hydrofluosilicic acid which contains a fluoride purity of 79.2%. The water to be treated contains no fluoride and the desired fluoride concentration is 1.8 mg/l. Assume the hydrofluosilicic acid weighs 9.8 lbs per gallon. What should be the feed rate of hydrofluosilicic acid? Calculate the feed rate.

$$\text{Feed (lbs/day)} = \frac{\text{Flow} \times \text{Dose} \times 8.34}{(\text{Acid solution}) \times (\text{purity})}$$

$$\text{Feed Rate} = \frac{4.0 \text{ MGD} \times 1.8 \text{ mg}}{\text{Day}} \times \frac{8.34 \text{ lbs}}{\text{gal}} \times \frac{1}{.2} \times \frac{1}{.792}$$

$$\text{Feed Rate} = 379 \text{ lbs acid/day}$$

What is the feed rate in gallons/day?

$$\text{Feed rate, gal/day} = \frac{\text{feed rate, lbs/day}}{\text{chemical sol'n, lbs/gal}} = \frac{379 \text{ lbs/day}}{9.8 \text{ lbs/gal}} = 39 \text{ gal/day}$$

54

Chemical Dose Calculation Example

A chlorinator is set to feed 12 lbs/day of chlorine to a flow of 0.750 MGD. What is the chlorine dose in mg/l?



$$\text{PARTS PER MILLION} = \text{mg/l}$$

$$\text{mg/l} = \frac{\text{pounds of chemical per day}}{(8.34 \text{ lbs/gal} \times \text{MGD})}$$

$$\text{Dose} = \frac{12 \text{ lbs}}{\text{day}} \times \frac{\text{gal}}{8.34 \text{ lbs}} \times \frac{\text{day}}{.75 \text{ MGD}}$$

$$\text{Dose} = 1.9 \text{ PPM} = 1.9 \text{ mg/l}$$

55

Determining Height of Water in Tank with Pressure Gauge


From conversion table 1 psi = 2.31 feet

(this means one pound per square inch of pressure will raise water 2.31 feet)

A pressure gauge is two feet off the ground and has a reading 20 psi, how high will the water be raised?

$$20 \text{ psi} \times 2.31 = 46.2 \text{ feet of head}$$

And about 48 ft from the ground

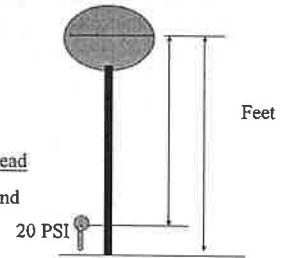

56

Temperature Conversions

- Degrees Celsius = $[(^{\circ}\text{F} - 32)(0.555)]$ or
- Degrees Celsius = $\frac{(^{\circ}\text{F} - 32)}{1.8}$

- Degrees Fahrenheit = $[(^{\circ}\text{C})(1.8) + 32]$

57

Temperature Conversions

Convert 90°F to Celsius:

- $^{\circ}\text{C} = [(90 - 32)(0.555)] = 32.2^{\circ}$
- $^{\circ}\text{C} = \frac{(90 - 32)}{1.8} = 32.2^{\circ}$

Convert 20°C to Fahrenheit

- $^{\circ}\text{F} = [(20)(1.8) + 32] = 68^{\circ}$

58

